

Windows Special Keys - Toshiba PSPA3C-SD402E User Manual

User manual

 
1
2
3
4
5
6
7
8
9
10
11
12
13
14
Table Of Contents
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172



•

Table of Contents

-

Troubleshooting

•

Bookmarks



Fn + F6

Fn + F7

Fn + F8

Fn + F9



Fn + Space



Fn + 1



Fn + 2

Before using Fn+1 and Fn+2, you must install the TOSHIBA Zooming Utility. The Utility only supports the following application windows: Microsoft Internet Explorer, Microsoft Office, Windows Media Player, Adobe Reader and the icons on the desktop.



Windows special keys

The keyboard provides two keys that have special functions in Windows XP. One activates the Start menu and the other has the same function as the secondary mouse button.

This key activates the Windows XP Start menu.

This key has the same function as the secondary mouse button.

User's Manual

Brightness Down

Brightness Up

Wireless Device Controls Pressing this hot key

allows you to switch between active wireless devices. Only works if the wireless switch has already been turned on.

Touch Pad On/Off

Change Resolution Cycles sequentially from the current resolution to 800x600 to 2048x1536 and back again to the original resolution.

Zoom Out To reduce the icon size on the desktop or the application window, press the 1 key while holding down the Fn key.

Zoom In To enlarge the icon size on the desktop or the application window, press the 2 key while holding down the Fn key.

The Keyboard

5-3

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
88
89
90
91
92
93
94
95

Related Manuals for Toshiba PSPA3C-SD402E

[Laptop Toshiba Satellite P100 Series Maintenance Manual](#)

Pc (314 pages)

[Laptop Toshiba Satellite P100 Series Maintenance Manual](#)

(311 pages)

[Laptop Toshiba P105 S6197 - Satellite - Core 2 Duo 1.6 GHz User Manual](#)

Toshiba online users guide for satellite p105 (280 pages)

[Laptop Toshiba P100/P105 User Manual](#)

Toshiba satellite p100/p105 series user's guide (280 pages)

[Laptop Toshiba P100-ST9732 User Manual](#)

P100-st9732 user's guide (278 pages)

[Laptop Toshiba P105-S9337 User Manual](#)

P105-s9337 user's guide (278 pages)

[Laptop Toshiba P100-ST7211 User Manual](#)

P100-st7211 user's guide (275 pages)

[Laptop Toshiba P100-ST1072 User Manual](#)

P100-st1072 user's guide (237 pages)

[Laptop Toshiba Satellite P100 Series User Manual](#)

(196 pages)

[Camcorder Toshiba PA3943U-1CAM Camileo P100 User Manual](#)

Pa3943u-1cam camileo p100 user's guide (146 pages)

[Laptop Toshiba Satellite P100/P105Series Resource Manual](#)

Toshiba laptop pc user's guide (72 pages)

[Laptop Toshiba Satellite P100 Specifications](#)

Toshiba satellite p100: specifications (2 pages)

[Laptop Toshiba P25-S477 User Manual](#)

P25-s477 user's guide (232 pages)

[Laptop Toshiba P205-S6277 User Manual](#)

P205-s6277 user's guide (242 pages)

[Laptop Toshiba Satellite P20-8PW User Manual](#)

Toshiba satellite p20-8pw: user guide (142 pages)

[Laptop Toshiba PSPCDC-03H00C User Manual](#)

User manual (185 pages)

Related Content for Toshiba PSPA3C-SD402E

[Satellite A660D Series Windows Special Keys](#)

[Toshiba Satellite A660D Series](#)

[Satellite L635 Series Windows Special Keys](#)

[Toshiba Satellite L635 Series](#)

[Satellite C660 Series Windows Special Keys](#)

Toshiba Satellite C660 Series

[Satellite Pro L450 Series Windows Special Keys](#)

Toshiba Satellite Pro L450 Series

[Satellite L650D Series Windows Special Keys](#)

Toshiba Satellite L650D Series

[Satellite Pro A300D Series Windows Special Keys](#)

Toshiba Satellite Pro A300D Series

[Portege 2010 Windows Special Keys](#)

TOSHIBA Portege 2010

[NB100 Series Special Windows ® Keys](#)

Toshiba NB100 Series

This manual is also suitable for:

[PspaaU-01200sPspadc-ma605cPspagu-00j00xP100](#)