

Chapter 5 The Keyboard; Typewriter Keys - Toshiba PSPCDC-03H00C User Manual

User manual

 
| |
|-------------------|
| 1 |
| 2 |
| 3 |
| 4 |
| 5 |
| 6 |
| 7 |
| 8 |
| 9 |
| 10 |
| 11 |
| 12 |
| 13 |
| 14 |
| 15 |
| Table Of Contents |
| 16 |
| 17 |

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185



•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks



The Keyboard

The number of keys on your keyboard depends on which country/region's keyboard layout your computer is configured with. Keyboards for numerous languages are available.

There are five types of keys: typewriter keys, function keys, soft keys, Windows

Typewriter keys

The typewriter keys produce the upper- and lower-case letters, numbers, punctuation marks, and special symbols that appear on the screen.

There are some differences, however, between using a typewriter and using a computer keyboard:



Letters and numbers produced in computer text vary in width. Spaces, which are created by a "space character," may also vary depending on line justification and other factors.



The lowercase l (el) and the number 1 (one) are not interchangeable on computers as they are on a typewriter.



The uppercase O (oh) and the 0 (zero) are not interchangeable.



The Caps Lock function key locks only the alphabetic characters in uppercase while the shift lock on a typewriter places all keys in the shifted position.



The Shift keys, the Tab key, and the BackSpace key perform the same function as their typewriter counterparts but also have special computer functions.

User's Manual

®

special keys, and cursor control keys.

The Keyboard

Chapter 5

5-1

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1

...

101

102

103

104

Related Manuals for Toshiba PSPCDC-03H00C

[Laptop Toshiba P300 User Manual](#)

Notebook computer (199 pages)

[Laptop Toshiba P15-S4091 User Manual](#)

P15-s4091 user's guide (240 pages)

[Laptop Toshiba P25-S477 User Manual](#)

P25-s477 user's guide (232 pages)

[Laptop Toshiba P25-S509 User Manual](#)

P25-s509 user's guide (230 pages)

[Laptop Toshiba P30-S6362ST User Manual](#)

P30-s6362st user's guide (230 pages)

[Laptop Toshiba P100-ST1072 User Manual](#)

P100-st1072 user's guide (237 pages)

[Laptop Toshiba P100-ST7211 User Manual](#)

P100-st7211 user's guide (275 pages)

[Laptop Toshiba PSPB3U-01V00L Brochure](#)

Brochure (2 pages)

[Laptop Toshiba P205-S6277 User Manual](#)

P205-s6277 user's guide (242 pages)

[Laptop Toshiba P300-ST3014 User Manual](#)

P300-st3014 user's guide (231 pages)

[Laptop Toshiba P500-ST5801 User Manual](#)

P500-st5801 user's guide (254 pages)

[Laptop Toshiba Satellite P30-132 User Manual](#)

Toshiba satellite p30-132: user guide (165 pages)

[Laptop Toshiba Satellite P20-8PW User Manual](#)

Toshiba satellite p20-8pw: user guide (142 pages)

[Laptop Toshiba PSPA3C-SD402E User Manual](#)

User manual (172 pages)

[Laptop Toshiba PSPB0U-00W008 User Manual](#)

User manual (175 pages)

[Laptop Toshiba Satellite P500-BT2G22 Resource Manual](#)

Toshiba satellite p500-bt2g22: reference guide (60 pages)

Related Content for Toshiba PSPCDC-03H00C

[Satellite Pro R50-C Series The Keyboard](#)

Toshiba Satellite Pro R50-C Series

[Satellite L40-C Series Keyboard Shortcuts](#)

Toshiba Satellite L40-C Series

[PORTEGE R35-C The Keyboard](#)

Toshiba PORTEGE R35-C

[Satellite U930 Series The Keyboard](#)

Toshiba Satellite U930 Series

[Tecra A40 C Series Keyboard Shortcuts](#)

Toshiba Tecra A40 C Series

[Satellite Radius 15 P50W-C The Keyboard](#)

Toshiba Satellite Radius 15 P50W-C

[PT930 Keyboard Indicators](#)

Toshiba PT930

[Satellite Pro R50-D Series The Keyboard](#)

Toshiba Satellite Pro R50-D Series

This manual is also suitable for:

[Pspccc-06001cP300 seriesP300d series](#)