Battery Charging Notice; Monitoring Battery Capacity - Toshiba PSPCDC-03H00C User Manual

User manual

```
1
```

Table Of Contents

168			
169			
170			
171			
172			
173			
174			
175			
176			
177			
178			
179			
180			
181			
182			
183			
184			
185			

Table of Contents









Battery charging notice The battery may not charge right away under the following conditions: The battery is extremely hot or cold. If the battery is extremely hot, it might not charge at all. To ensure the battery charges to its full capacity, charge the battery at room temperature of 10° to 30°C (50° to 88°F). The battery is nearly completely discharged. Leave the AC adaptor connected for a few minutes and the battery should begin charging.

The Battery indicator may show a rapid decrease in battery operating time when you try to charge a battery under the following conditions:



The battery has not been used for a long time.



The battery has completely discharged and been left in the computer for a long time.



A cool battery is installed in a warm computer.

In such case, follow the steps below.

- 1. Fully discharge the battery by leaving it in the computer with the power on until the power automatically shuts off.
- 2. Plug in the AC adaptor.
- 3. Charge the battery until the Battery indicator glows blue.

 Repeat these steps two or three times until the battery recovers normal capacity.

Leaving the AC adaptor connected will shorten battery life. At least once a month, run the computer on battery power until the battery is fully discharged, then recharge the battery.

Monitoring battery capacity

Remaining battery power can be monitored using the following methods.



Clicking the battery icon on the task bar



Via the Windows Mobility Center window



Wait at least 16 seconds after turning on the computer before trying to monitor the remaining operating time. The computer needs this time to check the battery's remaining capacity and to calculate the remaining operating time, based on the current power consumption rate and remaining batter, capacity. The actual remaining operating time may differ slightly from the calculated time.



With repeated discharges and recharges, the battery's capacity will gradually decrease. Therefore, an often used, older battery will not operate for as long as a new battery even when both are fully charged.

User's Manual

Power and Power-Up Modes

6-8

Table of Contents

Related Manuals for Toshiba PSPCDC-03H00C

Laptop Toshiba P300 User Manual

Notebook computer (199 pages)

Laptop Toshiba P15-S4091 User Manual

P15-s4091 user's guide (240 pages)

Laptop Toshiba P25-S477 User Manual

P25-s477 user's guide (232 pages)

Laptop Toshiba P25-S509 User Manual

P25-s509 user's guide (230 pages)

Laptop Toshiba P30-S6362ST User Manual

P30-s6362st user's guide (230 pages)

Laptop Toshiba P100-ST1072 User Manual

P100-st1072 user's guide (237 pages)

Laptop Toshiba P100-ST7211 User Manual

P100-st7211 user's guide (275 pages)

Laptop Toshiba PSPB3U-01V00L Brochure

Brochure (2 pages)

Laptop Toshiba P205-S6277 User Manual

P205-s6277 user's guide (242 pages)

Laptop Toshiba P300-ST3014 User Manual

P300-st3014 user's guide (231 pages)

Laptop Toshiba P500-ST5801 User Manual

P500-st5801 user's guide (254 pages)

Laptop Toshiba Satellite P30-132 User Manual

Toshiba satellite p30-132: user guide (165 pages)

Laptop Toshiba Satellite P20-8PW User Manual

Toshiba satellite p20-8pw: user guide (142 pages)

Laptop Toshiba PSPA3C-SD402E User Manual

User manual (172 pages)

Laptop Toshiba PSPB0U-00W008 User Manual

User manual (175 pages)

Laptop Toshiba Satellite P500-BT2G22 Resource Manual

Toshiba satellite p500-bt2g22: reference guide (60 pages)

Related Content for Toshiba PSPCDC-03H00C

Satellite L500 Battery Charging Notice

Toshiba Satellite L500

Satellite Pro R50-B Series Battery Charging Notice

Toshiba Satellite Pro R50-B Series

C70-B Battery Charging Notice

Toshiba C70-B

C70-C Battery Charging Notice

Toshiba C70-C

Satellite S50-C Series Battery Charging Notice

Toshiba Satellite S50-C Series

Satellite Radius 14 L40W-C Battery Charging Notice

Toshiba Satellite Radius 14 L40W-C

L70-C Battery Charging Notice

Toshiba L70-C

Satellite C40-B Battery Charging Notice

Toshiba Satellite C40-B

This manual is also suitable for:

Pspccc-06001cP300 seriesP300d series