

Fingerprint Sensor - Toshiba PSPCDC-03H00C User Manual

User manual

 
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
Table Of Contents
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185



•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks



Fingerprint sensor

Problem

Reading of the fingerprint was not successful



The fingerprint cannot be read due to injuries to the finger

Fingerprint Pre-OS feature or Single Sign

On feature cannot be enabled

Fingerprint Pre-OS feature does not work

ExpressCard

Refer also to Chapter 8, Problem

ExpressCard error occurs

User's Manual

Procedure

Please try again using the correct posture. Refer to

Using the fingerprint sensor (FingerPrint sensor is provided with some models)

Chapter 4,

Operating

Try the recognition process again using another enrolled finger.

Try the recognition process again using another enrolled finger.

If fingerprints from all the enrolled fingers cannot be read, please logon by using the keyboard to input the password for the time being.

If problems persist, contact your dealer.

Please use TOSHIBA HW Setup to register the User Password if it was not registered.

Make sure you have enroll finger in windows account.

Set the User Password by using TOSHIBA HW Setup and restart the system.

Make sure place a checkmark in "Enable Pre-OS Fingerprint Authentication" on the TrueSuite Access Manager setting.

Optional

Devices.

Procedure

Reset the ExpressCard to make sure it is firmly connected.

Make sure the connection between the external device and the card is firm.

Check the card's documentation.

If problems persist, contact your dealer.

Troubleshooting

in

Basics.

9-16

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1

...

152

153

154

155

Related Manuals for Toshiba PSPCDC-03H00C

[Laptop Toshiba P300 User Manual](#)

Notebook computer (199 pages)

[Laptop Toshiba P15-S4091 User Manual](#)

P15-s4091 user's guide (240 pages)

[Laptop Toshiba P25-S477 User Manual](#)

P25-s477 user's guide (232 pages)

[Laptop Toshiba P25-S509 User Manual](#)

P25-s509 user's guide (230 pages)

[Laptop Toshiba P30-S6362ST User Manual](#)

P30-s6362st user's guide (230 pages)

[Laptop Toshiba P100-ST1072 User Manual](#)

P100-st1072 user's guide (237 pages)

[Laptop Toshiba P100-ST7211 User Manual](#)

P100-st7211 user's guide (275 pages)

[Laptop Toshiba PSPB3U-01V00L Brochure](#)

Brochure (2 pages)

[Laptop Toshiba P205-S6277 User Manual](#)

P205-s6277 user's guide (242 pages)

[Laptop Toshiba P300-ST3014 User Manual](#)

P300-st3014 user's guide (231 pages)

[Laptop Toshiba P500-ST5801 User Manual](#)

P500-st5801 user's guide (254 pages)

[Laptop Toshiba Satellite P30-132 User Manual](#)

Toshiba satellite p30-132: user guide (165 pages)

[Laptop Toshiba Satellite P20-8PW User Manual](#)

Toshiba satellite p20-8pw: user guide (142 pages)

[Laptop Toshiba PSPA3C-SD402E User Manual](#)

User manual (172 pages)

[Laptop Toshiba PSPB0U-00W008 User Manual](#)

User manual (175 pages)

[Laptop Toshiba Satellite P500-BT2G22 Resource Manual](#)

Toshiba satellite p500-bt2g22: reference guide (60 pages)

Related Content for Toshiba PSPCDC-03H00C

[PORTEGE R30-D Series Using The Fingerprint Sensor](#)

Toshiba PORTEGE R30-D Series

[TECRA A50-E Using The Fingerprint Sensor](#)

Toshiba TECRA A50-E

[Satellite P5001 Using The Fingerprint Sensor](#)

Toshiba Satellite P5001

[P870 Using The Fingerprint Sensor](#)

Toshiba P870

[Satellite Pro A30-C Using The Fingerprint Sensor](#)

Toshiba Satellite Pro A30-C

[PORTEGE X20W-E Using The Fingerprint Sensor](#)

Toshiba PORTEGE X20W-E

[TECRA A50-C Using The Fingerprint Sensor](#)

Toshiba TECRA A50-C

[PORTEGE M400 Fingerprint Sensor Troubleshooting](#)

Toshiba PORTEGE M400

This manual is also suitable for:

[Pspccc-06001cP300 seriesP300d series](#)