

Remote Controller (Provided With Some Models) - Toshiba PSPCDC-03H00C User Manual

User manual

 
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
Table Of Contents
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185



•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks



Remote controller (Provided with some models)

A remote controller, which is provided with some models, enables you to perform some functions of your computer from a distant location.

You can use your remote controller with Media Center to play CDs, DVDs and videos, to view pictures.

The remote controller helps you to control the playback of a movie through Media Center.

Using the remote controller, you can:



Navigate and control all Media Center windows.

Control the video.

Place the computer in and out of Sleep mode.

Slim size remote controller

CD/DVD button

Brightness down

Brightness up

User's Manual

CD/DVD

Button

DVD Menu

Volume +

Volume -

OK

Mute

Back

Start

Rewind

Replay

Press this button to launch an application program that allows Windows Media Player/DVD Video Player.

Decreases the computer's display panel brightness in individual steps.

Increases the computer's display panel brightness in individual steps.

LCD Brightness

LCD

Down

Brightness Up

Stop

The Grand Tour


Power

LED On/Off

Arrows

More Information

Fast Forward

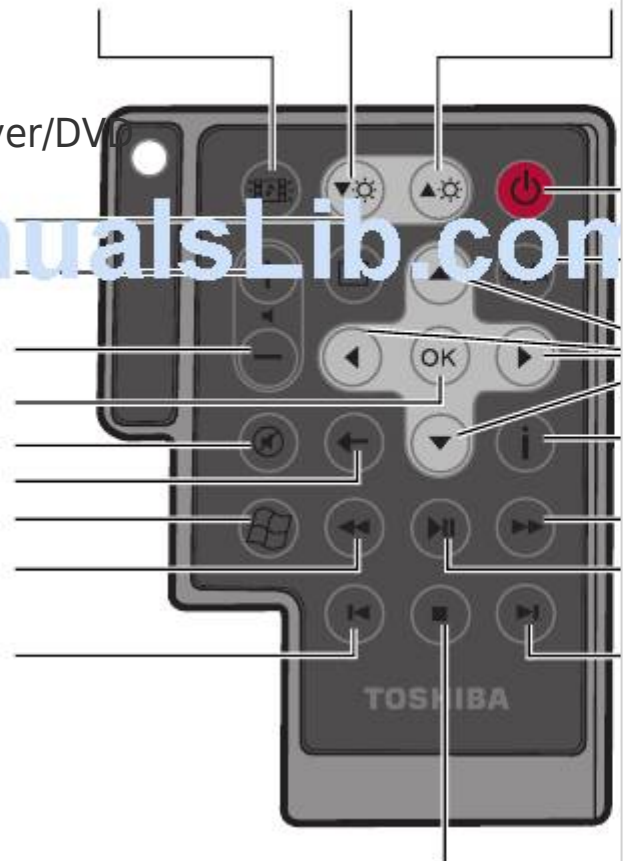

[Paly/Pause](#)

[Skip](#)

[2-12](#)

[Table of Contents](#)

[Previous Page](#)

[Next Page](#)

1
...
45
46
47
48
49
50
51
52

Related Manuals for Toshiba PSPCDC-03H00C

[Laptop Toshiba P300 User Manual](#)

Notebook computer (199 pages)

[Laptop Toshiba P15-S4091 User Manual](#)

P15-s4091 user's guide (240 pages)

[Laptop Toshiba P25-S477 User Manual](#)

P25-s477 user's guide (232 pages)

[Laptop Toshiba P25-S509 User Manual](#)

P25-s509 user's guide (230 pages)

[Laptop Toshiba P30-S6362ST User Manual](#)

P30-s6362st user's guide (230 pages)

[Laptop Toshiba P100-ST1072 User Manual](#)

P100-st1072 user's guide (237 pages)

[Laptop Toshiba P100-ST7211 User Manual](#)

P100-st7211 user's guide (275 pages)

[Laptop Toshiba PSPB3U-01V00L Brochure](#)

Brochure (2 pages)

[Laptop Toshiba P205-S6277 User Manual](#)

P205-s6277 user's guide (242 pages)

[Laptop Toshiba P300-ST3014 User Manual](#)

P300-st3014 user's guide (231 pages)

[Laptop Toshiba P500-ST5801 User Manual](#)

P500-st5801 user's guide (254 pages)

[Laptop Toshiba Satellite P30-132 User Manual](#)

Toshiba satellite p30-132: user guide (165 pages)

[Laptop Toshiba Satellite P20-8PW User Manual](#)

Toshiba satellite p20-8pw: user guide (142 pages)

[Laptop Toshiba PSPA3C-SD402E User Manual](#)

User manual (172 pages)

[Laptop Toshiba PSPB0U-00W008 User Manual](#)

User manual (175 pages)

[Laptop Toshiba Satellite P500-BT2G22 Resource Manual](#)

Toshiba satellite p500-bt2g22: reference guide (60 pages)

Related Content for Toshiba PSPCDC-03H00C

[Portege M400 Slice Expansion Battery \(Provided With Some Models, Or Option\)](#)

Toshiba Portege M400

[Satellite M200 Using The Web Camera\(Built-In Web Camera Is Provided With Some Models.\)](#)

Toshiba Satellite M200

[Satellite A200 Av Button Function \(Provided With Some Models\)](#)

Toshiba Satellite A200

[A100 Av Button Function \(Provided With Some Models\)](#)

Toshiba A100

[Satellite A210 Series Dual Mode Pad Button Function \(Dual Mode Pad Is Provided With Some Models\)](#)

Toshiba Satellite A210 Series

[Satellite A200 Series Dual Mode Pad Button Function \(Dual Mode Pad Is Provided With Some Models\)](#)

TOSHIBA Satellite A200 Series

[A200 series Dual Mode Pad Button Function \(Dual Mode Pad Is Provided With Some Models\)](#)

Toshiba A200 series

[M500 Using The Touchscreen \(Provided With Some Models\)](#)

Toshiba M500

This manual is also suitable for:

[Pspccc-06001cP300 seriesP300d series](#)