



# Windows Logon Via Fingerprint Authentication - Toshiba PSPCDC-03H00C User Manual

User manual



 
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
Table Of Contents
16
17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117

118  
119  
120  
121  
122  
123  
124  
125  
126  
127  
128  
129  
130  
131  
132  
133  
134  
135  
136  
137  
138  
139  
140  
141  
142  
143  
144  
145  
146  
147  
148  
149  
150  
151  
152  
153  
154  
155  
156  
157  
158  
159  
160  
161  
162  
163  
164  
165  
166  
167

168  
169  
170  
171  
172  
173  
174  
175  
176  
177  
178  
179  
180  
181  
182  
183  
184  
185





•

[Table of Contents](#)

- 

Troubleshooting

•

## Bookmarks





3. The Control Center screen is displayed. Click the non-enrolled finger icon above the finger.

4. The Fingerprint Enrollment screen is displayed. Confirm the message and click Next.

5. The Scanning Practice screen is displayed. You can practice swiping your finger. When you have finished practicing swiping your finger, click Next.

6. The Fingerprint Image Capture screen is displayed. Follow the onscreen instructions and use the same finger you have selected under the Control Center to swipe your finger with good images three times for the fingerprint template to be created.

7. In case of finger injury or authentication failure, it is recommended that another fingerprint also be enrolled. The following message will be displayed:

fingerprint images.]  
with another finger.

## Windows logon via fingerprint authentication

In place of the usual Windows logon by ID and password, fingerprint authentication also allows logon to Windows.

This is useful especially when many users are using the PCs, as user selection can be skipped.

### *Fingerprint authentication procedure*

1. Start up the computer.
2. The Logon Authorization screen is displayed. Choose any of the enrolled fingers and swipe the fingerprint on the sensor. If authentication is successful, the user will be logged on to Windows.

*If the fingerprint authentication fails, please logon using the Windows logon password.*

*Please logon using the Windows logon password if the fingerprint authentication failed for five times. To logon using the Windows logon password, enter the Windows logon password at the screen as normal.*

*A warning message will be displayed when authentication is abnormal or authentication is not successful within a fixed duration.*

User's Manual

[We recommended enrolling at least two

Click OK and repeat steps 3, 4, 5 and 6

Operating Basics

[Welcome]

4-6

## Table of Contents

[Previous Page](#)  
[Next Page](#)



1  
...  
69  
70  
71  
72  
73  
74  
75  
76

## Related Manuals for Toshiba PSPCDC-03H00C

### [Laptop Toshiba P300 User Manual](#)

Notebook computer (199 pages)

### [Laptop Toshiba P15-S4091 User Manual](#)

P15-s4091 user's guide (240 pages)

### [Laptop Toshiba P25-S477 User Manual](#)

P25-s477 user's guide (232 pages)

### [Laptop Toshiba P25-S509 User Manual](#)

P25-s509 user's guide (230 pages)

### [Laptop Toshiba P30-S6362ST User Manual](#)

P30-s6362st user's guide (230 pages)

### [Laptop Toshiba P100-ST1072 User Manual](#)

P100-st1072 user's guide (237 pages)

### [Laptop Toshiba P100-ST7211 User Manual](#)

P100-st7211 user's guide (275 pages)

### [Laptop Toshiba PSPB3U-01V00L Brochure](#)

Brochure (2 pages)

### [Laptop Toshiba P205-S6277 User Manual](#)

P205-s6277 user's guide (242 pages)

### [Laptop Toshiba P300-ST3014 User Manual](#)

P300-st3014 user's guide (231 pages)

### [Laptop Toshiba P500-ST5801 User Manual](#)

P500-st5801 user's guide (254 pages)

### [Laptop Toshiba Satellite P30-132 User Manual](#)

Toshiba satellite p30-132: user guide (165 pages)

### [Laptop Toshiba Satellite P20-8PW User Manual](#)

Toshiba satellite p20-8pw: user guide (142 pages)

### [Laptop Toshiba PSPA3C-SD402E User Manual](#)

User manual (172 pages)

### [Laptop Toshiba PSPB0U-00W008 User Manual](#)

User manual (175 pages)

### [Laptop Toshiba Satellite P500-BT2G22 Resource Manual](#)

Toshiba satellite p500-bt2g22: reference guide (60 pages)

## Related Content for Toshiba PSPCDC-03H00C

### [Satellite Pro A50-C Windows Logon Via Fingerprint Authentication](#)

Toshiba Satellite Pro A50-C

### [TECRA Z40T-A series Windows Logon Via Fingerprint Authentication](#)

Toshiba TECRA Z40T-A series

### [P845 Windows Logon Via Fingerprint Authentication](#)

Toshiba P845

[Satellite A300 Windows Logon Via Fingerprint Authentication](#)

Toshiba Satellite A300

[TECRA S5 Windows Logon Via Fingerprint Authentication](#)

Toshiba TECRA S5

[TECRA A10 Satellite Pro S300 Series Windows Logon Via Fingerprint Authentication](#)

Toshiba TECRA A10 Satellite Pro S300 Series

[TECRA A50-A Windows Logon Via Fingerprint Authentication](#)

Toshiba TECRA A50-A

[Z30 Windows Logon Via Fingerprint Authentication](#)

Toshiba Z30

This manual is also suitable for:

[Pspccc-06001cP300 seriesP300d series](#)