

Removing Discs - Toshiba PSPCDC-03H00C User Manual

User manual

 
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
Table Of Contents
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185



•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks



Removing discs

To remove the disc, follow the steps below and refer to the figure.

Do not press the eject button while the computer is accessing the disc drive. Wait for the optical media drive indicator to go out before you open the drawer. Also, if the disc is spinning when you open the drawer, wait for it to stop before you remove it.



1. To pop the drawer partially open, press the eject button. Gently pull the drawer out until it is fully opened.



When the drawer pops open slightly, wait a moment to make sure the



disc has stopped spinning before pulling the drawer fully open.



Turn off the power before you use the eject hole. If the disc is spinning when you open the drawer, the disc could fly off the spindle and cause injury.



2. The disc extends slightly over the sides of the drawer so you can hold it. Hold the disc gently by its edges and lift it out.

3. Push the centre of the drawer to close it. Press gently until it locks into place.

User's Manual

Removing a disc

Operating Basics

4-19



[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
82
83
84
85
86
87
88
89

Related Manuals for Toshiba PSPCDC-03H00C

[Laptop Toshiba P300 User Manual](#)

Notebook computer (199 pages)

[Laptop Toshiba P15-S4091 User Manual](#)

P15-s4091 user's guide (240 pages)

[Laptop Toshiba P25-S477 User Manual](#)

P25-s477 user's guide (232 pages)

[Laptop Toshiba P25-S509 User Manual](#)

P25-s509 user's guide (230 pages)

[Laptop Toshiba P30-S6362ST User Manual](#)

P30-s6362st user's guide (230 pages)

[Laptop Toshiba P100-ST1072 User Manual](#)

P100-st1072 user's guide (237 pages)

[Laptop Toshiba P100-ST7211 User Manual](#)

P100-st7211 user's guide (275 pages)

[Laptop Toshiba PSPB3U-01V00L Brochure](#)

Brochure (2 pages)

[Laptop Toshiba P205-S6277 User Manual](#)

P205-s6277 user's guide (242 pages)

[Laptop Toshiba P300-ST3014 User Manual](#)

P300-st3014 user's guide (231 pages)

[Laptop Toshiba P500-ST5801 User Manual](#)

P500-st5801 user's guide (254 pages)

[Laptop Toshiba Satellite P30-132 User Manual](#)

Toshiba satellite p30-132: user guide (165 pages)

[Laptop Toshiba Satellite P20-8PW User Manual](#)

Toshiba satellite p20-8pw: user guide (142 pages)

[Laptop Toshiba PSPA3C-SD402E User Manual](#)

User manual (172 pages)

[Laptop Toshiba PSPB0U-00W008 User Manual](#)

User manual (175 pages)

[Laptop Toshiba Satellite P500-BT2G22 Resource Manual](#)

Toshiba satellite p500-bt2g22: reference guide (60 pages)

Related Content for Toshiba PSPCDC-03H00C

[Satellite L630 Series Removing Discs](#)

Toshiba Satellite L630 Series

[Satellite P500 Removing Discs](#)

Toshiba Satellite P500

[Satellite L500 Removing Discs](#)

Toshiba Satellite L500

[Satellite Pro R50-B Series Removing Discs](#)

Toshiba Satellite Pro R50-B Series

[C70-B Removing Discs](#)

Toshiba C70-B

[R30-C Removing Discs](#)

Toshiba R30-C

[C70-C Removing Discs](#)

Toshiba C70-C

[L70-C Removing Discs](#)

Toshiba L70-C

This manual is also suitable for:

[Pspccc-06001cP300 seriesP300d series](#)