

Power And The Batteries - Toshiba S300 EZ1514 - Satellite Pro - Core 2 Duo 2.1 GHz User Manual

Toshiba user's guide for satellite s300/s300m (windows vista)

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27

Table Of Contents

28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240
241
242



•

[Table of Contents](#)

•

Bookmarks



182

If Something Goes Wrong

Resolving a hardware conflict

NOTE

Power and the batteries

Your computer receives its power through the AC adaptor and power cord/cable or from the system batteries (battery, optional

secondary battery, and real-time clock (RTC) battery). Power problems are interrelated. For example, a faulty AC adaptor or power cord/cable will neither power the computer nor recharge the batteries.

Here are some typical problems and how to solve them:

The AC power light does not come on when you plug in the AC adaptor and power cord/cable.

Make sure the AC adaptor and power cord/cable are firmly plugged into both the wall outlet and the computer.

If the AC power light still does not come on, check that the wall outlet is working properly by plugging in a lamp or other appliance.

The AC adaptor and power cord/cable work correctly, but the battery will not charge.

The battery does not charge while the computer is consuming full power. Try turning off the computer.

The battery may not be inserted correctly in the computer. Turn off the computer, remove the battery, clean the contacts with a soft dry

cloth (if necessary) and replace the battery. See

["battery from the computer" on page](#)

The battery may be too hot or too cold to charge properly. If you think this is the probable cause, let the battery reach room temperature and try again.

If the battery has completely discharged, it will not begin charging

immediately. Leave the AC adaptor and power cord/cable connected, wait 20 minutes and see if the battery is charging. If the battery light is glowing after 20 minutes, let the computer continue charging the battery for at least another 20 minutes before

you turn on the computer.

If the battery light does not glow after 20 minutes, the battery may have reached the end of its useful life. Try replacing it.

For this model Slot A is the bottom slot. Slot B is the top slot. If only one memory module is to be installed, it must be installed in Slot A.

["Removing the](#)

117.

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1

...

181

182

183

184

Related Manuals for Toshiba S300 EZ1514 - Satellite Pro - Core 2 Duo 2.1 GHz

[Laptop Toshiba Satellite Pro S300 Maintenance Manual](#)

(464 pages)

[Laptop Toshiba S300-EZ1511 User Manual](#)

S300-ez1511 user's guide (251 pages)

[Laptop Toshiba TECRA A10 Series User Manual](#)

(246 pages)

[Laptop Toshiba PTMB3U-00X00X User Manual](#)

User manual (242 pages)

[Laptop Toshiba TECRA A10 Satellite Pro S300 Series User Manual](#)

(242 pages)

[Laptop Toshiba TECRA A10/S10/M10/SATELLITEPRO S300 TECRA S10 User Manual](#)

Vizio mouse user manual (240 pages)

[Laptop Toshiba SATELLITEPRO S300 User Manual](#)

Toshiba laptop user manual (56 pages)

[Laptop Toshiba Satellite Pro S300-EZ1511 Specifications](#)

Toshiba satellite pro s300-ez1511: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-S2503 Specifications](#)

Toshiba satellite pro s300-s2503: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-EZ1512 Specifications](#)

Toshiba satellite pro s300-ez1512: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-EZ1513 Specifications](#)

Toshiba satellite pro s300-ez1513: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-EZ1514 Specifications](#)

Toshiba satellite pro s300-ez1514: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-EZ2501 Specifications](#)

Toshiba satellite pro s300-ez2501: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-EZ2502 Specifications](#)

Toshiba satellite pro s300-ez2502: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-EZ2521 Specifications](#)

Toshiba satellite pro s300-ez2521: specifications (5 pages)

[Laptop Toshiba S300L User Manual](#)

Notebook pc toshiba (202 pages)

Related Content for Toshiba S300 EZ1514 - Satellite Pro - Core 2 Duo 2.1 GHz

[Satellite Click 2 PRO Power And The Batteries](#)

Toshiba Satellite Click 2 PRO

[Satellite CL40 Series Power And The Batteries](#)

Toshiba Satellite CL40 Series

[Satellite E40-A Power And The Batteries](#)

Toshiba Satellite E40-A

[Portege 2010 Power And The Batteries](#)

Toshiba Portege 2010

[Satellite A35 Series Power And The Batteries](#)

Toshiba Satellite A35 Series

[C50 Series Power And The Batteries](#)

Toshiba C50 Series

[Qosmio X70-A series Power And The Batteries](#)

Toshiba Qosmio X70-A series

[Satellite L40 series Power And The Batteries](#)

Toshiba Satellite L40 series

This manual is also suitable for:

[S300 s1001 - satellite pro - core 2 duo 2.4 ghz](#)[S300 ez2501 - satellite pro - core 2 duo 2.2 ghz](#)[S300 ez2502 - satellite pro - core 2 duo 2.26 ghz](#)[S300 s2504 - satellite pro - core 2 duo 2.4 ghz](#)[S300-ez1511 - satellite pro - pentium dual core 2.16 ghz](#)[S300-s2503 - satellite pro - core 2 duo 2.26 ghz](#) ... [Show all](#)