



# Sound System Problems; Pc Card Problems - Toshiba S300 EZ1514 - Satellite Pro - Core 2 Duo 2.1 GHz User Manual

Toshiba user's guide for satellite s300/s300m (windows vista)



1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17  
18

19  
20  
21  
22  
23  
24  
25  
26  
27

Table Of Contents

28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117

118  
119  
120  
121  
122  
123  
124  
125  
126  
127  
128  
129  
130  
131  
132  
133  
134  
135  
136  
137  
138  
139  
140  
141  
142  
143  
144  
145  
146  
147  
148  
149  
150  
151  
152  
153  
154  
155  
156  
157  
158  
159  
160  
161  
162  
163  
164  
165  
166  
167

168  
169  
170  
171  
172  
173  
174  
175  
176  
177  
178  
179  
180  
181  
182  
183  
184  
185  
186  
187  
188  
189  
190  
191  
192  
193  
194  
195  
196  
197  
198  
199  
200  
201  
202  
203  
204  
205  
206  
207  
208  
209  
210  
211  
212  
213  
214  
215  
216  
217



218  
219  
220  
221  
222  
223  
224  
225  
226  
227  
228  
229  
230  
231  
232  
233  
234  
235  
236  
237  
238  
239  
240  
241  
242



•

[Table of Contents](#)

•

## Bookmarks





**The disc will not come out of the drive when you click the eject button on the screen.**

Press the button on the optical drive itself. For additional information see

["disc does not slide out." on page](#)

### **Sound system problems**

**No sound is coming from the computer's speakers.**

Adjust the volume control.

Try pressing

Check that the volume control on the computer is turned up. If you are using external headphones or speakers, check that they are securely connected to your computer.

### **The computer emits a loud, high-pitched noise.**

This is feedback between the microphone and the speakers. It occurs in any sound system when input from a microphone is fed to the speakers and the speaker volume is too loud. Adjust the volume control.

### **PC Card problems**

PC Cards (PCMCIA-compatible) include many types of devices, such as a removable hard disk, additional memory, or a pager. Most PC Card problems occur during installation and setup of new

cards. If you are having trouble getting one or more of these devices

to work together, several sections in this chapter may apply.

Resource conflicts can cause problems when using PC Cards. See ["Resolving a hardware conflict" on page](#)

If your system does not have built-in drivers for your PC Card and the card did not come with an operating system driver, it may not work under the operating system. Contact the manufacturer of the

PC Card for information about using the card under the operating system.

*Resolving a hardware conflict*

["You press the disc eject button, but the drive tray](#)

188.

Fn + Esc

to see if volume mute is disabled.

**If Something Goes Wrong**

179.

189

---

[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)



1

...

188

189

190

191

## Related Manuals for Toshiba S300 EZ1514 - Satellite Pro - Core 2 Duo 2.1 GHz

[Laptop Toshiba Satellite Pro S300 Maintenance Manual](#)

(464 pages)

[Laptop Toshiba S300-EZ1511 User Manual](#)

S300-ez1511 user's guide (251 pages)

[Laptop Toshiba TECRA A10 Series User Manual](#)

(246 pages)

[Laptop Toshiba PTMB3U-00X00X User Manual](#)

User manual (242 pages)

[Laptop Toshiba TECRA A10 Satellite Pro S300 Series User Manual](#)

(242 pages)

[Laptop Toshiba TECRA A10/S10/M10/SATELLITEPRO S300 TECRA S10 User Manual](#)

Vizio mouse user manual (240 pages)

[Laptop Toshiba SATELLITEPRO S300 User Manual](#)

Toshiba laptop user manual (56 pages)

[Laptop Toshiba Satellite Pro S300-EZ1511 Specifications](#)

Toshiba satellite pro s300-ez1511: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-S2503 Specifications](#)

Toshiba satellite pro s300-s2503: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-EZ1512 Specifications](#)

Toshiba satellite pro s300-ez1512: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-EZ1513 Specifications](#)

Toshiba satellite pro s300-ez1513: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-EZ1514 Specifications](#)

Toshiba satellite pro s300-ez1514: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-EZ2501 Specifications](#)

Toshiba satellite pro s300-ez2501: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-EZ2502 Specifications](#)

Toshiba satellite pro s300-ez2502: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-EZ2521 Specifications](#)

Toshiba satellite pro s300-ez2521: specifications (5 pages)

[Laptop Toshiba S300L User Manual](#)

Notebook pc toshiba (202 pages)

## Related Content for Toshiba S300 EZ1514 - Satellite Pro - Core 2 Duo 2.1 GHz

[Portege 2010 Sound System Problems](#)

[Toshiba Portege 2010](#)

[Satellite A35 Series Sound System Problems](#)

[Toshiba Satellite A35 Series](#)

[Qosmio X70-A series Sound System Problems](#)

Toshiba Qosmio X70-A series

[Satellite L550 Series Sound System Problems](#)

Toshiba Satellite L550 Series

[TECRA A50 series Sound System Problems](#)

Toshiba TECRA A50 series

[Satellite T210 Series Sound System Problems](#)

Toshiba Satellite T210 Series

[Satellite P200 Series Sound System Problems](#)

Toshiba Satellite P200 Series

[Qosmio X300 Series Sound System Problems](#)

Toshiba Qosmio X300 Series

This manual is also suitable for:

[S300 s1001 - satellite pro - core 2 duo 2.4 ghz](#)[S300 ez2501 - satellite pro - core 2 duo 2.2 ghz](#)[S300 ez2502 - satellite pro - core 2 duo 2.26 ghz](#)[S300 s2504 - satellite pro - core 2 duo 2.4 ghz](#)[S300-ez1511 - satellite pro - pentium dual core 2.16 ghz](#)[S300-s2503 - satellite pro - core 2 duo 2.26 ghz](#) ... [Show all](#)