

Connecting An Optional External Diskette Drive; Turning Off The Computer - Toshiba S300 EZ1514 - Satellite Pro - Core 2 Duo 2.1 GHz User Manual

Toshiba user's guide for satellite s300/s300m (windows vista)

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27

Table Of Contents

 
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240
241
242



•

[Table of Contents](#)

•

Bookmarks



76

 
Getting Started

Connecting an optional external diskette drive

Connecting an optional external diskette drive

Some operations, such as creating a password service diskette, require a diskette drive designed for use with 3.5-inch diskettes.

(Sample Illustration) Optional external USB diskette drive

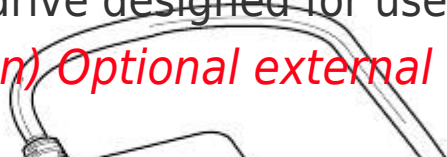

To connect an optional external USB diskette drive, connect the cable to one of the computer's USB ports.

(Sample Illustration) Connecting an drive

 
Turning off the computer

It is a good idea to turn off your computer when you are not using it for a while.

If you are using the computer for the first time, leave the computer plugged into a power source (even though the computer is off) to fully charge the main battery.

Pressing the power button before shutting down the Windows operating system could cause you to lose your work. Make sure the system indicator panel's storage drive light and the drive-in-use light are off. If you turn off the power while a disk/disc is being accessed, you may lose data or damage the disk/disc and/or drive.

optional external USB diskette

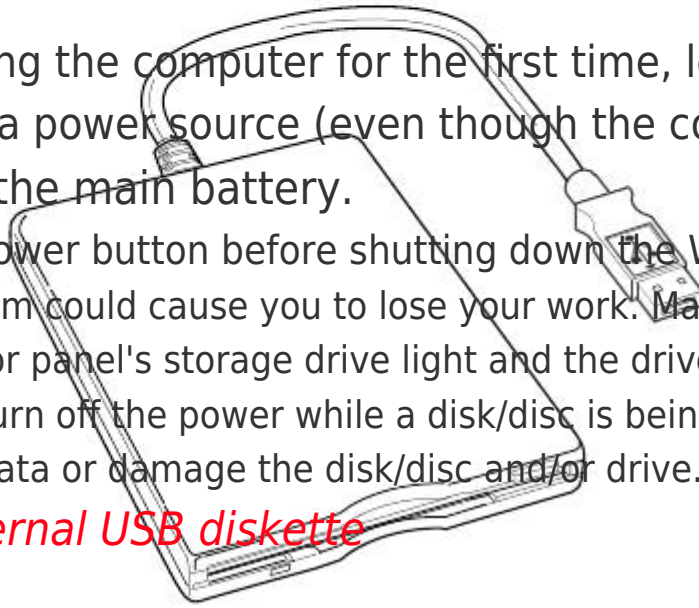

®

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
73
74
75
76
77
78
79
80

Related Manuals for Toshiba S300 EZ1514 - Satellite Pro - Core 2 Duo 2.1 GHz

[Laptop Toshiba Satellite Pro S300 Maintenance Manual](#)

(464 pages)

[Laptop Toshiba S300-EZ1511 User Manual](#)

S300-ez1511 user's guide (251 pages)

[Laptop Toshiba TECRA A10 Series User Manual](#)

(246 pages)

[Laptop Toshiba PTMB3U-00X00X User Manual](#)

User manual (242 pages)

[Laptop Toshiba TECRA A10 Satellite Pro S300 Series User Manual](#)

(242 pages)

[Laptop Toshiba TECRA A10/S10/M10/SATELLITEPRO S300 TECRA S10
User Manual](#)

Vizio mouse user manual (240 pages)

[Laptop Toshiba SATELLITEPRO S300 User Manual](#)

Toshiba laptop user manual (56 pages)

[Laptop Toshiba Satellite Pro S300-EZ1511 Specifications](#)

Toshiba satellite pro s300-ez1511: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-S2503 Specifications](#)

Toshiba satellite pro s300-s2503: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-EZ1512 Specifications](#)

Toshiba satellite pro s300-ez1512: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-EZ1513 Specifications](#)

Toshiba satellite pro s300-ez1513: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-EZ1514 Specifications](#)

Toshiba satellite pro s300-ez1514: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-EZ2501 Specifications](#)

Toshiba satellite pro s300-ez2501: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-EZ2502 Specifications](#)

Toshiba satellite pro s300-ez2502: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-EZ2521 Specifications](#)

Toshiba satellite pro s300-ez2521: specifications (5 pages)

[Laptop Toshiba S300L User Manual](#)

Notebook pc toshiba (202 pages)

Related Content for Toshiba S300 EZ1514 - Satellite Pro - Core 2 Duo 2.1 GHz

[U205-S5002 - Satellite - Core Duo 1.66 GHz Connecting An Optional](#)

[External Diskette Drive](#)

[Toshiba U205-S5002 - Satellite - Core Duo 1.66 GHz](#)

[Portege 2010 Connecting The Optional External Usb Diskette Drive](#)

[Toshiba Portege 2010](#)

[P105 S6197 - Satellite - Core 2 Duo 1.6 GHz Connecting An Optional External Diskette Drive](#)

[Toshiba P105 S6197 - Satellite - Core 2 Duo 1.6 GHz](#)

[R10 S4401 - Tecra - Core 2 Duo 2.26 GHz Connecting An Optional External Diskette Drive](#)

[Toshiba R10 S4401 - Tecra - Core 2 Duo 2.26 GHz](#)

[M45-S165 - Satellite - Celeron M 1.5 GHz Connecting An Optional External Diskette Drive](#)

[Toshiba M45-S165 - Satellite - Celeron M 1.5 GHz](#)

[M45 S169 - Satellite - Celeron M 1.6 GHz Connecting An Optional External Diskette Drive](#)

[Toshiba M45 S169 - Satellite - Celeron M 1.6 GHz](#)

[M115 S1061 - Satellite - Celeron M 1.6 GHz Connecting An Optional External Diskette Drive](#)

[Toshiba M115 S1061 - Satellite - Celeron M 1.6 GHz](#)

[L45-S7423 - Satellite - Pentium Dual Core 1.46 GHz Connecting An Optional External Diskette Drive](#)

[Toshiba L45-S7423 - Satellite - Pentium Dual Core 1.46 GHz](#)

This manual is also suitable for:

[S300 s1001 - satellite pro - core 2 duo 2.4 ghz](#)[S300 ez2501 - satellite pro - core 2 duo 2.2 ghz](#)[S300 ez2502 - satellite pro - core 2 duo 2.26 ghz](#)[S300 s2504 - satellite pro - core 2 duo 2.4 ghz](#)[S300-ez1511 - satellite pro - pentium dual core 2.16 ghz](#)[S300-s2503 - satellite pro - core 2 duo 2.26 ghz](#) ... [Show all](#)