

Table Of Contents - Asus P5Q3 Deluxe WiFi-AP n User Manual

User manual

1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64

•

[Table of Contents](#)

•

Bookmarks



Contents

[Contents](#)

..... iii

[Notices](#)

..... v

[Safety information](#)

..... vi

[About this guide](#)

..... vii

[P5Q3 Deluxe/WiFi-AP@n specifications summary](#) ix

ix

[Chapter 1:](#)

1.1

[Welcome!](#) 1-1

1.2

[Package contents](#) 1-1

1.3

[Special features](#) 1-2

1.3.1

1.3.2

1.3.3

[Chapter 1:](#)

2.1

[Before you proceed](#) 2-1

2.2

[Motherboard overview](#) 2-2

2.2.1

2.2.2

2.2.3

2.2.4

2.3

[Central Processing Unit \(CPU\)](#) 2-5

2.3.1

2.3.2

2.3.3

2.3.4

2.4

[System memory](#) 2-12

2.4.1

2.4.2

2.4.3

2.4.4

2.5	
Expansion slots	2-15
2.5.1	
2.5.2	
2.5.3	
Product introduction	
Product highlights	1-2
ASUS AI Lifestyle unique features	1-4
ASUS Intelligent Performance and Overclocking features	1-8
Hardware information	
Motherboard layout	2-2
Layout contents	2-3
Placement direction	2-4
Screw holes	2-4
Installing the CPU	2-6
Installing the CPU heatsink and fan	2-9
Uninstalling the CPU heatsink and fan	2-10
Installing the optional fans	2-11
Overview	2-12
Memory configurations	2-13
Installing a DIMM	2-14
Removing a DIMM	2-14
Installing an expansion card	2-15
Configuring an expansion card	2-15
Interrupt assignments	2-16

[Previous Page](#)
[Next Page](#)

1
2
3
4
5
6
7

Quick Links:

[P5Q3 Deluxe/Wifi-Ap@N Specifications Summary](#)

[Motherboard Layout](#)

[Motherboard Overview](#)

[System Memory](#)

[Memory Configurations](#)

[Jumpers](#)

[Connectors](#)

Related Manuals for Asus P5Q3 Deluxe WiFi-AP n

[Network Card Asus P5Q3 Deluxe WiFi-AP n User Manual](#)

User manual (44 pages)

[Motherboard Asus P5Q3 Deluxe/WiFi-AP@n User Manual](#)

(190 pages)

[Motherboard Asus P5Q3 - Motherboard - ATX User Manual](#)

User manual (172 pages)

[Motherboard Asus P5Q-E Hardware User Manual](#)

Atx motherboard (192 pages)

[Motherboard Asus P5QL-CM User Manual](#)

Asus computer hardware user manual (60 pages)

[Motherboard Asus P5Q SE R User Manual](#)

User manual (162 pages)

[Motherboard Asus P5QL-VM - DO/CSM Micro ATX Motherboard User Manual](#)

User guide (45 pages)

[Motherboard Asus P5QL-VM EPU Bedienungshandbuch](#)

P5ql-vm epu user manual (66 pages)

[Motherboard Asus P5QPL-AM Quick Start Manual](#)

(21 pages)

[Motherboard Asus P5QLD PRO User Manual](#)

P5qld pro user's manual (148 pages)

[Motherboard Asus P5QPL-VM EPU User Manual](#)

User manual (64 pages)

[Motherboard Asus P5Q - Motherboard - ATX User Manual](#)

User manual (184 pages)

[Motherboard Asus P5Q SE2 User Manual](#)

User manual (64 pages)

[Motherboard Asus P5QL PRO - Motherboard - ATX User Manual](#)

User manual (148 pages)

[Motherboard Asus P5Q PRO Turbo - Motherboard - ATX User Manual](#)

User manual (124 pages)

[Motherboard Asus P5QL Manual](#)

(112 pages)

Related Content for Asus P5Q3 Deluxe WiFi-AP n

[PRIME Z270-K Table Of Contents](#)

Asus PRIME Z270-K

[Z170-P Table Of Contents](#)

Asus Z170-P

[Prime H270-PRO Table Of Contents](#)

Asus Prime H270-PRO

[PRIME Z270-P Table Of Contents](#)

Asus PRIME Z270-P

[PRIME Z370-P Table Of Contents](#)

Asus PRIME Z370-P

[970 PRO GAMING/AURA Table Of Contents](#)

Asus 970 PRO GAMING/AURA

[Pro WS X570-ACE Table Of Contents](#)

asus Pro WS X570-ACE

[PRIME Z390-P Table Of Contents](#)

Asus PRIME Z390-P

This manual is also suitable for:

[P5q3 deluxe/wifi-ap@nPfq3 deluxe/ wi-fi-apan](#)