



# Bios Information; Managing And Updating Your Bios; Asus Update Utility - Asus H61M-A User Manual



1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

 
15

16

17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80



•

•

## Bookmarks







# BIOS information

## 2.1

### Managing and updating your BIOS

Save a copy of the original motherboard BIOS file to a USB flash disk in case you need to restore the BIOS in the future. Copy the original motherboard BIOS using the ASUS Update utility.

#### 2.1.1



# ASUS Update utility

The ASUS Update is a utility that allows you to manage, save, and update the motherboard BIOS in Windows environment.

®

• ASUS Update requires an Internet connection either through a network or an Internet Service Provider (ISP).

• This utility is available in the support DVD that comes with the motherboard package.

## Installing ASUS Update

To install ASUS Update:

Place the support DVD in the optical drive. The Specials menu appears.

- 1.
- 2.

Click the Utilities tab, then click AI Suite II.

- 3.

Follow the onscreen instructions to complete the installation.

Quit all Windows

## Updating the BIOS

To update the BIOS:

- 1.

From the Windows

II X.XX.XX to launch the AI Suite II utility. The AI Suite II Quick Bar appears.

- 2.

Click Update button from the Quick Bar, and click ASUS Update from the popup menu. The ASUS Update main screen appears. From the list, select either of the following methods:

ASUS H61M Series

applications before you update the BIOS using this utility.

®

desktop, click Start > Programs > ASUS > AI Suite II > AI Suite

®



# 2

2-1



---

[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)

1  
...  
38  
39  
40  
41  
42  
43  
44  
45

Quick Links:

[Motherboard Overview](#)

[Motherboard Layout](#)

[Internal Connectors](#)

## Related Manuals for Asus H61M-A

[Motherboard Asus H61M-E Guía De Inicio Rápido](#)

(12 pages)

[Motherboard Asus H61M-E User Manual](#)

(78 pages)

[Motherboard Asus H61M-E Quick Start Manual](#)

(12 pages)

[Motherboard Asus H61M-E Quick Start Manual](#)

(2 pages)

[Motherboard Asus H61M-D User Manual](#)

H61m-d user's manual (42 pages)

[Motherboard Asus H61M-C User Manual](#)

H61m-c user's manual (72 pages)

[Motherboard Asus H61M-C/SI Manual](#)

(36 pages)

[Motherboard Asus H61M-K Quick Start Manual](#)

(2 pages)

[Motherboard Asus H61M-K User Manual](#)

H61m-k user's manual (82 pages)

[Motherboard Asus H61M-CS Manual](#)

(64 pages)

[Motherboard ASUS H61M-G User Manual](#)

Motherboard (64 pages)

[Motherboard ASUS H61M-PRO User Manual](#)

(64 pages)

[Motherboard Asus H61M-PRO Manual](#)

(20 pages)

[Motherboard Asus PRIME H610M-E D4 Manual](#)

(34 pages)

[Motherboard Asus PRIME H610M-F D4 Manual](#)

(30 pages)

[Motherboard Asus PRIME H610M-CS D4 Manual](#)

(30 pages)

## Related Content for Asus H61M-A

[PRIME H610M-E Chapter 2: Bios Information](#)

Asus PRIME H610M-E

[PRIME H610I-PLUS Chapter 2: Bios Information](#)

Asus PRIME H610I-PLUS

[PRIME H370M-PLUS Chapter 2: Bios Information](#)

Asus PRIME H370M-PLUS

[PRIME H510T2-CSM R2.0 Chapter 2: Bios Information](#)

Asus PRIME H510T2-CSM R2.0

[B450M-A/CSM Chapter 2: Bios Information](#)

Asus B450M-A/CSM

[B250M-C PRO Chapter 2 : Bios Information](#)

Asus B250M-C PRO

[AM1M-E Chapter 2: Bios Information](#)

Asus AM1M-E

[EX-H310M-X Chapter 2 Bios Information](#)

Asus EX-H310M-X



This manual is also suitable for:

[H61m-a/usb3H61m-plus](#)