

Monitor Menu; Cpu Temperature / Mb
Temperature [Xxx°C/Xxx°F]; Cpu /
Chassis Fan Speed [Xxxx Rpm] Or
[Ignore] / [N/A] - Asus H61M-A User
Manual

1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

 
15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80



•

•

Bookmarks



2.6

Monitor menu


The Monitor menu displays the system temperature/power status, and allows you to change the fan settings.

Scroll down to display the following items:

2.6.1

CPU Temperature / MB Temperature [xxx°C/xxx°F]

The onboard hardware monitor automatically detects and displays the CPU and motherboard

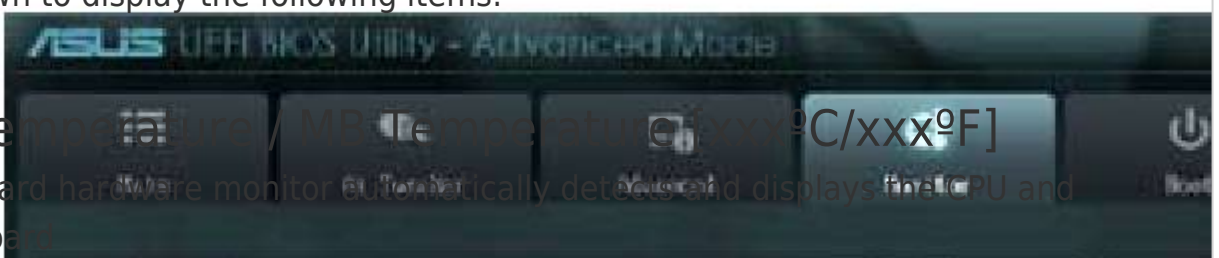

temperatures. Select Ignore if you do not wish to display the detected temperatures.

2.6.2

CPU / Chassis Fan Speed [xxxx RPM] or [Ignore] / [N/A]

The onboard hardware monitor automatically detects and displays the CPU and chassis fan

speeds in rotations per minute (RPM). If the fan is not connected to the motherboard the field

shows N/A. Select ignore if you do not wish to display the detected speed.

2-24

Chapter 2 Getting started



[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
61
62
63
64
65
66
67
68

Quick Links:

[Motherboard Overview](#)

[Motherboard Layout](#)

[Internal Connectors](#)

Related Manuals for Asus H61M-A

[Motherboard Asus H61M-E Guía De Inicio Rápido](#)

(12 pages)

[Motherboard Asus H61M-E User Manual](#)

(78 pages)

[Motherboard Asus H61M-E Quick Start Manual](#)

(12 pages)

[Motherboard Asus H61M-E Quick Start Manual](#)

(2 pages)

[Motherboard Asus H61M-D User Manual](#)

H61m-d user's manual (42 pages)

[Motherboard Asus H61M-C User Manual](#)

H61m-c user's manual (72 pages)

[Motherboard Asus H61M-C/SI Manual](#)

(36 pages)

[Motherboard Asus H61M-K Quick Start Manual](#)

(2 pages)

[Motherboard Asus H61M-K User Manual](#)

H61m-k user's manual (82 pages)

[Motherboard Asus H61M-CS Manual](#)

(64 pages)

[Motherboard ASUS H61M-G User Manual](#)

Motherboard (64 pages)

[Motherboard ASUS H61M-PRO User Manual](#)

(64 pages)

[Motherboard Asus H61M-PRO Manual](#)

(20 pages)

[Motherboard Asus PRIME H610M-E D4 Manual](#)

(34 pages)

[Motherboard Asus PRIME H610M-F D4 Manual](#)

(30 pages)

[Motherboard Asus PRIME H610M-CS D4 Manual](#)

(30 pages)

Related Content for Asus H61M-A

[PRIME X570-PRO Monitor Menu](#)

Asus PRIME X570-PRO

[EX-B660M-V5 D4 Monitor Menu](#)

Asus EX-B660M-V5 D4

[STRIX Z270F GAMING Monitor Menu](#)

Asus STRIX Z270F GAMING

[MAXIMUS VII HERO Monitor Menu](#)

Asus MAXIMUS VII HERO

[AM1M-E Monitor Menu](#)

Asus AM1M-E

[EX-H310M-X Monitor Menu](#)

Asus EX-H310M-X

[STRIX Z270H GAMING Monitor Menu](#)

Asus STRIX Z270H GAMING

[H81M-D R2.0 Monitor Menu](#)

Asus H81M-D R2.0

This manual is also suitable for:

[H61m-a/usb3H61m-plus](#)