

Color Temperature; Resetting Advanced Picture Settings To The Factory Default; Setting The Expert Picture Settings; Test Pattern - Toshiba 39L4300UM User Manual

Integrated high definition led television

1
2
3
4
5
6
7
8
9

Table Of Contents

 
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186



•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks



Color temperature

Picture and Sound (C) *Setting the expert picture*

- 1 **Color temperature**
Press the **SETUP** button.
- 2 **Color temperature**
Select **Picture** > **Advanced Picture Settings** > **Color Temperature** and press the **OK** button.
- 3 **Color temperature**
Select **Color Temperature** and press the **OK** **▼** (arrow) buttons to select **Cool**, **Medium**, or

Select Color Temperature and press the OK button. Press the p / q (arrow) buttons to select Cool, Medium, or Warm.

Color temperature

4 Press the OK button.

5 Press the p / q (arrow) buttons to select the Red Level, Green Level, or Blue Level.
1 Press the **SETUP** button.
2 Select **Picture > Advanced Picture Settings** and press the **OK** button.

6 Press the u (arrow) button.
3 Select **Color Temperature** and press the **OK** button.
7 Press the ▼ (arrow) buttons to select **Cool, Medium, or Warm**.

8 Press the t / u (arrow) buttons to adjust the color level. The adjustment range is -10 (less of selected color) to +10 (more of selected color).
4 Press the **OK** button.
5 Press the ▲/▼ (arrow) buttons to select the **Red Level, or Blue Level**.

9 Press the EXIT button.
6 Press the ► (arrow) button.

NOTE 7 Press the ◀/▶ (arrow) buttons to adjust the color level. The adjustment range is -10 (less of selected color) to +10 (more of selected color).

Resetting advanced picture settings to the factory default
8 Press the **EXIT** button.

Resetting advanced picture settings to the factory default

1 Press the **SETUP** button. This feature is not available in Standard and Movie Mode.

2 Select **Picture > Advanced Picture Settings > Reset**.

3 Press the OK button. A confirmation screen appears.
1 Press the **SETUP** button.
2 Select **Picture > Advanced Picture Settings** and press the **OK** button.

4 Select **Yes**, and then press the **OK** button. A confirmation screen appears.

5 Select **Yes**, and then press the **OK** button.

Setting the expert picture settings

Setting the expert picture settings **Picture and Sound C**

Setting the expert picture

NOTE

Color temperature

Test Pattern

When the test pattern is displayed, you can navigate the Picture

submenus **2** Select **Picture > Advanced Picture Settings**

without removing the image. When you move to a non-Picture

menu, or **3** Select **Color Temperature** and press the **OK**

close the menus, regular video will be restored.

1 Press the **SETUP** button. **4** Press the **OK** button.

2 Press the **▲/▼** (arrow) buttons to select the **Red**

Select **Picture > Expert Picture Settings > Test Pattern** and press

the **OK** button. **6** Press the **▶** (arrow) button.

3 Press the **◀/▶** (arrow) buttons to adjust the color

Press the **p / q** (arrow) buttons to select **On**.

4 The adjustment range is **-10** (less of selected color)

Adjust picture settings. **8** Press the **EXIT** button.

This feature is not available in Standard and Movie mode.

This feature is only available in Standard and Movie mode.

NOTE This feature is not available in Standard and Movie

Setting the expert picture settings

103 **Resetting advanced picture settings to the factory default**

1 Press the **SETUP** button

[Previous Page](#)
[Next Page](#)

1

...

102

103

104

105

Quick Links:

[Connecting the Tv to a Home...](#)

Related Manuals for Toshiba 39L4300UM

[LED TV Toshiba 32L2300UM Resource Manual](#)

Integrated high definition led television (2 pages)

[LED TV TOSHIBA 65L7300U User Manual](#)

(98 pages)

[LED TV TOSHIBA 65L7300U User Manual](#)

(90 pages)

[Keyboard Toshiba 58L7350U User Manual](#)

Wireless keyboard users guide I7300, I7350 series cloud tv (2 pages)

[LED TV Toshiba 50L7300U Resource Manual](#)

Integrated high definition led television (2 pages)

[LED TV Toshiba 39L22U User Manual](#)

Integrated high definition led television (131 pages)

[LED TV Toshiba 23L1350U Resource Manual](#)

Integrated high definition led television (2 pages)

[LED TV Toshiba 39L2300U User Manual](#)

Integrated high definition led television (123 pages)

[LED TV TOSHIBA 50L2300U User Manual](#)

(123 pages)

[LED TV Toshiba 23L2300U Resource Manual](#)

Integrated high definition led television (2 pages)

[LED TV Toshiba 32L4300UC User Manual](#)

Integrated high definition led television (182 pages)

[LED TV Toshiba 23L2300UC Resource Manual](#)

Integrated high definition led television (2 pages)

[LED TV Toshiba Esteem 399 User Manual](#)

Low nox gas fired boiler (48 pages)

[LED TV Toshiba 39L4300 Series Owner's Manual](#)

With android (60 pages)

[LED TV Toshiba 32L3300 Series Owner's Manual](#)

(54 pages)

[LED TV Toshiba 32P2300 Series Owner's Manual](#)

(34 pages)

Related Content for Toshiba 39L4300UM

[32L4300UC Color Temperature](#)

Toshiba 32L4300UC

[58L9300U Color Temperature](#)

Toshiba 58L9300U

[39L2300U Color Temperature](#)

Toshiba 39L2300U

[55L7200U Color Temperature](#)

TOSHIBA 55L7200U

[58L7350U Color Temperature](#)

Toshiba 58L7350U

[39L22U Color Temperature](#)

Toshiba 39L22U

[32L2200U Color Temperature](#)

Toshiba 32L2200U

[50M2U Color Temperature](#)

Toshiba 50M2U

This manual is also suitable for:

[39|4300u58|4300u32|4300u65|7300u50|4300u50|7300u ...](#) [Show all](#)