 


Xonar Audio Center; Xonar Audio Center Gui - Asus Xonar D-Kara User Manual

Pci 5.1 karaoke audio card

1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44



•

[Table of Contents](#)

•

Troubleshooting

•

Bookmarks



6.



Xonar Audio Center

6.1

Xonar Audio Center GUI

 
1.

After driver installation is complete and your computer has been rebooted, you will find the Xonar Audio Center's icon in the system tray on the bottom right-hand corner of the screen. Double click this icon to open the Xonar Audio Center utility.

If the icon does not appear on the system tray, launch the Xonar Audio Center

from the Windows desktop by clicking Start > All Programs > ASUS Xonar D-Kara > Xonar D-Kara Audio Center.

2. _____



The Xonar Audio Center is the Graphical User Interface (GUI) for the Xonar D-Kara driver. You can control the functions and features of the Xonar D-Kara driver on the Xonar Audio Center. The following picture shows a basic overview of the Xonar Audio Center. The following sections of this manual will describe its functions in more detail.

16
e7404_xonarkara.indd 16
ASUS Xonar D-Kara PCI 5.1 Audio Card

7/4/12 3:34:02 PM

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
19
20
21
22
23
24
25
26

Related Manuals for Asus Xonar D-Kara

[Sound Card Asus Xonar D-KARA Quick Start Manual](#)

Pci 5.1 karaoke audio card (136 pages)

[Sound Card Asus Xonar D-KARA Quick Start Manual](#)

(121 pages)

[Sound Card Asus Xonar D-KARA Quick Start Manual](#)

Pci 5.1 karaoke audio card (106 pages)

[PCI Card Asus Xonar D1 Quick Start Manual](#)

Pci audio card (10 pages)

[PCI Card Asus ROG Xonar Phoebus Quick Start Manual](#)

7.1 channel pci express audio card (73 pages)

[PCI Card Asus Xonar DG SI User Manual](#)

Pci 7.1 & headphone amp audio card (52 pages)

[PCI Card Asus XONAR DX Quick Start Manual](#)

Xonar dx quick start guide for english (10 pages)

[PCI Card Asus Hyper M.2 x16 Gen 4 Quick Start Manual](#)

(10 pages)

[PCI Card Asus PCE-AC55BT Quick Start Manual](#)

802.11ac wireless dual-band with bluetooth 4.0 pci-e adapter (for 802.11 a/g/b/n/ac wireless networks) (2 pages)

[PCI Card Asus S370-DL Installation Manual](#)

(8 pages)

[PCI Card Asus PCE-AC56 Quick Start Manual](#)

Dual-band wireless pci-e adapter (for 802.11 a/g/b/n/ac wireless networks) (2 pages)

[PCI Card Asus WL-130g User Manual](#)

Wifi-g 54mbps pci ap/wlan adapter (46 pages)

[PCI Card Asus PCE-N53 User Manual](#)

Wireless dual-band pci-e card (for 802.11 a/b/g/n wireless networks) (35 pages)

[PCI Card Asus DVI-ADD2 Installation Manual](#)

Pci express digital display card (9 pages)

[PCI Card ASUS PCI-SC896 User Manual](#)

2ch. ultra2 pci scsi card (34 pages)

[PCI Card Asus PCI-L101 User Manual](#)

10/100 fast ethernet pci card (28 pages)

Related Content for Asus Xonar D-Kara

[ROG Xonar Phoebus Audio Processing Card View](#)

[Asus ROG Xonar Phoebus](#)

[Xonar D1 Installing The Audio Card Driver](#)

Asus Xonar D1

[PCE-N53 Asus Wlan Control Center](#)

Asus PCE-N53

[Wi-Fi TV Control Center](#)

Asus Wi-Fi TV