



# Asus 22T1E User Manual

T1 series



1	
2	
Table Of Contents	
3	
4	
5	
6	
7	
8	
9	
10	
11	
12	
13	
14	
15	
16	
17	

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36

--

---

•

[Table of Contents](#)

•

Bookmarks

--

## Quick Links

[1 Table of Contents](#)

[2 Rear View](#)

[3 Setting the Monitor](#)

[4 Setting the Television](#)


[5 How to Reconfigure](#)

[6 On-Screen Display \(Osd\) Menu](#)



## 7 Troubleshooting (Faq)

[Download this manual](#)

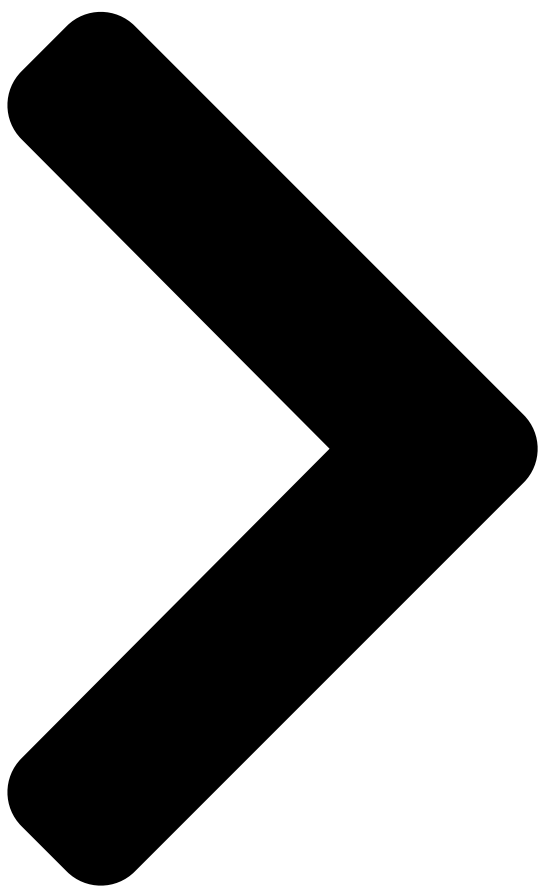

# LCD TV Monitor



## T1 Series

# User's Manual



E

[Table of Contents](#)

[Next Page](#)

1  
2  
3  
4  
5

## Related Manuals for Asus 22T1E

### [Monitor Asus T1 Series User Manual](#)

Lcd tv monitor t1 series (34 pages)

### [Monitor Asus 22T1EH User Manual](#)

T1 series (38 pages)

### [Monitor Asus XG27AQMR Manual](#)

Gaming monitor (30 pages)

### [Monitor Asus VG248 Series User Manual](#)

(24 pages)

### [Monitor Asus ROG SWIFT OLED PG27AQDP User Manual](#)

(46 pages)

### [Monitor Asus ROG STRIX XG32VQ Manual](#)

Curved gaming monitor (38 pages)

### [Monitor Asus ROG STRIX XG258Q Manual](#)

Gaming monitor (31 pages)

### [Monitor Asus MB166B Service Manual](#)

(16 pages)

### [Monitor Asus MB16ACE User Manual](#)

Portable usb monitor (25 pages)

### [Monitor Asus VT207 Series User Manual](#)

(27 pages)

### [Monitor Asus PG348 User Manual](#)

(30 pages)

### [Monitor Asus VG279QM1A Series User Manual](#)

Tuf gaming monitor (32 pages)

### [Monitor Asus TUF Gaming VG279QM Series User Manual](#)

(30 pages)

### [Monitor Asus VX279 Series User Manual](#)

(36 pages)

### [Monitor Asus VZ2491R Series User Manual](#)

(29 pages)

### [Monitor Asus ProArt PA279CV Series User Manual](#)

(31 pages)

## Summary of Contents for Asus 22T1E

[Page 1](#) LCD TV Monitor T1 Series User's Manual...

[Page 2](#) Product warranty or service will not be extended if: (1) the product is repaired, modified or altered, unless such repair, modification or alteration is authorized in writing by ASUS; or (2) the serial number of the product is defaced or missing.

### [Page 3: Table Of Contents](#)

Electronic Programme Guide (EPG).....15 2.10 Programme List .....15 On-Screen Display (OSD) Menu ..... 16 3.1.1 How to reconfigure .....16 3.1.2 OSD menu introduction.....17 Specifications Summary .....22 Troubleshooting (FAQ)

Page 5: Safety Information

## Page 6: Care And Cleaning

## Page 7: Where To Find More Information

Page 8: Recycling Place

Page 9: North America

Page 10

This image shows a single sheet of white paper with horizontal blue or grey ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

Page 11: Welcome

Thank you for purchasing the ASUS TV Monitor T1 Series LCD display! The latest LCD display

from ASUS provides a host of features that enhance your viewing experience. It integrates a number of various media input interfaces and a built-in TV tuner to meet your needs on a display for working as well as entertainment.

## [Page 12: Display Introduction](#)

Press this button to turn the display on, off, or stand-by. ■ The colour of the power indicator is as the below table. Status Description Blue Stand-by Remote receiver ■ The display receives the signal from the remote controller here. ASUS LCD TV Monitor T1 Series...

## [Page 13: Top View](#)

To switch to the next programme ■ To choose the right item of the OSD menu ■ To choose the next mode in Splendid™ mode selection or the next source in Input source selection ASUS LCD TV Monitor T1 Series...

[Page 14](#) Input source selection Source button ■ To switch among the input signal sources of ATV, DTV, SCART, Component, VGA, HDMI, Video, and S-Video ■ To exit from OSD menu or from Splendid mode selection ASUS LCD TV Monitor T1 Series...

## [Page 15: Rear View](#)

1.3.3 Rear view 22T1E, 24T1E & 27T1E ASUS LCD TV Monitor T1 Series...

[Page 16](#) 14. CI card slot for CI (Common Interface) card from your CAM (Conditional Access Module, generally used for Pay per View services) provider 15. Headphone jack to output audio signal to headphone 16. Service port for manufacturer use ONLY 17. Kensington Lock ASUS LCD TV Monitor T1 Series...

## [Page 17: Remote Controller Introduction](#)

7 meters and within 30 degree to the left and to the right. ■ Dispose of used batteries in a recycle bin to prevent from environment pollution. ASUS LCD TV Monitor T1 Series...

[Page 18](#) Teletext size 18. Electronic Program Guide; also Teletext reveal 19. Broadcast information; also Teletext index 20. Display or hide the time; also Teletext sub-page 21. Stereo sound mode; also Teletext cancel 22. Display digital subtitle ASUS LCD TV Monitor T1 Series...

## [Page 19: Assembling The Display](#)

Hold the stand to prevent the monitor from falling when you change its angle. ■ You can adjust the display's angle from -5° - 15°. It is normal that the monitor slightly shakes while you adjust the viewing angle. ASUS LCD TV Monitor T1 Series...

## [Page 20: Detaching The Arm/Base \(Only For 27T1E\)](#)

5. Use a screwdriver to remove the four screws on the hinge (figure 4), then remove the hinge. Figure 1 Figure 2 Figure 3 Figure 4 We recommend that you cover the table surface with soft cloth to prevent damage to the monitor. ASUS LCD TV Monitor T1 Series...

## [Page 21: Connecting The Display](#)

Turning the Display On Press the power button. See section 1.3 Display Introduction for the location of the power button. The power indicator lights up in blue to show that the monitor is ON. ASUS LCD TV Monitor T1 Series...

## [Page 22: Setting The Monitor](#)

Modes not listed in the table may possibly not be supported. ■ Press button for 2 - 3 seconds if noise, trembling, or picture offset appears on the screen while VGA input in use. ASUS LCD TV Monitor T1 Series...

## [Page 23: Setting The Television](#)

Select "Auto Programme" and choose the country of the broadcasting system. Select "Start" to scan all the available channels and store them in the memory. ■ For further information of setting the TV, please read the chapter 3.1.2. ASUS LCD TV Monitor T1 Series...

## [Page 24: Using Teletext](#)

Teletext Reveal to reveal and to hide the concealed information, such as answer of riddles. ■ Teletext Sub-Page to select a sub-page in Teletext and to exit from this function. ■ Teletext Cancel to display the broadcast while searching for a certain Teletext page. ASUS LCD TV Monitor T1 Series...

## [Page 25: Electronic Programme Guide \(Epg\)](#)

The key pad on the display set does not provide with such functions. Please read chapter 3.1.2 Programme Edit for specifying your favourite programmes. Channel moving You can move the ATV channel using the programme edit function. ASUS LCD TV Monitor T1 Series...

## [Page 26: On-Screen Display \(Osd\) Menu](#)

MENU button. Repeat step 2 and 3 to adjust any other function. To exit from the OSD menu, press the key on the key pad of the display set EXIT button on the remote controller. ASUS LCD TV Monitor T1 Series...

## [Page 27: Osd Menu Introduction](#)

OSD Time Out: to specify the idle time of displaying the OSD menu before it is deactivated. ■ Reset All: to restore all the settings back to the factory default. Password is required if "Lock System" is on. ASUS LCD TV Monitor T1 Series...

[Page 28](#) Pay-TV services provider. Picture ■ Splendid: to switch among Standard, Theatre, Game, and Scenery video mode of Splendid™ Video Enhancement Technology. Theatre Mode: best choice for watching films with Splendid™ Video Intelligence Technology. ASUS LCD TV Monitor T1 Series...

[Page 29](#) In user's mode, you may adjust the level of the red, green, and blue to define your preferred white colour. ■ ASCR: to switch on and off the ASUS Smart Contrast Ratio function. ■ Noise Reduction: to specify the intense of noise reduction function among high, moderate, low, and off.

[Page 30](#) Clock: to set the current time. This function is inactive when "Sync Time" is ■ Off Time: to specify the time when the display automatically turns off. The off-time can be set one-time or repeated. ASUS LCD TV Monitor T1 Series...

[Page 31](#) Time Zone: to specify your time zone. ■ Sync Time: to automatically get time information from broadcasting signal ■ Sleep Timer: to set a countdown of 15, 30, 60, 90, 120, 180, 240 minutes till the display automatically switches off. ASUS LCD TV Monitor T1 Series...

## [Page 32: Specifications Summary](#)

NTSC 3.58, 4.43 (video-in only) Channel Coverage Analogue 48.25 – 855.25 MHz Digital VHF Band III (177.5 – 226.5 MHz) UHF E21 – E69 (474 – 858 MHz) Specifications are subject to change without prior notice. ASUS LCD TV Monitor T1 Series...

[Page 33](#) NTSC 3.58, 4.43 (video-in only) Channel Coverage Analogue 48.25 – 855.25 MHz Digital VHF Band III (177.5 – 226.5 MHz) UHF E21 – E69 (474 – 858 MHz) Specifications are subject to change without prior notice. ASUS LCD TV Monitor T1 Series...

[Page 34](#) NTSC 3.58, 4.43 (video-in only) Channel Coverage Analogue 48.25 – 855.25 MHz Digital VHF Band III (177.5 – 226.5 MHz) UHF E21 – E69 (474 – 858 MHz) Specifications are subject to change without prior notice. ASUS LCD TV Monitor T1 Series...

## [Page 35: Troubleshooting \(Faq\)](#)

Check the antenna is undamaged ■ Check the location and direction of the antenna ■ Ensure the antenna not too old. PC screen image not ■ Use "Auto Adjust" function centred or sized properly ASUS LCD TV Monitor T1 Series...

## [Page 36](#)

---

---

---

---



