



Asus 22T1EH User Manual

T1 series

1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38

--

•

[Table of Contents](#)

•

Bookmarks

Quick Links

[1 Display Introduction](#)

[2 Rear View](#)

[3 Remote Controller Introduction](#)


[4 Connecting the Display](#)

[5 Setting the Monitor](#)

[6 Setting the Television](#)

7 Specifications Summary

[Download this manual](#)

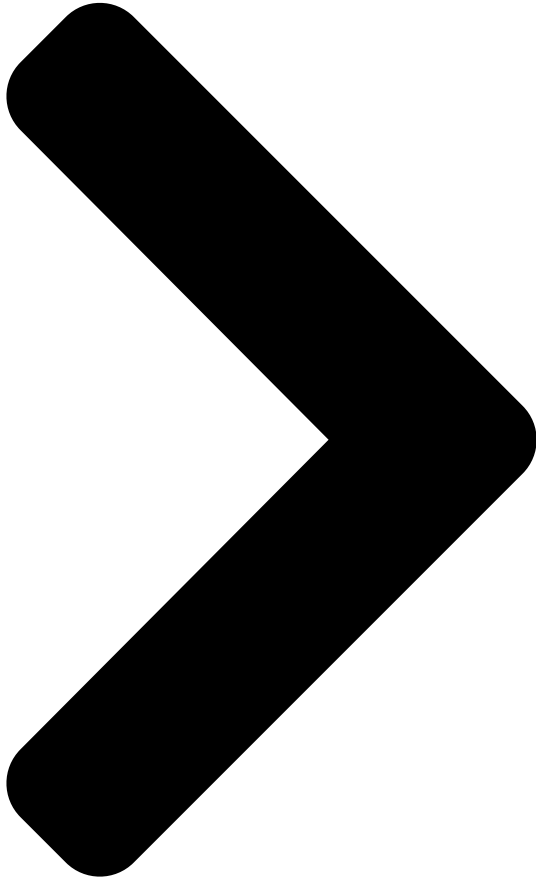

LED TV Monitor
ASUS[®]
T1 Series

User's Manual



E

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Asus 22T1EH

[Monitor Asus T1 Series User Manual](#)

Lcd tv monitor t1 series (34 pages)

[Monitor Asus T1 Series User Manual](#)

(34 pages)

[Monitor Asus 22T1E User Manual](#)

T1 series (36 pages)

[Monitor Asus ROG SWIFT PG32UCDM User Manual](#)

(43 pages)

[Monitor Asus VG27AQ3A Series User Manual](#)

Tuf gaming monitor (28 pages)

[Monitor Asus PB238Q User Manual](#)

Pb238q series lcd monitor (25 pages)

[Monitor Asus VG248QG Series User Manual](#)

(30 pages)

[Monitor Asus VG248QE User Manual](#)

24" w (16:9, 60.97 cm) wide screen (25 pages)

[Monitor Asus VG34VQL3A Series User Manual](#)

Tuf gaming monitor (33 pages)

[Monitor Asus ROG SWIFT OLED PG32UCDP User Manual](#)

(46 pages)

[Monitor Asus MB19 Series User Manual](#)

(30 pages)

[Monitor Asus PA169CDV User Manual](#)

(35 pages)

[Monitor Asus VG249 Series User Manual](#)

(28 pages)

[Monitor Asus VE228H User Manual](#)

Ve228 series led monitor (24 pages)

[Monitor Asus ROG SWIFT OLED PG34WCDM User Manual](#)

Gaming monitor (44 pages)

[Monitor Asus VG27A Series User Manual](#)

(30 pages)

Summary of Contents for Asus 22T1EH

[Page 1](#) LED TV Monitor T1 Series User's Manual...

[Page 2](#) Product warranty or service will not be extended if: (1) the product is repaired, modified or altered, unless such repair, modification or alteration is authorized in writing by ASUS; or (2) the serial number of the product is defaced or missing.

[Page 3: Table Of Contents](#)

Electronic Programme Guide (EPG).....15 2.10 Programme List15 On-Screen Display (OSD) Menu 16 3.1.1 How to reconfigure16 3.1.2 OSD menu introduction.....16 Specifications Summary24 Troubleshooting (FAQ)

display for working as well as entertainment.

[Page 12: Display Introduction](#)

Press this button to turn the display on, off, or stand-by. ■ The colour of the power indicator is as the below table. Status Description Blue Stand-by Remote receiver ■ The display receives the signal from the remote controller here. ASUS LED TV Monitor T1 Series...

[Page 13: Top View](#)

To switch to the next programme ■ To choose the right item of the OSD menu ■ To choose the next mode in Splendid™ mode selection or the next source in Input source selection ASUS LED TV Monitor T1 Series...

[Page 14](#) Input source selection Source button ■ To switch among the input signal sources of TV, SCART, Component, VGA, HDMI, Video, and S-Video ■ To exit from OSD menu or from Splendid mode selection ASUS LED TV Monitor T1 Series...

[Page 15: Rear View](#)

1.3.3 Rear view □ 22T1EH, 24T1EH & 27T1EH ASUS LED TV Monitor T1 Series...

[Page 16](#) 13. CI card slot for CI (Common Interface) card from your CAM (Conditional Access Module, generally used for Pay per View services) provider 14. Headphone jack to output audio signal to headphone 15. Service port for manufacturer use ONLY 16. Kensington Lock ASUS LED TV Monitor T1 Series...

[Page 17: Remote Controller Introduction](#)

7 meters and within 30 degree to the left and to the right. ■ Dispose of used batteries in a recycle bin to prevent from environment pollution. ASUS LED TV Monitor T1 Series...

[Page 18](#) Teletext size 18. Electronic Program Guide; also Teletext reveal 19. Broadcast information; also Teletext index 20. Display or hide the time; also Teletext sub-page 21. Stereo sound mode; also Teletext cancel 22. Display digital subtitle ASUS LED TV Monitor T1 Series...

[Page 19: Assembling The Display](#)

Hold the stand to prevent the monitor from falling when you change its angle. ■ You can adjust the display's angle from -5° - 15°. It is normal that the monitor slightly shakes while you adjust the viewing angle. ASUS LED TV Monitor T1 Series...

[Page 20: Detaching The Arm/Base \(Only For 27T1Eh\)](#)

5. Use a screwdriver to remove the four screws on the hinge (figure 4), then remove the hinge. Figure 1 Figure 2 Figure 3 Figure 4 We recommend that you cover the table surface with soft cloth to prevent damage to the monitor. ASUS LED TV Monitor T1 Series...

[Page 21: Connecting The Display](#)

Turning the Display On Press the power button. See section 1.3 Display Introduction for the location of the power button. The power indicator lights up in blue to show that the monitor is ON. ASUS LED TV Monitor T1 Series...

[Page 22: Setting The Monitor](#)

Press button for 2 - 3 seconds if noise, trembling, or picture offset appears on the screen while VGA input is in use. ■ The 1080 24p resolution is only available for HDMI input. ASUS LED TV Monitor T1 Series...

[Page 23: Setting The Television](#)

Select "Auto Programme" and choose the country of the broadcasting system. Select "Start" to scan all the available channels and store them in the memory. ■ For further information of setting the TV, please read chapter 3.1.2. ASUS LED TV Monitor T1 Series...

[Page 24: Using Teletext](#)

Teletext Reveal to reveal and to hide the concealed information, such as answer of riddles. ■

Teletext Sub-Page to select a sub-page in Teletext and to exit from this function. ■ Teletext Cancel to display the broadcast while searching for a certain Teletext page. ASUS LED TV Monitor T1 Series...

[Page 25: Electronic Programme Guide \(Epg\)](#)

You can control the favourite programme list only by the remote controller. The keypad on the display does not provide such functions. Please read chapter 3.1.2 Programme Edit for specifying your favourite programmes. ASUS LED TV Monitor T1 Series...

[Page 26: On-Screen Display \(Osd\) Menu](#)

Standard: best choice for document editing with Splendid™ Video Intelligence Technology. In this mode, you can adjust Sharpness, Colour, and Tint to define your preferred picture effect. Theatre: best choice for watching films with Splendid™ Video Intelligence Technology. ASUS LED TV Monitor T1 Series...

[Page 27](#) Noise Reduction: to specify the intense of noise reduction function among Off, Low, Moderate, High and Auto. ■ ASCR: to switch on and off the ASUS Smart Contrast Ratio function. ■ Back Light Control: to adjust the back light intensity.

[Page 28](#) Auto Volume: to automatically keep the volume level equal even if changing programmes. ■ Surround Sound: to turn the simulated surround sound system on and off. ■ Reset Sound: to reset all the sound parameters. ASUS LED TV Monitor T1 Series...

[Page 29](#) East, Australia, and Africa) DK: PAL D/K or SECAM D/K (usually in East Europe, China, Africa, and CIS countries) PAL I/II (usually in UK, Ireland, Hong Kong, and South Africa) SECAM L/L' (usually in France) ASUS LED TV Monitor T1 Series...

[Page 30](#) Select MOVE by pressing the yellow key the remote control. You can use and to move it to your desired position. Press the button to confirm the channel position. ASUS LED TV Monitor T1 Series...

[Page 31](#) Subtitle Type: to turn on the normal or hearing impaired subtitle if it is transmitted by the broadcaster. Audio Type: to turn on the normal or visual impaired audio if it is transmitted by the broadcaster. Visual Impaired: to adjust the volume of visual impaired audio. ASUS LED TV Monitor T1 Series...

[Page 32](#) Aspect Ratio: to change the aspect ratio of the displaying image among Wide, Square, Auto, Panorama, Zoom1, and Zoom2. Wide: to fit pictures to 16:9 wide full screen Square: to leave the left and right sides of the screen blank to display 4:3 format pictures ASUS LED TV Monitor T1 Series...

[Page 33](#) ■ SCART Input: to select the combined video source between Video + RGB and S-Video + RGB. This function is only available for SCART input. ■ Reset Display: to reset all the display parameters. ASUS LED TV Monitor T1 Series...

[Page 34: Specifications Summary](#)

VESA Wall-Mount VGA cable, Audio cable, Power cord, Warranty card, QSG, CD Accessories Energy Star®, EuP, CB, CE, , Gost-R, RoHS, WEEE, Regulation Approvals Windows Vista WHQL Specifications are subject to change without prior notice. ASUS LED TV Monitor T1 Series...

[Page 35](#) VESA Wall-Mount VGA cable, Audio cable, Power cord, Warranty card, QSG, CD Accessories Energy Star®, EuP, CB, CE, , Gost-R, RoHS, WEEE, Regulation Approvals Windows Vista WHQL Specifications are subject to change without prior notice. ASUS LED TV Monitor T1 Series...

[Page 36](#) VESA Wall-Mount VGA cable, Audio cable, Power cord, Warranty card, QSG, CD Accessories Energy Star®, EuP, CB, CE, , Gost-R, RoHS, WEEE, Regulation Approvals Windows Vista WHQL Specifications are subject to change without prior notice. ASUS LED TV Monitor T1 Series...

[Page 37: Troubleshooting \(Faq\)](#)

Check the antenna is undamaged. ■ Check the location and direction of the antenna. ■ Ensure

the antenna not too old. PC screen image not ■ Use "Auto Adjust" function. centred or sized properly ASUS LED TV Monitor T1 Series...

Page 38



ASUS LED TV

Monitor T1 Series...

This manual is also suitable for:

24t1eh27t1ehT1 series