



# **TOSHIBA**

Toshiba 19C100UM Owner's Manual

Integrated hd lcd tv/dvd combination



1  
2  
3  
4  
5  
6  
7  
8  
9

Table Of Contents

10  
11  
12  
13  
14  
15  
16  
17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88

--

---

•

[Table of Contents](#)

- 

Troubleshooting




•

## Bookmarks

## Quick Links

[1 Overview of Steps for Installing, Setting Up, and Using Your New Tv](#)

[Download this manual](#)

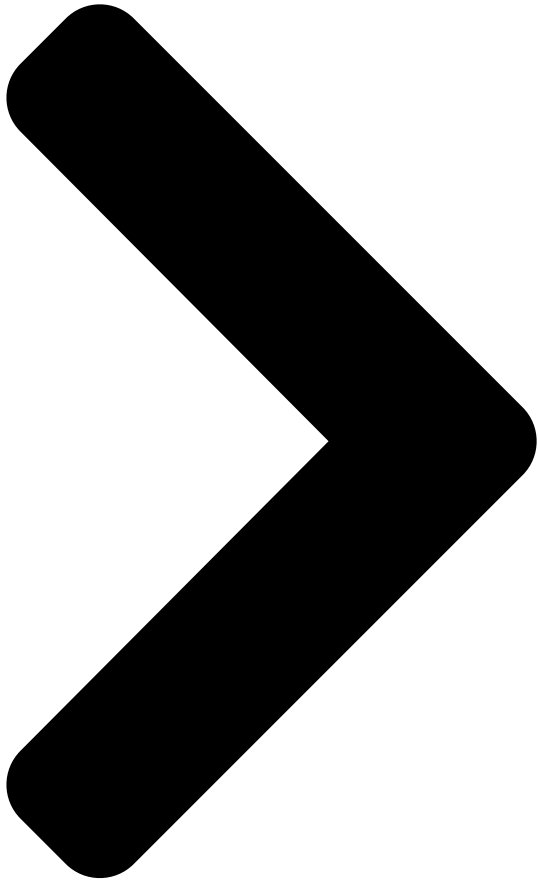

15CV100U

**TOSHIBA**  
15CV100U  
Leading Innovation >>>

19CV100U

**Owner's Manual**

**Integrated High Definition**

# 22CV100U

# 26CV100U

**TOSHIBA**  
Leading Innovation >>>

# 32CV100U

## Owner's Manual

For an overview of steps for setting up your new TV, see page 12.

Note: To display a High Definition picture, the TV must be receiving a High Definition signal (such as an over-the-air High Definition TV broadcast, a High Definition digital cable program, or a High Definition digital satellite program). For details, please contact your TV antenna installer, cable provider, or satellite provider.

## Integrated High Definition LCD TV/DVD Combination

© 2005 TOSHIBA CORPORATION

All Rights Reserved

Downloaded from

[www.Manualslib.com](http://www.Manualslib.com)

manuals search engine



Owner's Record

Model number and serial number are on

back of your TV/DVD. Record these



numbers in the spaces below. Refer to these

numbers whenever you communicate with

Toshiba dealer about this TV/DVD.

Model number:

Serial number:

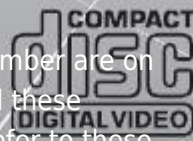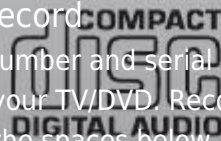

# ManualsLib.com

[Table of Contents](#)

[Next Page](#)

1  
2  
3  
4  
5

## Related Manuals for Toshiba 19C100UM

### [LCD TV Toshiba 19C100UM Manual Del Usuario](#)

Televisor de lcd con alta definición integrada (60 pages)

### [TV DVD Combo Toshiba 15CV100U Owner's Manual](#)

Integrated high definition lcd tv/dvd combination (95 pages)

### [TV DVD Combo Toshiba 19CV100U Owner's Manual](#)

Integrated high definition lcd tv/dvd combination (88 pages)

### [TV DVD Combo Toshiba 19CV100U Specifications](#)

720p lcd hdtv/dvd combo (2 pages)

### [TV DVD Combo Toshiba 22CV100U Specifications](#)

720p lcd hdtv/dvd combo (2 pages)

### [TV DVD Combo Toshiba 26CV100U Specifications](#)

720p lcd hdtv/dvd combo (2 pages)

### [TV DVD Combo Toshiba 32CV100U Specifications](#)

720p lcd hdtv/dvd combo (2 pages)

### [TV DVD Combo Toshiba 19LV505 Owner's Manual](#)

19/22-inch diagonal lcd tv/dvd combination (80 pages)

### [TV DVD Combo Toshiba 19HLV87 Owner's Manual](#)

19-inch diagonal lcd tv/dvd combination (81 pages)

### [TV DVD Combo TOSHIBA 24SLV411U Owner's Manual](#)

Integrated high definition lcd tv/dvd combination (337 pages)

### [TV DVD Combo Toshiba 19SLV411U Owner's Manual](#)

Integrated high definition lcd tv/dvd combination (111 pages)

### [TV DVD Combo Toshiba 19LV505 Service Manual](#)

19/22-inch diagonal lcd tv/dvd combination (156 pages)

### [TV DVD Combo Toshiba 19DV713B Owner's Manual](#)

Lcd tv/dvd combination (89 pages)

### [TV DVD Combo Toshiba 19DV733G Service Manual](#)

Lcd tv/dvd combination (76 pages)

### [TV DVD Combo Toshiba 15DV703R Owner's Manual](#)

15, 19, 22, 26, 32-inch class lcd tv/dvd combination (61 pages)

### [TV DVD Combo Toshiba 19DV555DB Service Manual](#)

19-inch diagonal lcd tv/dvd combination (176 pages)

## Summary of Contents for Toshiba 19C100UM

**Page 1** High Definition signal (such as an over-the-air High your Toshiba dealer about this TV/DVD. Definition TV broadcast, a High Definition digital cable program, or a High Definition digital satellite program). For details, please...

### **Page 2: Safety Precautions**

Dear Customer, CHILD SAFETY: Thank you for purchasing this Toshiba LCD TV/DVD. This manual will help you use the many exciting features of It Makes A Difference How and Where You Use your new LCD TV/DVD. Before operating your LCD...



### [Page 3: Important Safety Instructions](#)

• ALWAYS contact a service technician to inspect Important Safety Instructions the TV any time it has been damaged or dropped. 1) Read these instructions. 15) CAUTION: 2) Keep these instructions. • To reduce the risk of electric shock, do not use the 3) Heed all warnings.

[Page 4](#) TV is being turned on or off. If Grounding conductors equipment these sounds become frequent or continuous, (NEC Section 810-21) Ground clamps unplug the power cord and contact a Toshiba Power service grounding Authorized Service Center. electrode system (NEC Article 250 Part H) Downloaded from www.Manualslib.com...

### [Page 5: Choosing A Location For Your Lcd Tv](#)

To Fold the Pedestal Stand (Applicable to Refer all servicing not specified in this manual to a 19CV100U/22CV100U) Toshiba Authorized Service Center. 1) Slide the lever on the back side of the pedestal stand 44) If you have the TV serviced: to the left.

[Page 6](#) Removing the Pedestal Stand Notes on moisture condensation 1) Carefully lay the front of the TV face down on a flat, Moisture condensation damages the unit. Please cushioned surface such as a quilt or blanket. Leave read the following carefully. the stand protruding over the edge of the surface.

### [Page 7: Notes On Discs](#)

Notes on discs Notes on copyright The unauthorized recording, use, distribution, or revision On handling discs of copyrighted materials including, without limitation, • Do not touch the playback side of the disc. Handle the television programs, videotapes, and DVDs, is prohibited disc as shown in the figure below.

[Page 8](#) Caution: Changes or modifications to this equipment use a disc adapter. It may cause trouble. not expressly approved by Toshiba could void the • Please do not insert any disc of an irregular shape into users authority to operate this equipment.

[Page 9](#) The following symptoms are technical limitations of LCD Display technology and are not an indication of trademarks of Dolby Laboratories. malfunction; therefore, Toshiba is not responsible for • HDMI, the HDMI logo and High-Definition perceived issues resulting from these symptoms.

### [Page 10: Table Of Contents](#)

Contents Important Safety Instructions .....3 Tuning to the next programmed Installation, Care, and Service .....3 channel .....34 Choosing a location for your LCD TV ....5 Tuning to a specific channel Notes on discs .....7 (programmed or unprogrammed) ..35 Chapter 1: Introduction .....12 Switching between two channels using Features of your new TV .....12...

[Page 11](#) Understanding the last mode memory DVD menu (DVD) ..... 62 feature .....49 Soundtrack language/Audio channel/ Chapter 7: Using the TV's advanced Subtitle .....63 features ..... 50 Selecting a soundtrack language Using the advanced picture settings (DVD) ..... 63 features .....

### [Page 12: Chapter 1: Introduction](#)

Overview of steps for installing, setting up, and using your new The following are just a few of the many exciting features of your new Toshiba integrated HD, LCD TV/DVD: Follow these steps to set up your TV and begin •...

### [Page 13: Tv Front, Top And Side Panel Controls And Connections](#)

Chapter 1: Introduction TV front, top and side panel controls and connections 15CV100U/15CV101U Power LED – This indicates the TV's status. POWER – Press to turn the TV on and off. See "LED indication" on Page 77 for If the TV stops responding to the controls on additional information.

[Page 14](#) Chapter 1: Introduction 19CV100U/22CV100U/26CV100U/32CV100U Power LED – This indicates the TV's status. See "LED indication" on Page 77 for additional information. Remote sensor – Point the remote control toward this remote sensor. Effective range: Auto Brightness Sensor – This sensor will detect the ambient light conditions to optimize the

backlighting levels.

[Page 15](#) Chapter 1: Introduction 26CV100U/32CV100U 19CV100U/22CV100U Disc slot – Load the disc into the disc slot to HDMI 2 – High-Definition Multimedia view or listen. Interface (HDMI 2) input receives digital audio and uncompressed digital video from EJECT – Press to eject the disc. an HDMI device or uncompressed digital VOLUME+/-...

### [Page 16: Tv Back Panel Connections](#)

(with standard stereo audio TUNER (ANT/CABLE) – Input that inputs) for connecting devices with supports analog (NTSC) and digital (ATSC) component video output, such as a Toshiba off-air antenna signals and analog and digital ® DVD player with ColorStream Cable TV (QAM) signals.

### [Page 17: Chapter 2: Connecting Your Tv](#)

Connecting TV to a power source are for use with video devices with component ® video output. (ColorStream is Toshiba's brand of To connect AC power: component video.) These cables are typically color-coded red, green, and blue. Separate audio Connect the AC cord plug into the TV/DVD's AC cables are required for a complete connection.

### [Page 18: Connecting A Vcr, And Antenna, Cable Tv](#)

Chapter 2: Connecting your TV Connecting a VCR, and antenna, Connecting a camcorder Cable TV You will need: standard A/V cables • To view the camcorder video: Select the Video video input source on the TV. You will need: \* To select the video input source, press on the coaxial cables •...

### [Page 19: Connecting A Dvd Player With Colorstream ® \(Component Video\)](#)

Chapter 2: Connecting your TV Connecting a DVD player with Connecting a satellite receiver ® ColorStream (component video) Green Blue White White You will need: standard audio cables • • component video cables You will need: - You can connect the component video standard audio cables •...

### [Page 20: Connecting An Hdmi Or Dvi Device To The Hdmi Input](#)

Chapter 2: Connecting your TV To view the HDMI device video: Connecting an HDMI or DVI Select the HDMI 1 or HDMI 2 video input source device to the HDMI input on the TV. The HDMI input on your TV receives digital audio and uncompressed digital video from an HDMI \* To select the video input source, press on the...

### [Page 21: Regza-Link ® Connection](#)

This feature is limited to models incorporating • ® Logo ( Toshiba's REGZA-LINK . However, Toshiba is not liable for those operations. Refer to the individual instruction manuals for compatibility information. Note: This feature may not work properly depending on the devices that are connected.

### [Page 22: Connecting A Digital Audio System](#)

Chapter 2: Connecting your TV Connecting a digital audio to select either Dolby Digital or Press system PCM, depending on your device. "Selecting the optical audio output format" on Page 41). The TV's DIGITAL AUDIO OUT terminal ® outputs a Dolby Digital or 2-channel down-mixed PCM (Pulse-Code Modulation)

### [Page 23: Connecting A Personal Computer \(Pc\)](#)

Chapter 2: Connecting your TV Connecting a personal computer Signal names for mini D-sub 15-pin connector • Signal Signal Signal (PC) name name Name Ground Reserved With either the PC IN or HDMI connection, you Ground can watch your computer's display on the TV and hear the sound from the TV's speakers.

### [Page 24: Chapter 3: Using The Remote Control](#)

Chapter 3: Using the remote control Preparing the remote control for Installing the remote control batteries The remote control can operate your TV/DVD and Remove the battery cover from the back of the control the basic functions of connected audio/ remote control.

## [Page 25: Learning About The Remote Control](#)

Chapter 3: Using the remote control Learning about the remote control POWER turns the TV on and off. When the TV is on, the Power LED indicator on the TV front will be illuminated in green. The buttons used for operating the TV/DVD are SLEEP accesses the sleep timer ( Page ®...

[Page 26](#) Chapter 3: Using the remote control CLOSED CAPTION/SKIP accesses the Closed Caption menu ( Page 39); skips forward to locate later DVD chapters ( Page 58). CH RTN/SKIP returns to the last viewed channel or source ( Page 35); skips back to beginning of current DVD chapter or locate previous chapters ( Page 58).

## [Page 27: Chapter 4: Menu Layout And Navigation](#)

Chapter 4: Menu layout and navigation Main menu layout Setup/Installation menu layout The Installation menu contains the Terrestrial To open the main menus (illustrated below), press and System Status menus. on the remote control or MENU on the TV To open the Installation menu (illustrated control panel).

## [Page 28: Chapter 5: Setting Up Your Tv](#)

Chapter 5: Setting up your TV Initial Setup Selecting the menu language When you first turn on or reset the TV, the Initial You can choose from three different languages Setup window will appear. (English, French and Spanish) for the on-screen display of menus and messages.

## [Page 29: Programming Channels Into The Tv's Channel Memory](#)

Chapter 5: Setting up your TV Programming channels into the Press to start channel programming. The TV will automatically cycle through all TV's channel memory the channels, and store all active channels in the channel memory. When Auto Tuning is When you press on the remote control or finished, press...

## [Page 30: Labeling Channels](#)

Chapter 5: Setting up your TV To block channels in the channel memory: Labeling channels You can block specific channels. You will not be able to tune blocked channels unless you unlock A list of common channel labels (logos) for them.

## [Page 31: Setting The Hdmi Audio Mode](#)

Chapter 5: Setting up your TV To create and assign a custom label: Setting the HDMI audio mode If the desired channel label is not available from the list of presets, you can create a custom label. To set the HDMI audio mode: Open the Channel Labeling window.

## [Page 32: Viewing The Digital Signal Meter](#)

Chapter 5: Setting up your TV Viewing the digital signal meter Viewing the system status You can view the digital signal meter in the ANT/ From the Setup menu, press CABLE digital TV input source only. select Installation and then press Press to highlight System Status, To view the digital signal meter:...

## [Page 33: Chapter 6: Using The Tv's Features](#)

Chapter 6: Using the TV's features Press repeatedly to highlight the desired input Selecting the video input source source, and then press to view Note: on the remote control or INPUT/ Press ® When selecting REGZA-LINK input • ENTER on the TV control panel. sources from the popup window using ®...

## [Page 34: Tuning Channels](#)

Chapter 6: Using the TV's features Input labeling example: Tuning channels The screen below is an example of how you could label the inputs if you connected a VCR to Video, Setting the Channel Tuning Mode a Video Recorder to HDMI 1, and a DTV set-top This feature allows you to choose how tuning will box to HDMI 2.

## [Page 35: Tuning To A Specific Channel \(Programmed Or Unprogrammed\)](#)

Chapter 6: Using the TV's features Tuning to a specific channel You can save separate picture size preferences for (programmed or unprogrammed) each input on your TV. Tuning analog channels: To select the picture size using the remote control: Press the Channel Number

buttons (0-9) on the remote control.

[Page 36](#) Chapter 6: Using the TV's features Picture Size Picture Size Natural 4:3 HD (for 720p, 1080i, and 1080p program sources only) Some program formats will display with sidebars and/or bars at the top and bottom. Picture is not distorted from original size. TheaterWide 1 (for 4:3 format programs) Native...

### [Page 37: Scrolling The Theaterwide Picture \(Theaterwide 2 And 3 Only\)](#)

Chapter 6: Using the TV's features ® Scrolling the TheaterWide picture Selecting the cinema mode (TheaterWide 2 and 3 only) When you view a DVD (3:2 pulldown processed) from a DVD player connected to the Video, You can set separate scroll settings for the ColorStream HD (component video), or HDMI TheaterWide 2 and TheaterWide 3 modes for each inputs on the TV, smoother motion can be obtained...

### [Page 38: Adjusting The Picture](#)

Chapter 6: Using the TV's features Adjusting the picture quality Adjusting the picture You can adjust the picture quality (Contrast, Backlight, DynaLight™, Brightness, Color, Tint, Selecting the picture mode and Sharpness) to your personal preferences. You can select your desired picture settings from four different modes, as described below.

### [Page 39: Using The Closed Caption Mode](#)

Chapter 6: Using the TV's features Digital CC Settings Using the closed caption mode You can customize the closed caption display characteristics by changing the background color, Base closed captions opacity, text size, type, edge, and color. The closed caption mode has two options: Note: •...

### [Page 40: Cc Selector](#)

Chapter 6: Using the TV's features CC Selector Adjusting the audio You can use the CC and Digital Audio Selectors to temporarily override the default Muting the sound analog caption mode (set in Base CC Mode) for Press on the remote control to partially reduce a particular channel.

### [Page 41: Adjusting The Audio Quality](#)

Chapter 6: Using the TV's features To listen to stereo sound: Adjusting the audio quality You can adjust the audio quality by adjusting the From the Sound menu, press bass, treble, and balance. select Audio Setup and then press Press to select MTS, and then press From the Sound menu, press to select Stereo.

### [Page 42: Using The Dolby ® Digital Dynamic](#)

Chapter 6: Using the TV's features Using the Dolby ® Digital Dynamic Using the Locks menu Range Control feature This dynamic range control feature causes the The Locks menu includes the Enable Rating Blocking, Edit Rating Limits, Input Lock, Control ATSC dynamic range to be further compressed, allowing you to switch from ATSC to analog Panel Lock, GameTimer and New PIN Code...

### [Page 43: Blocking Tv Programs And Movies By Rating \(V-Chip\)](#)

- Downloading an additional rating designed, transmitted, or controlled by the system for blocking TV programs TV or Toshiba, nor is the availability of an and movies additional rating system determined or An additional rating system may be available for controlled by Toshiba.

### [Page 44: Unlocking Programs Temporarily](#)

Chapter 6: Using the TV's features Independent rating system for broadcasters Independent rating system for movies Ratings Description and Content themes Ratings Description and Content themes Mature Audience Only (This X-rated (For adults only) program is specifically designed to Not intended for anyone 17 and be viewed by adults and therefore NC-17 under...

### [Page 45: Using The Input Lock Feature](#)

Chapter 6: Using the TV's features Using the input lock feature ® To cancel the GameTimer You can use the Input Lock feature to lock the Select Off in step 4 above. video inputs (Video, ColorStream HD, HDMI To deactivate the Input Lock once the 1, HDMI 2, and PC) and channels 3

and 4.

### [Page 46: Using The Pc Settings Feature](#)

Chapter 6: Using the TV's features Using the PC settings feature Setting the PC Audio You can view an image from a PC on the TV This function allows you to output or mute the screen. When a PC is connected to the TV's PC IN sound from your PC when connecting using the terminal, you can use the PC Settings feature to PC IN terminal and an analog RGB cable (...)

### [Page 47: Setting The Sleep Timer](#)

This is a new feature that uses CEC technology a set length of time (maximum of 180 minutes). ® and allows you to control Toshiba REGZA-LINK compatible devices from the TV remote via HDMI To set the sleep timer using the remote connection ( Page 21).

### [Page 48: Regza-Link ® Player Control Menu](#)

Chapter 6: Using the TV's features ® REGZA-LINK Player Control menu VOLUME and MUTE controls of functions Audio Receiver With your TV's remote control, you can adjust or From the Preferences menu, press mute the sound volume of the Audio Receiver. to select REGZA-LINK Player Control and adjust the volume level.

### [Page 49: Displaying Tv Status Information](#)

Chapter 6: Using the TV's features Note: When you turn on the audio receiver, Aspect ratio of incoming video signal (4:3 or • change its input source, or adjust the sound 16:9) volume, the sound will be output from the V-Chip rating status •...

### [Page 50: Chapter 7: Using The Tv's Advanced Features](#)

Chapter 7: Using the TV's advanced features Using the advanced picture To save the new settings, highlight Done and then press settings features To revert to the factory defaults, highlight Reset and then press Using dynamic contrast Note: If you select one of the factory-set When dynamic contrast is set to On, the TV will picture modes (Sports, Standard, Movie detect changes in the picture quality that affect the...

### [Page 51: Using Cableclear ® Digital Noise](#)

Chapter 7: Using the TV's advanced features ® Using the Game Mode feature Using CableClear digital noise reduction You can use the Game Mode feature for shorter frame delays when playing a video game requiring ® The CableClear digital noise reduction feature split-second timing between the on-screen display allows you to reduce visible interference in your and input from the controller (such as music...

### [Page 52: Using The Advanced Audio Settings Features](#)

Folder specifications Total number of files: Less than 2000 per folder • You must obtain any required permission from copyright owners to download or use copyrighted content. Toshiba cannot and does not grant such permission. Downloaded from www.Manualslib.com manuals search engine...

### [Page 53: Basic Operation](#)

Chapter 7: Using the TV's advanced features Basic Operation Viewing JPEG files To set Auto Start: To view in Single View mode: From the Setup menu, press From Media Player menu, press select Media Player and then press select Photo and then press Press to select Auto Start and then When the thumbnail view appears, press...

### [Page 54: Listening To Mp3 Files](#)

Chapter 7: Using the TV's advanced features To use the photo Quick Menu: To set background music for photo mode: You can select your preferred photo viewing You can select music from the music list stored in settings from the photo Quick Menu. the USB device to be played back in photo mode.

[Page 55](#) Chapter 7: Using the TV's advanced features To use the music Quick Menu: If Enable REGZA-LINK in the REGZA- • LINK Setup menu is set to Off or no You can select your preferred music playback amplifier is detected, the Speaker item will settings from the music Quick Menu.

## [Page 56: Chapter 8: Basic Disc Playback](#)

Chapter 8: Basic disc playback Playback resume function: Disc playback Your TV/DVD supports playback resume function. If you stopped the disc playback before it is This section shows you the basics on how to play a completed, the TV/DVD records the stop point. disc.

## [Page 57: Removing A Disc](#)

Chapter 8: Basic disc playback Removing a disc Playback navigation Press EJECT on the TV control panel or Playing in fast reverse or fast on the remote control. forward direction (DVD/VCD/CD) Wait for the disc to be ejected and then remove the disc from the slot.

## [Page 58: Locating A Chapter Or Track \(Dvd/ Vcd/Cd\)](#)

Chapter 8: Basic disc playback Locating a chapter or track (DVD/ VCD/CD) Press SKIP or SKIP repeatedly to display the chapter or track number you want to play. SKIP : To locate succeeding chapters or tracks. Playback starts from the beginning of the selected chapter or track.

## [Page 59: Chapter 9: Advanced Disc Playback](#)

Chapter 9: Advanced disc playback Locating a specific scene (DVD/VCD/ Zoom function/Scene navigation You can change the viewing scale of a picture by Press during playback, still or stop mode. using the Zoom function. Once the image has been rescaled, use the arrow buttons to pan Jump the image.

## [Page 60: Scene Bookmark](#)

Chapter 9: Advanced disc playback Scene bookmark Repeat playback/A-B repeat Scene bookmarks refer to specific points in the You can choose to repeat DVD playback by title or playback range that have been marked for later chapter. For audio CDs and Video CDs, you can access.

## [Page 61: Enabling A-B Repeat Mode \(Dvd/ Vcd/Cd\)](#)

Chapter 9: Advanced disc playback Enabling A-B repeat mode (DVD/ Programmed playback/Random VCD/CD) playback During playback, press at the point where you would like the playback loop to You can program the playback sequence of tracks begin. This sets your "A" point. on a Video CD.

## [Page 62: Enabling Random Playback \(Vcd\)](#)

Chapter 9: Advanced disc playback Scene angle/Title selection/DVD Press to return to the left column, then to select Program Playback press menu and press Changing the scene angle (DVD) Play Mode Mode : Program When playing back a DVD recorded with multi- Repeat : Off angle scenes, you can select the scene angle that...

## [Page 63: Soundtrack Language/Audio Channel/Subtitle](#)

Chapter 9: Advanced disc playback Soundtrack language/Audio Playback information/VCD play-channel/Subtitle back control Selecting a soundtrack language Viewing the playback info (DVD/VCD) (DVD) Press during playback. You can select the soundtrack language when you DVD mode play a multilingual DVD. Elapsed/remaining time Elapsed/remaining time for During playback, press...

## [Page 64: Turning Off The Pbc Function \(Vcd\)](#)

Chapter 9: Advanced disc playback Turning off the PBC function (VCD) Press in stop mode. Press select Mode, then press repeatedly until Normal appears. Play Mode Mode : Normal Repeat : Off Program Playback Press to close the screen. To turn on the PBC function: Follow steps 1 and 2 above, then press repeatedly until PBC appears.

## [Page 65: Mp3, Wma, Jpeg, And Audio Cd Operation](#)

Use of CD-RW discs for recording MP3 files is not recommended. You must obtain any required permission from copyright owners to download or use copyrighted content. Toshiba can not and does not grant such permission.

## [Page 66: About The File Browser \(Cd\)](#)

Chapter 9: Advanced disc playback About the file browser (CD) Playing an audio file (CD) Load an MP3/WMA/Audio CD in the disc Filename of Operation status Scroll bar slot. selected item It

may The file browser appears on-screen. 3/15 00:00:00 automatically play by composition of an /WMA-11.WMA audio file.

### [Page 67: Viewing A Jpeg File \(Cd\)](#)

Chapter 9: Advanced disc playback Viewing a JPEG file (CD) Viewing a slide show (CD) If there are multiple JPEG files in the selected Load a disc containing JPEG files in the disc directory, you can view them in a slide show. For slot.

### [Page 68: Mp3, Wma, Jpeg And Audio Cd Playback Modes](#)

Chapter 9: Advanced disc playback Enabling random playback (CD) MP3, WMA, JPEG and Audio CD playback modes During stop mode, in the Option panel of the file browser, press to select Mode. You can choose to repeat CD playback by track or the entire disc.

### [Page 69: Programming The Playback Sequence \(Cd\)](#)

Chapter 9: Advanced disc playback Programming the playback Press to select Program View, then sequence (CD) press In the Option panel of the file browser, press MP3-1 Edit Mode to select Edit Mode, then press MP3-2 Browser View MP3-3 Clear Program Folder-1 WMA-3 Folder-2...

### [Page 70: Chapter 10: Customizing Disc Playback](#)

Chapter 10: Customizing disc playback Customizing disc playback You can customize the disc playback settings to suit your preferences. Configuring the disc playback settings (DVD/VCD/CD) In DVD mode, press during stop mode. Menu :English Parental E.B.L. : Off : Off : Off Subtitle :English...

### [Page 71: Disc Playback Setup](#)

Chapter 10: Customizing disc playback Disc playback setup Go to Option Description page Menu Select the language for the DVD menu display. Subtitle Select the subtitle language for disc playback. Audio Select the audio language for disc playback. Select the language for the Setup screen display. Choose whether to show a status display whenever Display a button is pressed.

[Page 72](#) Chapter 10: Customizing disc playback Menu :English Parental E.B.L. : Off : Off : Off Display Parental Menu : Off : Off : English Subtitle :English QSound TV Screen Set Password : On : 4:3 Picture Mode :Auto QSound Subtitle Set Password : On : English...

[Page 73](#) Chapter 10: Customizing disc playback Night Mode :Off Parental :Off Parental Menu E.B.L. : Off : Off : English Menu E.B.L. : Off : English : Off Digital Out :Bitstream Password :Change Subtitle TV Screen Set Password : 4:3 : English QSound Subtitle TV Screen...

[Page 74](#) Chapter 10: Customizing disc playback To temporarily cancel the parental restriction: 1) Load the restricted content DVD that you want to play. 2) Use the Channel Number buttons (0-9) to input the system password after the "Enter Password" message, then press This suspension of the parental restriction setting applies until disc is ejected.

### [Page 75: Chapter 11: Troubleshooting](#)

Chapter 11: Troubleshooting Noisy picture General troubleshooting • If you are watching an analog channel (off-air broadcast or Cable TV), you can set the Before calling a service technician, please check ® CableClear feature to reduce visible this chapter for a possible cause of the problem interference in the TV picture ( Page 51).

[Page 76](#) ® • The REGZA-LINK feature is available for • Subtitles are disabled. Press Page ® Toshiba REGZA-LINK compatible devices. 63). • Make sure the HDMI cables with the HDMI Scene angle cannot be changed Logo ( ) are used. ®...

### [Page 77: Led Indication](#)

Chapter 11: Troubleshooting LED Indication The Power LED light on the TV front indicates the TV's status, as described below. LED Indication Power LED Green is ON (solid) • The TV is operating properly. Red is ON (solid) • The TV is in Standby mode. If, after trying the solutions, the problem still exists: In the U.S., call TACP Consumer Solutions at...



## [Page 78: Chapter 12: Appendix](#)

Chapter 12: Appendix ® ColorStream (component video) HD INPUT: Specifications VIDEO:Y: 1 V(p-p), 75 ohm, negative sync. : 0.7 V(p-p), 75 ohm Note: : 0.7 V(p-p), 75 ohm • These models comply with the specifications listed below. Suggested formats: 1080i, 720p, 480p, 480i •...

## [Page 79: Acceptable Signal Formats For Pc In And Hdmi Terminals](#)

Chapter 12: Appendix Acceptable signal formats for PC IN and HDMI terminals PC IN signal formats Note: Depending on the connected PC, the following status may occur; incorrect display, false format detection, picture position failure, blur, or judder. But this is not a malfunction of your TV. Format Resolution V.Frequency...

## [Page 80: Limited United States Warranty Lcd Tv/Dvd Combination - Depot Repair Warranty](#)

Repair Warranty (1) You must retain your bill of sale or provide other proof of purchase. Toshiba America Consumer Products, L.L.C. ("TACP") (2) All warranty servicing of this LCD TV/DVD makes the following limited warranties to original Combination must be made by the Depot Warranty consumers in the United States.

[Page 81](#) THE ABOVE PROVISIONS MAY NOT APPLY TO YOU UNDER SUCH CIRCUMSTANCES. A copy of the GPL source code in this product may be obtained by contacting Toshiba Consumer Solutions at (800) 631-3811. There will be a charge to cover the costs of providing the source code.

## [Page 82: The Gnu General Public License \(Gpl\)](#)

Chapter 12: Appendix The GNU General Public License (GPL) saying it may be distributed under the terms of this General Public License. The "Program", below, refers to any such program or work, and a "work based on the Version 2, June 1991 Program"...

[Page 83](#) Chapter 12: Appendix Thus, it is not the intent of this section to claim rights or distributing or modifying the Program or works based on contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the Each time you redistribute the Program (or any work distribution of derivative or collective works based on based on the Program), the recipient automatically...

[Page 84](#) Chapter 12: Appendix the implied warranty of MERCHANTABILITY or If you wish to incorporate parts of the Program into FITNESS FOR A PARTICULAR PURPOSE. See the other free programs whose distribution conditions are GNU General Public License for more details. different, write to the author to ask for permission.

## [Page 85: The Libpng License Notices](#)

Chapter 12: Appendix The Libpng License Notices libpng versions 0.5, May 1995, through 0.88, January 1996, are Copyright (c) 1995, 1996 Guy Eric Schalnat, Group 42, Inc. This copy of the libpng notices is provided for your convenience. In case of any discrepancy between this For the purposes of this copyright and license, copy and the notices in the file png.h that is included in "Contributing Authors"...

## [Page 86: The Zlib License](#)

Chapter 12: Appendix The zlib License zlib.h -- interface of the "zlib" general purpose compression library Version 1.2.3, July 18th, 2005 Copyright (C) 1995-2005 Jean-loup Gailly and Mark Adler This software is provided "as-is", without any express or implied warranty. In no event will the authors be held liable for any damages arising from the use of this software.

[Page 87](#) Downloaded from [www.Manualslib.com](http://www.Manualslib.com) manuals search engine...

[Page 88](#) TOSHIBA AMERICA CONSUMER PRODUCTS, L.L.C. Corporate Headquarters: 82 TOTOWA ROAD, WAYNE, NJ 07470, U.S.A. NATIONAL SERVICE DIVISION:1420-B TOSHIBA DRIVE, LEBANON, TN 37087, U.S.A. CableClear, ColorStream, GameTimer, and TheaterWide are registered trademarks of Toshiba America Consumer Products, L.L.C. DynaLight is trademark of Toshiba America Consumer Products, L.L.C.



This manual is also suitable for:

[15cv100u15cv101u19cv100u22cv100u26cv100u32cv100u](#)