

Learning About The Remote Control - Toshiba 19C100UM Owner's Manual

Integrated hd lcd tv/dvd combination

1
2
3
4
5
6
7
8
9

Table Of Contents

10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88

--

•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks



Learning about the remote control

The buttons used for operating the TV/DVD are described here. For the REGZA-LINK control functions, see the section "Using REGZA-

®

LINK


" (

Note: The error message "NOT AVAILABLE" may appear if you press a key for a function that is not available.

Downloaded from
www.Manualslib.com

Chapter 3: Using the remote control

 ®

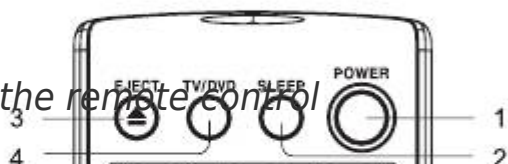

1
POWER turns the TV on and off. When the TV is on, the Power LED indicator on the TV front will be illuminated in green.

2
SLEEP accesses the sleep timer (remote

47).

3
EJECT ejects the disc from the disc slot.

4
TV/DVD switches to TV or DVD mode.

5
Channel Numbers directly tune channels.

6
JUMP selects or locates a specific point with the disc playback (digital sub-channel as a "dash").

7
DISPLAY displays setting or playback information (

8
AUDIO SELECT selects the DVD soundtrack language or VCD audio channel (

Page 63).

9
VOL + - adjusts the volume level.

10
CH


channels when no menu is on-screen (Page 34).

11
SUBTITLE selects the subtitle language or switches subtitle off (

12
INPUT/ZOOM selects the video input source (

Page 33); zooms into the center of the image during disc playback (

 13

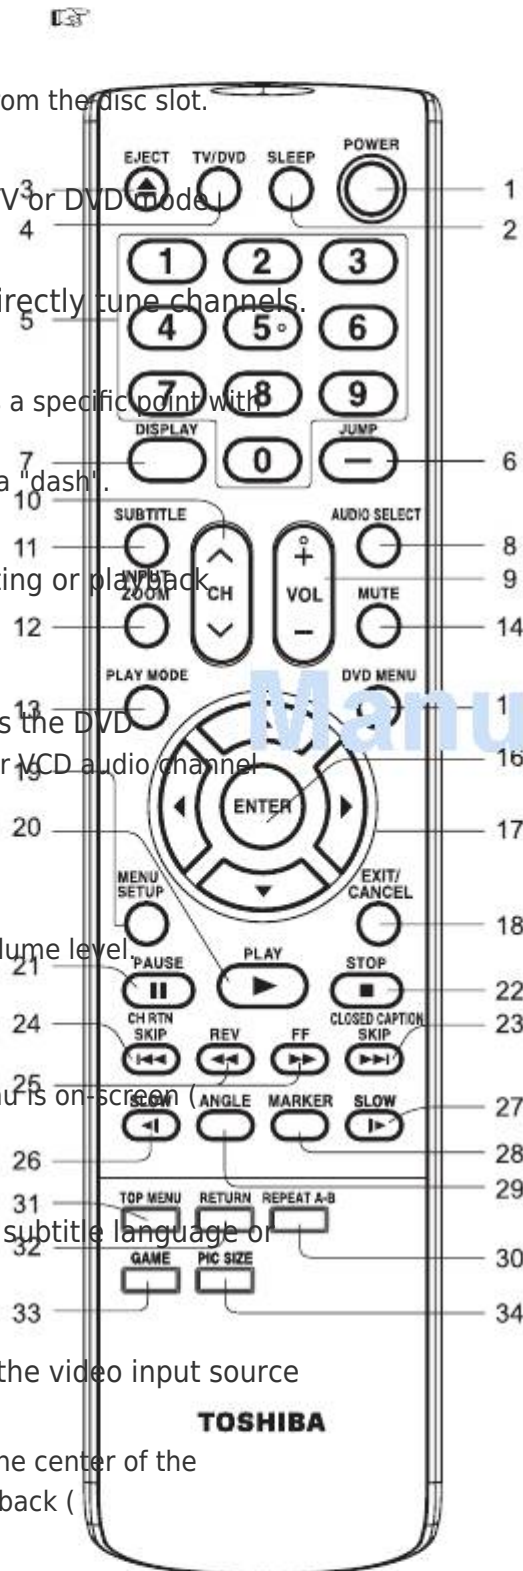

ManualsLib.com

PLAY MODE sets the disc playback repeat mode (

14

MUTE reduces or turns off the sound (Page 40).

15

DVD MENU accesses the DVD menu (Page 62).

16

ENTER activates highlighted items in the main menu system.

17

Arrow buttons (adjust programming menus when a menu is on-screen.

18

EXIT/CANCEL closes on-screen menus.

19

MENU/SETUP accesses the main TV menu system (playback settings (

20

PLAY begins playback of the loaded disc (Page 56).

21

PAUSE suspends disc playback temporarily or plays back disc frame by frame (56, 57).

22

STOP stops playback of the loaded disc (Page 56).

Page 59); tunes to a Page 49, 63).

cycles through programmed Page 63).

Page 59).

Page 60).


) select or

Page 27); configures the disc Page 70).

Page

Page

 25

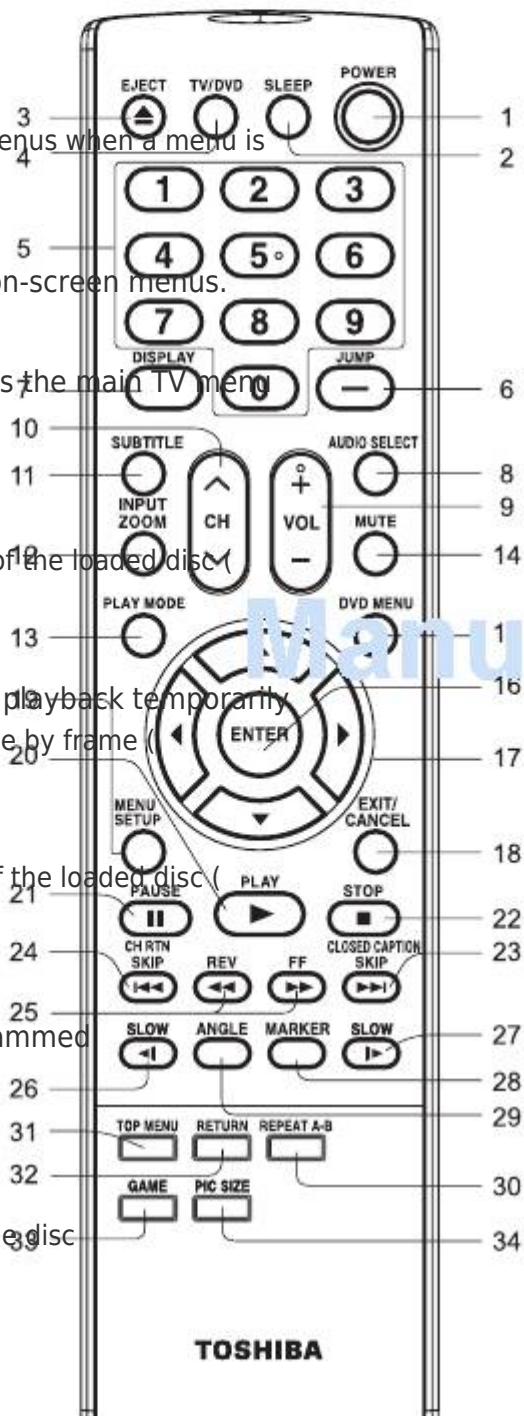

[Previous Page](#)
[Next Page](#)

1
...
22
23
24
25
26
27
28
29

Quick Links:

[Overview of Steps for Installing, Setting...](#)

Related Manuals for Toshiba 19C100UM

[LCD TV Toshiba 19C100UM Manual Del Usuario](#)

Televisor de lcd con alta definición integrada (60 pages)

[TV DVD Combo Toshiba 15CV100U Owner's Manual](#)

Integrated high definition lcd tv/dvd combination (95 pages)

[TV DVD Combo Toshiba 19CV100U Owner's Manual](#)

Integrated high definition lcd tv/dvd combination (88 pages)

[TV DVD Combo Toshiba 19CV100U Specifications](#)

720p lcd hdtv/dvd combo (2 pages)

[TV DVD Combo Toshiba 22CV100U Specifications](#)

720p lcd hdtv/dvd combo (2 pages)

[TV DVD Combo Toshiba 26CV100U Specifications](#)

720p lcd hdtv/dvd combo (2 pages)

[TV DVD Combo Toshiba 32CV100U Specifications](#)

720p lcd hdtv/dvd combo (2 pages)

[TV DVD Combo Toshiba 19LV505 Owner's Manual](#)

19/22-inch diagonal lcd tv/dvd combination (80 pages)

[TV DVD Combo Toshiba 19HLV87 Owner's Manual](#)

19-inch diagonal lcd tv/dvd combination (81 pages)

[TV DVD Combo TOSHIBA 24SLV411U Owner's Manual](#)

Integrated high definition lcd tv/dvd combination (337 pages)

[TV DVD Combo Toshiba 19SLV411U Owner's Manual](#)

Integrated high definition lcd tv/dvd combination (111 pages)

[TV DVD Combo Toshiba 19LV505 Service Manual](#)

19/22-inch diagonal lcd tv/dvd combination (156 pages)

[TV DVD Combo Toshiba 19DV713B Owner's Manual](#)

Lcd tv/dvd combination (89 pages)

[TV DVD Combo Toshiba 19DV733G Service Manual](#)

Lcd tv/dvd combination (76 pages)

[TV DVD Combo Toshiba 15DV703R Owner's Manual](#)

15, 19, 22, 26, 32-inch class lcd tv/dvd combination (61 pages)

[TV DVD Combo Toshiba 19DV555DB Service Manual](#)

19-inch diagonal lcd tv/dvd combination (176 pages)

Related Content for Toshiba 19C100UM

[24V4210U Learning About The Remote Control](#)

TOSHIBA 24V4210U

[32HLX95 Learning About The Remote Control](#)

Toshiba 32HLX95

[24V4210U Learning About The Remote Control](#)

Toshiba 24V4210U

[27HLV95 Learning About The Remote Control](#)

Toshiba 27HLV95

[23HLV86 Learning About The Remote Control](#)

Toshiba 23HLV86

[20HLV16 Learning About The Remote Control](#)

Toshiba 20HLV16

[19CV100U Learning About The Remote Control](#)

Toshiba 19CV100U

[REGZA 32HLV66 Learning About The Remote Control](#)

Toshiba REGZA 32HLV66

This manual is also suitable for:

[15cv100u15cv101u19cv100u22cv100u26cv100u32cv100u](#)