

Installing The Cpu Heatsink And Fan - Asus P7H55/USB3 User Manual

Atx motherboard

1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

 
15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70




•

Table of Contents

•

Bookmarks

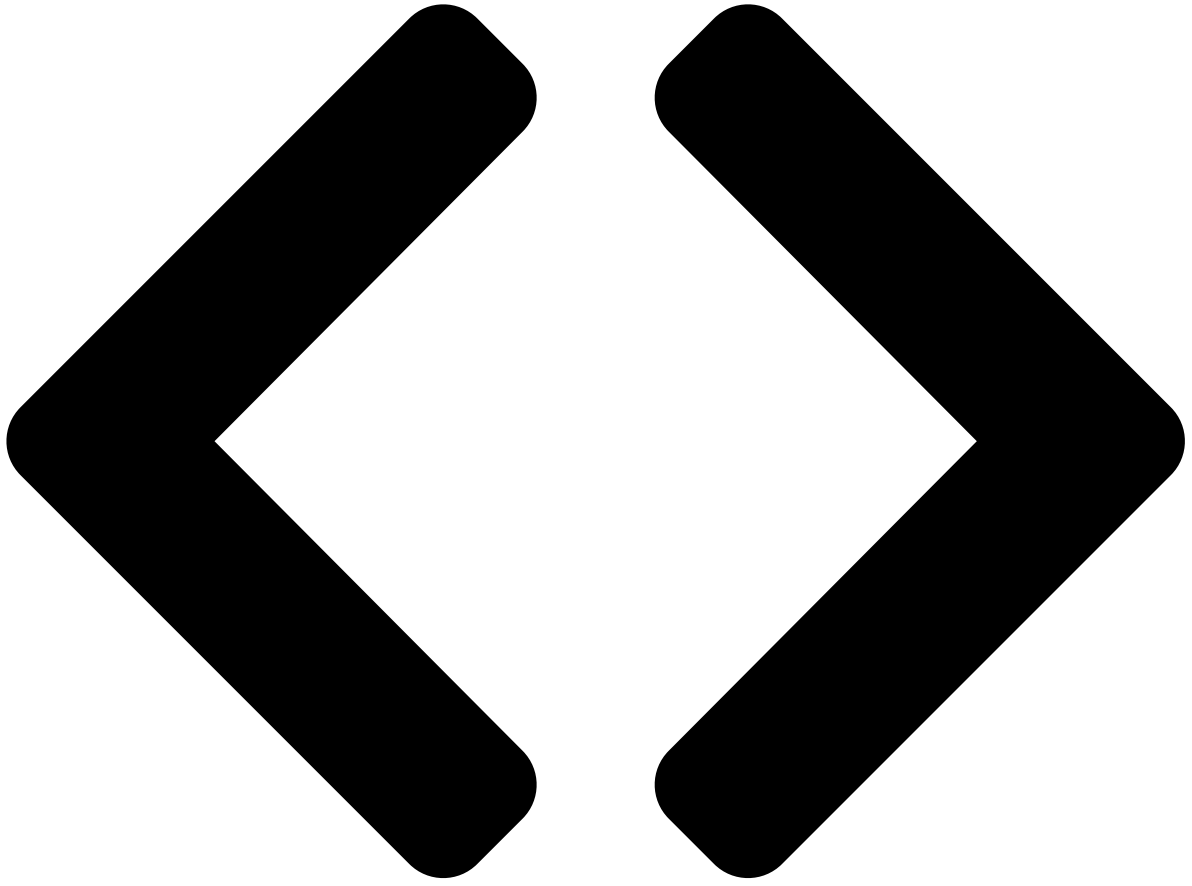

1.3.2

Installing the CPU heatsink and fan

The Intel

LGA1156 processor requires a specially designed heatsink and fan assembly to

®

ensure optimum thermal condition and performance.

- When you buy a boxed Intel
- Your Intel
- Use an LGA1156-compatible CPU heatsink and fan assembly only. The LGA1156 socket

If you purchased a separate CPU heatsink and fan assembly, ensure that the Thermal Interface Material is properly applied to the CPU heatsink or CPU before you install the heatsink and fan assembly.


Ensure that you have installed the motherboard to the chassis before you install the CPU fan and heatsink assembly.

To install the CPU heatsink and fan:

1.

Place the heatsink on top of the installed CPU, making sure that the four fasteners match the holes on the motherboard.

2.

Push down  two fasteners at a time in a diagonal sequence to secure the heatsink and fan assembly in place.

Orient the heatsink and fan assembly such that the CPU fan cable is closest to the CPU fan connector.

1-6

assembly. If you buy a CPU separately, ensure that you use only

Intel

 certified multi-directional heatsink and fan.

®

LGA1156 heatsink and fan assembly comes in a push-pin design and

®

requires no tool to install.

 is incompatible with the LGA775 and LGA1366 sockets in size and dimension.

processor, the package includes the CPU fan and heatsink

®

ManualsLib.com

Chapter 1: Product introduction

[Table of Contents](#)



[Previous Page](#)
[Next Page](#)

1
...
15
16
17
18
19
20
21
22

Quick Links:

[P7H55/Usb3 Specifications Summary](#)

[Motherboard Layout](#)

[Motherboard Overview](#)

[System Memory](#)

[Memory Configurations](#)

Related Manuals for Asus P7H55/USB3

[Motherboard Asus P7H55-M BR Manual Do Usuário](#)

User manual (50 pages)

[Motherboard Asus P7H55-M LE User Manual](#)

User manual (49 pages)

[Motherboard Asus P7H55-M LX USB3 User Manual](#)

User manual (49 pages)

[Motherboard Asus P7H55-M SI User Manual](#)

User manual (50 pages)

[Motherboard Asus MAXIMUS III EXTREME User Manual](#)

Rc bluetooth e5928 english version user manual (1 page)

[Motherboard Asus P7H55 User Manual](#)

Atx motherboard (66 pages)

[Motherboard Asus P7H55-M USB3 Bedienungsanleitung](#)

Uatx motherboard (76 pages)

[Motherboard ASUS P7H55-M User Manual](#)

(78 pages)

[Motherboard Asus P7H55D-M EVO User Manual](#)

Uatx motherboard (116 pages)

[Motherboard Asus P7H55D-M PRO User Manual](#)

Uatx motherboard (104 pages)

[Motherboard Asus P7H55 DVI User Manual](#)

User guide (110 pages)

[Motherboard ASUS P7H55-M User Manual](#)

(68 pages)

[Motherboard ASUS P7H57D-V EVO User Manual](#)

(128 pages)

[Motherboard Asus P7F-X SATA User Manual](#)

P7f-x series (136 pages)

[Motherboard Asus P7P55D-E LX User Manual](#)

User manual (70 pages)

[Motherboard Asus P7P55-M User Manual](#)

Microatx motherboard (68 pages)

Related Content for Asus P7H55/USB3

[P5N-VM WS Installing The Cpu Heatsink And Fan](#)

Asus P5N-VM WS

[Crosshair IV Extreme Installing The Cpu Heatsink And Fan](#)

Asus Crosshair IV Extreme

[P5QL Installing The Cpu Heatsink And Fan](#)

Asus P5QL

[P5VDC-TVM Installing The Cpu Heatsink And Fan](#)

Asus P5VDC-TVM

[PRIME B350-PLUS Installing The Cpu Heatsink And Fan Assembly](#)

Asus PRIME B350-PLUS

[KFN5-Q/SAS Installing The Cpu Heatsink And Fan](#)

Asus KFN5-Q/SAS

[KGPE-D16 Installing The Cpu Heatsink And Fan](#)

Asus KGPE-D16

[P5SD1-FM2 Installing The Cpu Heatsink And Fan](#)

Asus P5SD1-FM2

This manual is also suitable for:

P7h55-m dvi