



# Table Of Contents - Asus P7H55/USB3 User Manual

Atx motherboard



1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

68

69

70

- PAGE  
3  
OF 70 GO

•

[Table of Contents](#)

•

## Bookmarks







# Contents

[Notices](#)

.....  
vi

[Safety information](#)

..... vii

[About this guide](#)

..... viii

[P7H55/USB3 specifications summary](#)

[Chapter 1:](#)

1.1

[Before you proceed](#) ..... 1-1

1.2

[Motherboard overview](#) ..... 1-2

1.2.1

1.2.2

1.3

[Central Processing Unit \(CPU\)](#) ..... 1-3

1.3.1

1.3.2

1.3.3

1.4

[System memory](#) .....

1-8

1.4.1

1.4.2

1.4.3

1.4.4

1.5

[Expansion slot](#) ..... 1-17

1.5.1

1.5.2

1.5.3

1.5.4

1.5.5

1.6

[Jumpers](#) .....

1-18

1.7

<a href="#">Onboard switches</a> .....	1-19
1.8	
<a href="#">Connectors</a> .....	
1-21	
1.8.1	
1.8.2	
1.9	
<a href="#">Installing an operating system</a> .....	1-28
1.10	
<a href="#">Support DVD information</a> .....	1-28
1.10.1	
<a href="#">Chapter 2:</a>	
2.1	
<a href="#">Managing and updating your BIOS</a> .....	2-1
<a href="#">Product introduction</a>	
<a href="#">Motherboard layout</a> .....	1-2
<a href="#">Layout contents</a> .....	1-2
<a href="#">Installing the CPU</a> .....	1-3
<a href="#">Installing the CPU heatsink and fan</a> .....	1-6
<a href="#">Uninstalling the CPU heatsink and fan</a> .....	1-7
<a href="#">Overview</a> .....	1-8
<a href="#">Memory configurations</a> .....	1-9
<a href="#">Installing a DIMM</a> .....	1-16
<a href="#">Removing a DIMM</a> .....	1-16
<a href="#">Installing an expansion card</a> .....	1-17
<a href="#">Configuring an expansion card</a> .....	1-17
<a href="#">PCI slots</a> .....	1-17
<a href="#">PCI Express x1 slots</a> .....	1-17
<a href="#">PCI Express 2.0 x16 slots</a> .....	1-17
<a href="#">Rear panel connectors</a> .....	1-21
<a href="#">Internal connectors</a> .....	1-22
<a href="#">Running the support DVD</a> .....	1-28

# [BIOS setup](#)

iii

[Previous Page](#)  
[Next Page](#)

1  
2  
3  
4  
5  
6  
7

Quick Links:

[P7H55/Usb3 Specifications Summary](#)

[Motherboard Layout](#)

[Motherboard Overview](#)

[System Memory](#)

[Memory Configurations](#)

## Related Manuals for Asus P7H55/USB3

[Motherboard Asus P7H55-M BR Manual Do Usuário](#)

User manual (50 pages)

[Motherboard Asus P7H55-M LE User Manual](#)

User manual (49 pages)

[Motherboard Asus P7H55-M LX USB3 User Manual](#)

User manual (49 pages)

[Motherboard Asus P7H55-M SI User Manual](#)

User manual (50 pages)

[Motherboard Asus MAXIMUS III EXTREME User Manual](#)

Rc bluetooth e5928 english version user manual (1 page)

[Motherboard Asus P7H55 User Manual](#)

Atx motherboard (66 pages)

[Motherboard Asus P7H55-M USB3 Bedienungsanleitung](#)

Uatx motherboard (76 pages)

[Motherboard ASUS P7H55-M User Manual](#)

(78 pages)

[Motherboard Asus P7H55D-M EVO User Manual](#)

Uatx motherboard (116 pages)

[Motherboard Asus P7H55D-M PRO User Manual](#)

Uatx motherboard (104 pages)

[Motherboard Asus P7H55 DVI User Manual](#)

User guide (110 pages)

[Motherboard ASUS P7H55-M User Manual](#)

(68 pages)

[Motherboard ASUS P7H57D-V EVO User Manual](#)

(128 pages)

[Motherboard Asus P7F-X SATA User Manual](#)

P7f-x series (136 pages)

[Motherboard Asus P7P55D-E LX User Manual](#)

User manual (70 pages)

[Motherboard Asus P7P55-M User Manual](#)

Microatx motherboard (68 pages)

## Related Content for Asus P7H55/USB3

[PRIME Z270-K Table Of Contents](#)

Asus PRIME Z270-K

[Z170-P Table Of Contents](#)

Asus Z170-P

[Prime H270-PRO Table Of Contents](#)

Asus Prime H270-PRO

[PRIME Z270-P Table Of Contents](#)

Asus PRIME Z270-P

[PRIME Z370-P Table Of Contents](#)

Asus PRIME Z370-P

[970 PRO GAMING/AURA Table Of Contents](#)

Asus 970 PRO GAMING/AURA

[Pro WS X570-ACE Table Of Contents](#)

asus Pro WS X570-ACE

[PRIME Z390-P Table Of Contents](#)

Asus PRIME Z390-P



This manual is also suitable for:

P7h55-m dvi