



# Installing A Memory Card; Removing A Memory Card - Toshiba PSPB0U-00W008 User Manual

User manual



1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17  
18

 
## Table Of Contents

19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117

118  
119  
120  
121  
122  
123  
124  
125  
126  
127  
128  
129  
130  
131  
132  
133  
134  
135  
136  
137  
138  
139  
140  
141  
142  
143  
144  
145  
146  
147  
148  
149  
150  
151  
152  
153  
154  
155  
156  
157  
158  
159  
160  
161  
162  
163  
164  
165  
166  
167

168  
169  
170  
171  
172  
173  
174  
175



•




- 

Troubleshooting

•

## Bookmarks



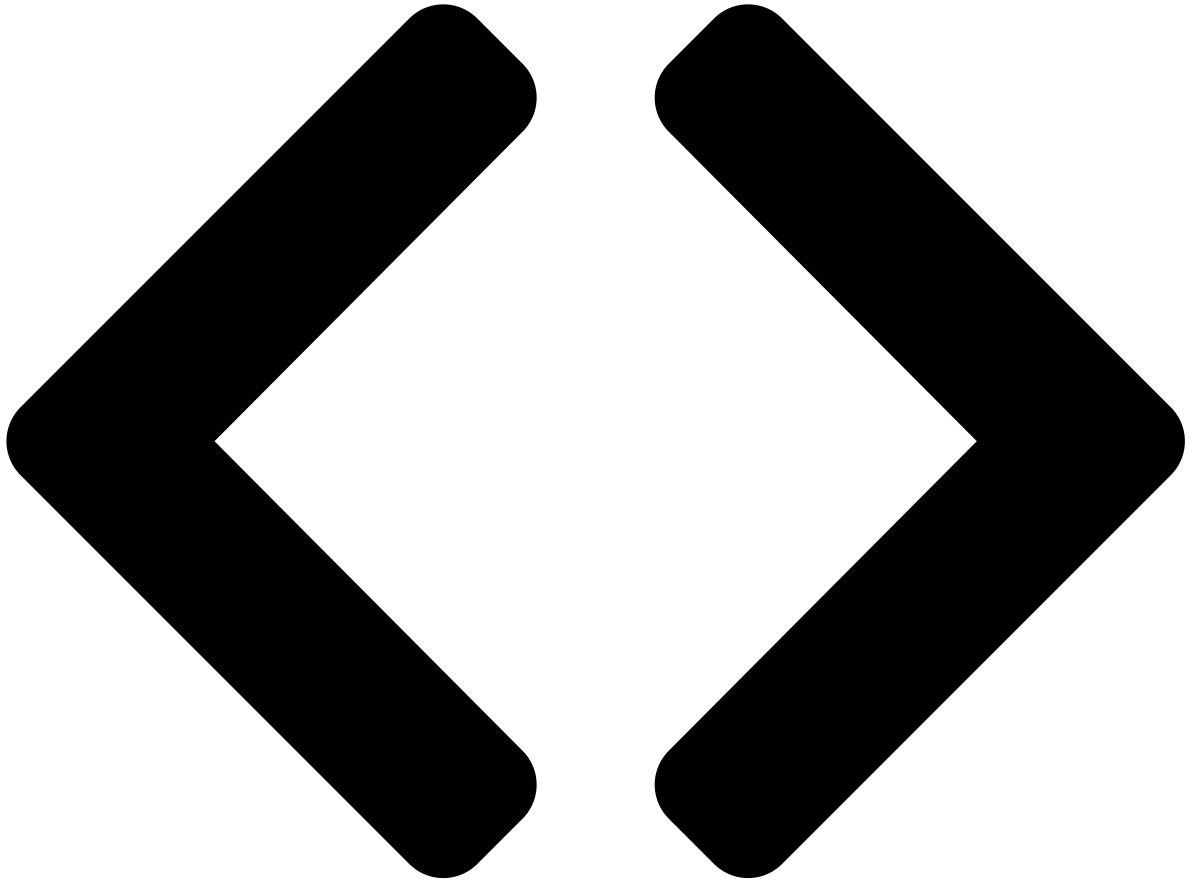 

## Installing a memory card

---

To install a memory card:

 
1. Insert the memory card.
2. Press gently to ensure a firm connection.

*Make sure the memory card is oriented properly before you insert it. If*

### *Windows*

*The multiple digital media card slot only accepts one type of card at a time.*

*Do not attempt to install more than one card as you risk damaging either the cards themselves or the computer.*

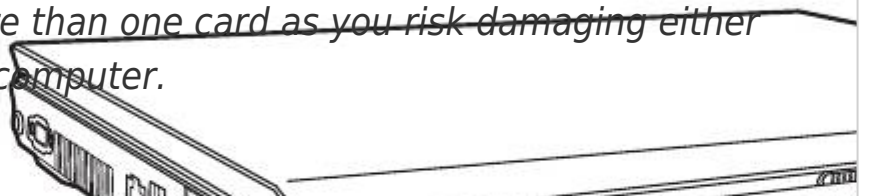

## Removing a memory card

---

To remove a memory card, follow the steps below:

1. Click the Safely Remove Hardware icon on the Taskbar.
2. Select a device, then click the Stop button. A confirmation dialog may appear, depending on how the device is registered with the system; if so, confirm that you want to remove the device.
3. Gently press the memory card inside the socket to eject it.
4. Grasp the card and remove it.

### User's Manual

#### *Inserting a memory card*

 
®

*fails to read the card, remove it then re-insert it.*

#### *Removing a memory card*

### Optional Devices

8-4

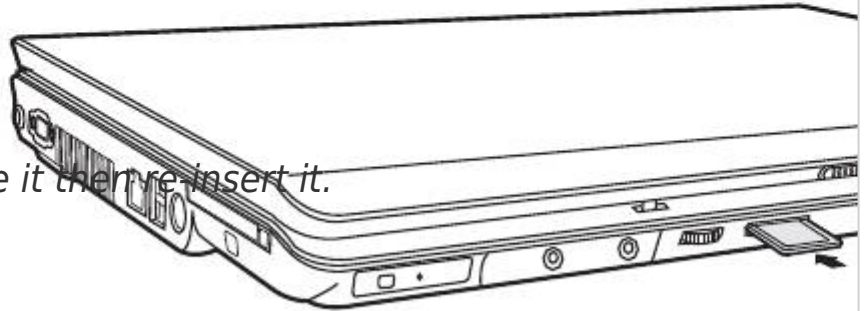

[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)

1

...

120

121

122

123



## Related Manuals for Toshiba PSPB0U-00W008

[Laptop Toshiba Satellite P200 Maintenance Manual](#)

(251 pages)

[Laptop Toshiba P205-S6277 User Manual](#)

P205-s6277 user's guide (242 pages)

[Laptop Toshiba Satellite P200 Series User Manual](#)

(238 pages)

[Laptop Toshiba Satellite P200 Series User Manual](#)

(220 pages)

[Laptop Toshiba Satellite Pro P200 Series User Manual](#)

(194 pages)

[Laptop Toshiba Satellite P200 Series User Manual](#)

Toshiba laptop user's manual p200 (194 pages)

[Laptop Toshiba Satellite P200 Series Maintenance Manual](#)

(193 pages)

[Laptop Toshiba P200 Series User Manual](#)

Toshiba dvd video player user's manual (183 pages)

[Laptop Toshiba P15-S4091 User Manual](#)

P15-s4091 user's guide (240 pages)

[Laptop Toshiba P25-S477 User Manual](#)

P25-s477 user's guide (232 pages)

[Laptop Toshiba P25-S509 User Manual](#)

P25-s509 user's guide (230 pages)

[Laptop Toshiba PSPB3U-01V00L Brochure](#)

Brochure (2 pages)

[Laptop Toshiba P300-ST3014 User Manual](#)

P300-st3014 user's guide (231 pages)

[Laptop Toshiba P500-ST5801 User Manual](#)

P500-st5801 user's guide (254 pages)

[Laptop Toshiba Satellite P30-132 User Manual](#)

Toshiba satellite p30-132: user guide (165 pages)

[Laptop Toshiba Satellite P20-8PW User Manual](#)

Toshiba satellite p20-8pw: user guide (142 pages)

## Related Content for Toshiba PSPB0U-00W008

[Satellite X200 Installing A Memory Card](#)

TOSHIBA Satellite X200

[Satellite E100 Installing The Memory Card](#)

Toshiba Satellite E100

[Satellite P200 Installing The Memory Card](#)

Toshiba Satellite P200

[Qosmio F50 Installing The Optional Memory Card](#)

Toshiba Qosmio F50

[Qosmio X300 Installing The Optional Memory Card](#)

Toshiba Qosmio X300

[Satellite P500 Installing A Memory Card](#)

TOSHIBA Satellite P500

[P300 Installing A Memory Card](#)

Toshiba P300

[Satellite M100 Series Installing A Memory Card](#)

Toshiba Satellite M100 Series

This manual is also suitable for:

[P200 series](#)