

Security Lock - Toshiba PSPB0U-00W008 User Manual

User manual

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18


Table Of Contents

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

 168
169
170
171
172
173
174
175



•

-

Troubleshooting

•

Bookmarks



Connecting

1. Make sure the connectors are properly aligned and plug the i.LINK (IEEE1394a) cable into the computer.
2. Plug the other end of the cable into the device.

Note the following when you use i.LINK:



You may need to install drivers for your i.LINK devices.



Not all i.LINK devices have been tested. Therefore, compatibility with all i.LINK devices cannot be guaranteed.

■ Use S100, S200 or S400 cables no longer than three meters.

■ Some devices might not support Sleep or automatic off functions.

■ Do not connect or disconnect an i.LINK device while it is using an application or when the computer is automatically shutting it down to save power. Data might be destroyed.

Disconnecting

1. Click the Safely Remove Hardware icon on the Task Bar.
2. Point to i.LINK (IEEE1394a) device and click.
3. Disconnect the cable from the computer then from the i.LINK device.

Refer also to the documentation that came with your i.LINK device.

Security lock

A security lock enables you to anchor your computer to a desk or other heavy object to help prevent unauthorized removal of the computer. Attach one end of a cable to the desk and the other end to the security lock slot on the right side of the computer.

User's Manual

Security lock

Optional Devices

8-15



ManualsLib.com

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1

...

131

132

133

134

Related Manuals for Toshiba PSPB0U-00W008

[Laptop Toshiba Satellite P200 Maintenance Manual](#)

(251 pages)

[Laptop Toshiba P205-S6277 User Manual](#)

P205-s6277 user's guide (242 pages)

[Laptop Toshiba Satellite P200 Series User Manual](#)

(238 pages)

[Laptop Toshiba Satellite P200 Series User Manual](#)

(220 pages)

[Laptop Toshiba Satellite Pro P200 Series User Manual](#)

(194 pages)

[Laptop Toshiba Satellite P200 Series User Manual](#)

Toshiba laptop user's manual p200 (194 pages)

[Laptop Toshiba Satellite P200 Series Maintenance Manual](#)

(193 pages)

[Laptop Toshiba P200 Series User Manual](#)

Toshiba dvd video player user's manual (183 pages)

[Laptop Toshiba P15-S4091 User Manual](#)

P15-s4091 user's guide (240 pages)

[Laptop Toshiba P25-S477 User Manual](#)

P25-s477 user's guide (232 pages)

[Laptop Toshiba P25-S509 User Manual](#)

P25-s509 user's guide (230 pages)

[Laptop Toshiba PSPB3U-01V00L Brochure](#)

Brochure (2 pages)

[Laptop Toshiba P300-ST3014 User Manual](#)

P300-st3014 user's guide (231 pages)

[Laptop Toshiba P500-ST5801 User Manual](#)

P500-st5801 user's guide (254 pages)

[Laptop Toshiba Satellite P30-132 User Manual](#)

Toshiba satellite p30-132: user guide (165 pages)

[Laptop Toshiba Satellite P20-8PW User Manual](#)

Toshiba satellite p20-8pw: user guide (142 pages)

Related Content for Toshiba PSPB0U-00W008

[PT930 Security Lock](#)

Toshiba PT930

[Satellite Pro R50-D Series Security Lock](#)

Toshiba Satellite Pro R50-D Series

[PORTEGE Z30-E Security Lock](#)

Toshiba PORTEGE Z30-E

[L70-B Security Lock](#)

Toshiba L70-B

[PORTEGE R30-A Series Security Lock](#)

Toshiba PORTEGE R30-A Series
[Satellite P75-A Security Lock](#)

Toshiba Satellite P75-A
[Satellite L855 Series Security Lock](#)

Toshiba Satellite L855 Series
[L50t Security Lock](#)

Toshiba L50t

This manual is also suitable for:

[P200 series](#)