

Sound System; Pointing Device - Toshiba PSPB0U-00W008 User Manual

User manual

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18


Table Of Contents

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

 168
169
170
171
172
173
174
175



•

-

Troubleshooting

•

Bookmarks



Problem

Monitor goes into panning mode



Sound system

Problem

No sound is heard

Pointing device

If you are using a USB mouse, also refer to the and to your mouse documentation.

TouchPad/Dual Mode Pad

Problem

On-screen pointer does not respond to Pad operation

Double-tapping does not work

User's Manual

Procedure

Check your monitor specification. It might not support the selected resolution and refresh rate.

The resolution on the monitor might go into panning mode when wide screen resolution is selected. Refer to Appendix B,

Procedure

Adjust the volume control dial.

Check the software volume settings.

If appropriate, make sure the headphone connection is secure. Check Windows Device Manager and ensure the sound function is enabled and that settings for I/O address, interrupt level and DMA are correct for your software and do not conflict with other hardware devices that you have connected to the computer.

If problems persist, contact your dealer.

Procedure

The system might be busy. If the pointer is shaped as an hourglass, wait for it to resume its normal shape and try again to move it. You may also press Fn + F9 to enable the TouchPad/Dual Mode Pad and then try again to move it.

Try changing the double-click speed setting in the mouse control utility.

1. Open the Control Panel, select the Mouse

icon and press Enter.

2. Click the Buttons tab.

3. Set the double-click speed as instructed and click OK.

Troubleshooting

Display

Modes.

USB

section in this chapter

9-9

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1

...

140

141

142

143

Related Manuals for Toshiba PSPB0U-00W008

[Laptop Toshiba Satellite P200 Maintenance Manual](#)

(251 pages)

[Laptop Toshiba P205-S6277 User Manual](#)

P205-s6277 user's guide (242 pages)

[Laptop Toshiba Satellite P200 Series User Manual](#)

(238 pages)

[Laptop Toshiba Satellite P200 Series User Manual](#)

(220 pages)

[Laptop Toshiba Satellite Pro P200 Series User Manual](#)

(194 pages)

[Laptop Toshiba Satellite P200 Series User Manual](#)

Toshiba laptop user's manual p200 (194 pages)

[Laptop Toshiba Satellite P200 Series Maintenance Manual](#)

(193 pages)

[Laptop Toshiba P200 Series User Manual](#)

Toshiba dvd video player user's manual (183 pages)

[Laptop Toshiba P15-S4091 User Manual](#)

P15-s4091 user's guide (240 pages)

[Laptop Toshiba P25-S477 User Manual](#)

P25-s477 user's guide (232 pages)

[Laptop Toshiba P25-S509 User Manual](#)

P25-s509 user's guide (230 pages)

[Laptop Toshiba PSPB3U-01V00L Brochure](#)

Brochure (2 pages)

[Laptop Toshiba P300-ST3014 User Manual](#)

P300-st3014 user's guide (231 pages)

[Laptop Toshiba P500-ST5801 User Manual](#)

P500-st5801 user's guide (254 pages)

[Laptop Toshiba Satellite P30-132 User Manual](#)

Toshiba satellite p30-132: user guide (165 pages)

[Laptop Toshiba Satellite P20-8PW User Manual](#)

Toshiba satellite p20-8pw: user guide (142 pages)

Related Content for Toshiba PSPB0U-00W008

[PT930 Sound System](#)

Toshiba PT930

[Satellite Pro R50-D Series Sound System And Video Mode](#)

Toshiba Satellite Pro R50-D Series

[Satellite Pro L70-B Series Sound System Problems](#)

Toshiba Satellite Pro L70-B Series

[Satellite Radius 12 P20W-C Sound System And Video Mode](#)

Toshiba Satellite Radius 12 P20W-C

[PORTEGE Z30-E Sound System And Video Mode](#)

Toshiba PORTEGE Z30-E

[L70-B Sound System And Video Mode](#)

Toshiba L70-B

[PORTEGE R30-A Series Sound System And Video Mode](#)

Toshiba PORTEGE R30-A Series

[Satellite P75-A Sound System And Video Mode](#)

Toshiba Satellite P75-A

This manual is also suitable for:

[P200 series](#)