

When Writing Or Rewriting - Toshiba PSPB0U-00W008 User Manual

User manual

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18


Table Of Contents

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

 168
169
170
171
172
173
174
175



•

-

Troubleshooting

•

Bookmarks





CD-RW can generally be rewritten about 1,000 times. However, the actual number of rewrites is affected by the quality of the media and the way it is used.



Be sure to connect the universal AC adapter when you write or rewrite.



Be sure to close all other software programs except the writing software.



Do not run software such as a screen saver which can put a heavy load on the CPU.



Operate the computer at full power. Do not use power-saving features.



Do not write while virus check software is running. Wait for it to finish, then disable virus detection programs including any software that checks files automatically in the background.



Do not use hard disk utilities, including those intended to enhance hard disk access speeds, as they may cause unstable operation and damage data.



Write from the computer's hard disk drive to the CD. Do not try to write from shared devices such as a LAN server or any other network device.



Writing with software other than TOSHIBA Disc Creator has not been confirmed. Therefore, operation with other software cannot be guaranteed.

ManualsLib.com

When writing or rewriting

Please observe/consider the following when you write or rewrite to a CD-R/RW disc.



Do not perform any of the following actions when writing or rewriting:





Do not use shut down/log off and Sleep/Hibernation while writing or rewriting



Make sure writing or rewriting is completed before going into Sleep/hibernation. Writing is completed if you can open the drive tray.



Set the computer on a level surface and avoid places subject to vibration such as airplanes, trains or cars. Do not use an unstable surface such as a stand.

User's Manual

Change users in the Windows Vista™ operating system.

Operate the computer for any other function, including using a mouse or TouchPad/Dual Mode Pad or closing/opening the LCD panel.

Start a communication application such as a modem.

Apply impact or vibration to the computer.

Install, remove or connect external devices such as USB devices, an external display, i.Link devices or optical digital devices.

Use the audio/video control button to reproduce music or voice.

Open the drive.

Operating Basics

4-25

[Previous Page](#)
[Next Page](#)

1
...
81
82
83
84
85
86
87
88

Related Manuals for Toshiba PSPB0U-00W008

[Laptop Toshiba Satellite P200 Maintenance Manual](#)

(251 pages)

[Laptop Toshiba P205-S6277 User Manual](#)

P205-s6277 user's guide (242 pages)

[Laptop Toshiba Satellite P200 Series User Manual](#)

(238 pages)

[Laptop Toshiba Satellite P200 Series User Manual](#)

(220 pages)

[Laptop Toshiba Satellite Pro P200 Series User Manual](#)

(194 pages)

[Laptop Toshiba Satellite P200 Series User Manual](#)

Toshiba laptop user's manual p200 (194 pages)

[Laptop Toshiba Satellite P200 Series Maintenance Manual](#)

(193 pages)

[Laptop Toshiba P200 Series User Manual](#)

Toshiba dvd video player user's manual (183 pages)

[Laptop Toshiba P15-S4091 User Manual](#)

P15-s4091 user's guide (240 pages)

[Laptop Toshiba P25-S477 User Manual](#)

P25-s477 user's guide (232 pages)

[Laptop Toshiba P25-S509 User Manual](#)

P25-s509 user's guide (230 pages)

[Laptop Toshiba PSPB3U-01V00L Brochure](#)

Brochure (2 pages)

[Laptop Toshiba P300-ST3014 User Manual](#)

P300-st3014 user's guide (231 pages)

[Laptop Toshiba P500-ST5801 User Manual](#)

P500-st5801 user's guide (254 pages)

[Laptop Toshiba Satellite P30-132 User Manual](#)

Toshiba satellite p30-132: user guide (165 pages)

[Laptop Toshiba Satellite P20-8PW User Manual](#)

Toshiba satellite p20-8pw: user guide (142 pages)

Related Content for Toshiba PSPB0U-00W008

[Satellite L630 Series When Writing Or Rewriting](#)

Toshiba Satellite L630 Series

[Satellite P500 When Writing Or Rewriting](#)

Toshiba Satellite P500

[Satellite L500 When Writing Or Rewriting](#)

Toshiba Satellite L500

[Satellite Pro R50-B Series When Writing Or Rewriting](#)

Toshiba Satellite Pro R50-B Series

[C70-B When Writing Or Rewriting](#)

Toshiba C70-B

[R30-C When Writing Or Rewriting](#)

Toshiba R30-C

[C70-C When Writing Or Rewriting](#)

Toshiba C70-C

[L70-C When Writing Or Rewriting](#)

Toshiba L70-C

This manual is also suitable for:

[P200 series](#)