



# Hotkeys - Toshiba PSPB0U-00W008 User Manual

User manual



1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17  
18

 
## Table Of Contents

19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117

118  
119  
120  
121  
122  
123  
124  
125  
126  
127  
128  
129  
130  
131  
132  
133  
134  
135  
136  
137  
138  
139  
140  
141  
142  
143  
144  
145  
146  
147  
148  
149  
150  
151  
152  
153  
154  
155  
156  
157  
158  
159  
160  
161  
162  
163  
164  
165  
166  
167

168  
169  
170  
171  
172  
173  
174  
175



•



- 

Troubleshooting

•

## Bookmarks





 
## Hotkeys

---

Fn + ESC

Fn + F1

Fn + F2



Fn + F3



Fn + F4

Fn + F5

*Default resolution for simultaneous mode is set to WXGA+ (1440 × 900). If you connect an RGB (Monitor) that is not WXGA+, change it in "Control Panel/Personalization/Display settings".*



Fn + F6

 
Fn + F7

Fn + F8

Fn + F9

Fn + Space

Fn + 1



Fn + 2



*Before using Fn + 1 and Fn + 2, you must install the TOSHIBA Zooming Utility. Please be aware that this 'zooming' function is only available within Microsoft Internet Explorer, Microsoft Office, Windows Media Player and Adobe Reader, and for the icons on the desktop.*

### User's Manual



Volume Mute - Turns the volume on and off.

Instant Security - Enters screen saver mode and blanks the screen. To restore your desktop, press any key or use the TouchPad/Dual Mode Pad.



Power Save Modes - Displays the power save modes and lets you change the power settings



Sleep - This hot key switches the system to Sleep mode.



Hibernate - This hot key switches the system to

Hibernate mode.

Display Selection - Changes displays.



Brightness Down



Brightness Up



Wireless Device Controls - Pressing this hot key allows you to switch between active wireless devices if the wireless communication switch is switched on.



TouchPad/Dual Mode Pad On/Off



Change Resolution - Cycles sequentially from the current resolution to 800 × 600 to 1024 × 768 and back again to the original resolution.



Zoom Out - To reduce the icon size on the desktop or the application window, press the 1 key while holding down the Fn key.



Zoom In - To enlarge the icon size on the desktop or the application window, press the 2 key while holding down the Fn key.

## The Keyboard

5-3

1.1.1

[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)

1  
...  
95  
96  
97  
98  
99  
100  
101  
102



## Related Manuals for Toshiba PSPB0U-00W008

[Laptop Toshiba Satellite P200 Maintenance Manual](#)

(251 pages)

[Laptop Toshiba P205-S6277 User Manual](#)

P205-s6277 user's guide (242 pages)

[Laptop Toshiba Satellite P200 Series User Manual](#)

(238 pages)

[Laptop Toshiba Satellite P200 Series User Manual](#)

(220 pages)

[Laptop Toshiba Satellite Pro P200 Series User Manual](#)

(194 pages)

[Laptop Toshiba Satellite P200 Series User Manual](#)

Toshiba laptop user's manual p200 (194 pages)

[Laptop Toshiba Satellite P200 Series Maintenance Manual](#)

(193 pages)

[Laptop Toshiba P200 Series User Manual](#)

Toshiba dvd video player user's manual (183 pages)

[Laptop Toshiba P15-S4091 User Manual](#)

P15-s4091 user's guide (240 pages)

[Laptop Toshiba P25-S477 User Manual](#)

P25-s477 user's guide (232 pages)

[Laptop Toshiba P25-S509 User Manual](#)

P25-s509 user's guide (230 pages)

[Laptop Toshiba PSPB3U-01V00L Brochure](#)

Brochure (2 pages)

[Laptop Toshiba P300-ST3014 User Manual](#)

P300-st3014 user's guide (231 pages)

[Laptop Toshiba P500-ST5801 User Manual](#)

P500-st5801 user's guide (254 pages)

[Laptop Toshiba Satellite P30-132 User Manual](#)

Toshiba satellite p30-132: user guide (165 pages)

[Laptop Toshiba Satellite P20-8PW User Manual](#)

Toshiba satellite p20-8pw: user guide (142 pages)

## Related Content for Toshiba PSPB0U-00W008

[Satellite 110 Series Chapter 15: The Hotkeys](#)

Toshiba Satellite 110 Series

[2010 Hotkeys](#)

Toshiba 2010

[2000 Hotkeys](#)

Toshiba 2000

[Satellite A80 Series Hotkeys](#)

Toshiba Satellite A80 Series

[Portégé M100 Hotkeys](#)

Toshiba Portégé M100

[TE2000 Hotkeys](#)

Toshiba TE2000

[Satellite M100 Series Hotkeys](#)

Toshiba Satellite M100 Series

[Satellite 5200 Series Hotkeys](#)

Toshiba Satellite 5200 Series

This manual is also suitable for:

[P200 series](#)