

 
Jumpers - Asus TS100-E7/PI4 User Manual

1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136



•

[Table of Contents](#)

•

Bookmarks



3.2

Jumpers

1.

Clear RTC RAM (CLRRTC1)

This jumper allows you to clear the Real Time Clock (RTC) RAM in CMOS. You can clear the CMOS memory of date, time, and system setup parameters by erasing the CMOS RTC RAM data. The onboard button cell battery powers the RAM data in CMOS, which include system setup information such as system passwords.

To erase the RTC RAM:

1.

Turn OFF the computer and unplug the power cord.

2.

Move the jumper cap from pins 1-2 (default) to pins 2-3. Keep the cap on pins 2-3 for about 5-10 seconds, then move the cap back to pins 1-2.

3.

Plug the power cord and turn ON the computer.

4.

Hold down the key during the boot process and enter BIOS setup to re-enter data.

Except when clearing the RTC RAM, never remove the cap on CLRTC jumper default position. Removing the cap will cause system boot failure!

If the steps above do not help, remove the onboard battery and move the jumper again to clear the CMOS RTC RAM data. After the CMOS clearance, reinstall the battery.

3-4

Chapter 3: Motherboard information

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
41
42
43
44
45
46
47
48

Related Manuals for Asus TS100-E7/PI4

[Software Asus ESC4000 User Manual](#)

System web-based management (78 pages)

[Desktop Asus TS100-E7/PI4 Configuration Manual](#)

(18 pages)

[Server Asus Pedestal Server TS100-E4/PI2 User Manual](#)

Asus ts100-e4/pi2 pedestal server user manual (158 pages)

[Server Asus TS100-E6 PI4 User Manual](#)

Manual de propietario (148 pages)

[Server Asus TS100-E5/PI4 - 0 MB RAM Configuration Manual](#)

Configuration guide (16 pages)

[Server Asus TS150-E2 User Manual](#)

Pedestal server (134 pages)

[Server Asus TS100-E8-PI4 User Manual](#)

Pedestal server (142 pages)

[Server ASUS E9331 Configuration Manual](#)

(16 pages)

[Server Asus TS100-E8-PI4 User Manual](#)

Pedestal server (20 pages)

[Server Asus TS110-E8-PI4 User Manual](#)

Pedestal server (146 pages)

[Server Asus TS100-E9-PI4 User Manual](#)

Pedestal server (140 pages)

[Server Asus TS100-E10-PI4 User Manual](#)

Pedestal server (138 pages)

[Server Asus TS100-E3 Manual](#)

Intel® pentium® 4/pentium® d lga775 pedestal pedestal server (152 pages)

[Server Asus TS700-X7/PS4 User Manual](#)

Pedestal/5u rackmount server (200 pages)

[Server Asus TS300-E5 - 0 MB RAM User Manual](#)

Intel xeon 3000/3200 series lga775 pedestal/5u server (208 pages)

[Server ASUS TS mini User Manual](#)

Home server (114 pages)

Related Content for Asus TS100-E7/PI4

[RS700-E8-RS4 V2 Jumpers](#)

Asus RS700-E8-RS4 V2

[RS540-E9-RS36-E Jumpers](#)

Asus RS540-E9-RS36-E

[ESC4000 DHD G4 Jumpers](#)

Asus ESC4000 DHD G4

[AAEON ZEUS-WHI0 Jumpers And Connectors](#)

Asus AAEON ZEUS-WHI0

[RS700-E7/RS4-C Jumpers](#)

Asus RS700-E7/RS4-C

[TS100-E3 Jumpers](#)

Asus TS100-E3

[RS720A-E9-RS12V2 Jumpers](#)

Asus RS720A-E9-RS12V2

[ESC4000 G4S Jumpers](#)

Asus ESC4000 G4S