

 
Asus Ez Flash Utility - Asus TS100-E7/PI4 User Manual

1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136



•

[Table of Contents](#)

•

Bookmarks



4.1.2

ASUS EZ Flash Utility

The ASUS EZ Flash Utility feature allows you to update the BIOS without having to use a DOS-based utility.

Before you start using this utility, download the latest BIOS from the ASUS website at www.asus.com.

To update the BIOS using EZ Flash Utility

1.

Insert the USB flash disk that contains the latest BIOS file to the USB port.

Enter the BIOS setup program. Go to the Tool menu to select ASUS EZ
2.

Flash Utility and press <Enter> to enable it.

ASUSTek EZ Flash BIOS ROM Utility V00.75

Flash Info

MODEL: P8B-X



Press <Tab> to switch to the Drive field.

3.

4.

Press the Up/Down arrow keys to find the USB flash disk that contains the latest BIOS, and then press <Enter>.

Press <Tab> to switch to the Folder Info field.

5.

6.

Press the Up/Down arrow keys to find the BIOS file, and then press <Enter> to perform the BIOS update process. Reboot the system when the update process is done.

ASUS TS100-E7/PI4


VER: 0303

[Up/PageDown/Home/End] Move

DATE: 02/17/2011

Exit

4-3

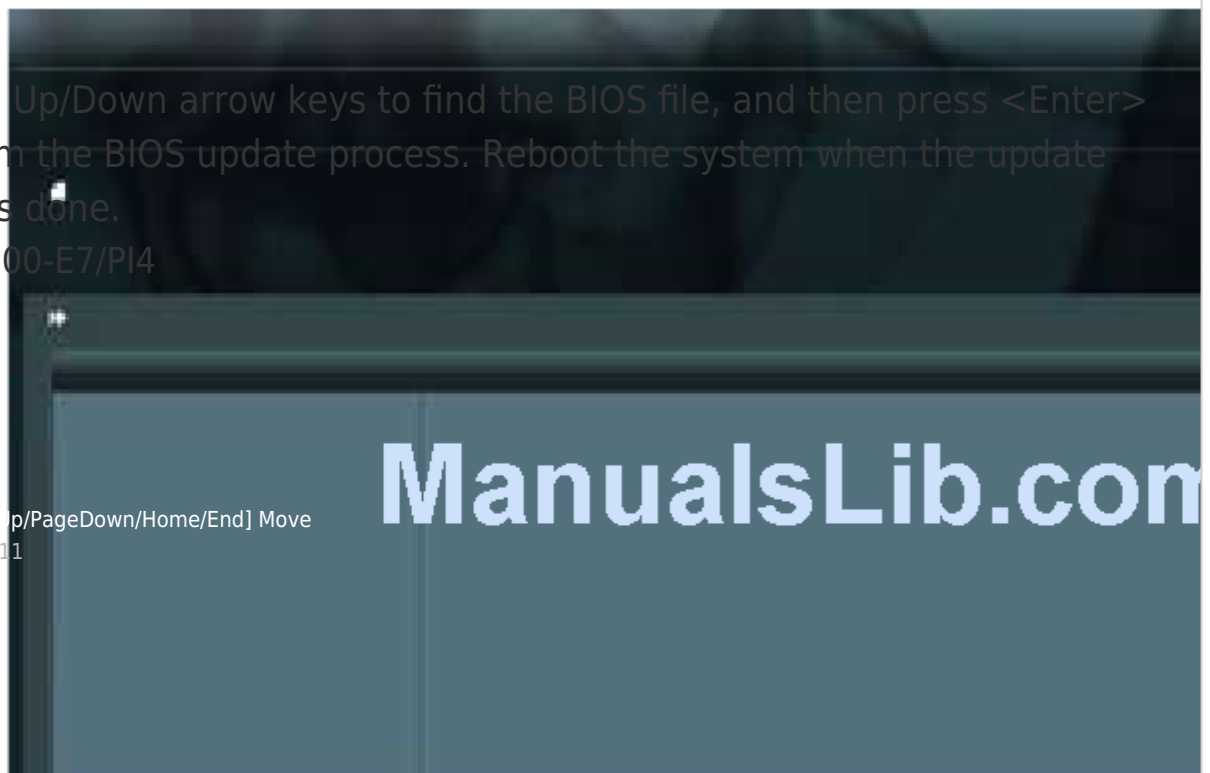

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
56
57
58
59
60
61
62
63

Related Manuals for Asus TS100-E7/PI4

[Software Asus ESC4000 User Manual](#)

System web-based management (78 pages)

[Desktop Asus TS100-E7/PI4 Configuration Manual](#)

(18 pages)

[Server Asus Pedestal Server TS100-E4/PI2 User Manual](#)

Asus ts100-e4/pi2 pedestal server user manual (158 pages)

[Server Asus TS100-E6 PI4 User Manual](#)

Manual de propietario (148 pages)

[Server Asus TS100-E5/PI4 - 0 MB RAM Configuration Manual](#)

Configuration guide (16 pages)

[Server Asus TS150-E2 User Manual](#)

Pedestal server (134 pages)

[Server Asus TS100-E8-PI4 User Manual](#)

Pedestal server (142 pages)

[Server ASUS E9331 Configuration Manual](#)

(16 pages)

[Server Asus TS100-E8-PI4 User Manual](#)

Pedestal server (20 pages)

[Server Asus TS110-E8-PI4 User Manual](#)

Pedestal server (146 pages)

[Server Asus TS100-E9-PI4 User Manual](#)

Pedestal server (140 pages)

[Server Asus TS100-E10-PI4 User Manual](#)

Pedestal server (138 pages)

[Server Asus TS100-E3 Manual](#)

Intel® pentium® 4/pentium® d lga775 pedestal pedestal server (152 pages)

[Server Asus TS700-X7/PS4 User Manual](#)

Pedestal/5u rackmount server (200 pages)

[Server Asus TS300-E5 - 0 MB RAM User Manual](#)

Intel xeon 3000/3200 series lga775 pedestal/5u server (208 pages)

[Server ASUS TS mini User Manual](#)

Home server (114 pages)

Related Content for Asus TS100-E7/PI4

[RS540-E9-RS36-E Asus Ez Flash Utility](#)

Asus RS540-E9-RS36-E

[ESC4000 DHD G4 Asus Ez Flash Utility](#)

Asus ESC4000 DHD G4

[RS700-E7/RS4-C Asus Ez Flash 2 Utility](#)

Asus RS700-E7/RS4-C

[RS720A-E9-RS12V2 Asus Ez Flash Utility](#)

Asus RS720A-E9-RS12V2

[ESC4000 G4S Asus Ez Flash Utility](#)

Asus ESC4000 G4S

[90SF00H1-M00080 Asus Ez Flash Utility](#)

Asus 90SF00H1-M00080

[RS500A-S6/PS4 Asus Ez Flash 2 Utility](#)

Asus RS500A-S6/PS4

[RS720A-E9-RS24-E Asus Ez Flash Utility](#)

Asus RS720A-E9-RS24-E