

 
Advanced Menu; Acpi Settings - Asus TS100-E7/PI4 User Manual

1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136



•

[Table of Contents](#)

•

Bookmarks



4.5

Advanced menu

The Advanced menu items allow you to change the settings for the CPU and other system devices.

Take caution when changing the settings of the Advanced menu items. Incorrect field values can cause the system to malfunction.



ACPI Settings

Trusted Computing

WHEA Configuration

CPU Configuration

North Bridge

South Bridge

SATA Configuration

Intel TXT(LT) Configuration

USB Configuration

Onboard Devices Configuration

APM

Serial Port Console Redirection

4.5.1

ACPI Settings

Setup Utility - Copyright (C) 2010 American Megatrends, Inc.

Enable ACPI Auto Configuration [Disabled]

ACPI Sleep State

Enable ACPI Auto Configuration [Disabled]

Allows you to enable or disable ACPI Auto Configuration.

Configuration options: [Disabled] [Enabled]

ACPI Sleep State [S3 (Suspend to RAM)]

Allows you to set the ACPI Sleep State.

Configuration options: [Suspend Disabled] [S1 (CPU Stop Clock)] [S3 (Suspend to

RAM)]

ASUS TS100-E7/PI4

Advanced

Advanced

[S3 (Suspend to RAM)]

System ACPI Parameters

Enables or Disables BIOS ACPI

[Table of Contents](#)

[Previous Page](#)

[Next Page](#)

1
...
66
67
68
69
70
71
72
73

Related Manuals for Asus TS100-E7/PI4

[Software Asus ESC4000 User Manual](#)

System web-based management (78 pages)

[Desktop Asus TS100-E7/PI4 Configuration Manual](#)

(18 pages)

[Server Asus Pedestal Server TS100-E4/PI2 User Manual](#)

Asus ts100-e4/pi2 pedestal server user manual (158 pages)

[Server Asus TS100-E6 PI4 User Manual](#)

Manual de propietario (148 pages)

[Server Asus TS100-E5/PI4 - 0 MB RAM Configuration Manual](#)

Configuration guide (16 pages)

[Server Asus TS150-E2 User Manual](#)

Pedestal server (134 pages)

[Server Asus TS100-E8-PI4 User Manual](#)

Pedestal server (142 pages)

[Server ASUS E9331 Configuration Manual](#)

(16 pages)

[Server Asus TS100-E8-PI4 User Manual](#)

Pedestal server (20 pages)

[Server Asus TS110-E8-PI4 User Manual](#)

Pedestal server (146 pages)

[Server Asus TS100-E9-PI4 User Manual](#)

Pedestal server (140 pages)

[Server Asus TS100-E10-PI4 User Manual](#)

Pedestal server (138 pages)

[Server Asus TS100-E3 Manual](#)

Intel® pentium® 4/pentium® d lga775 pedestal pedestal server (152 pages)

[Server Asus TS700-X7/PS4 User Manual](#)

Pedestal/5u rackmount server (200 pages)

[Server Asus TS300-E5 - 0 MB RAM User Manual](#)

Intel xeon 3000/3200 series lga775 pedestal/5u server (208 pages)

[Server ASUS TS mini User Manual](#)

Home server (114 pages)

Related Content for Asus TS100-E7/PI4

[RS540-E9-RS36-E Advanced Menu](#)

Asus RS540-E9-RS36-E

[ESC4000 DHD G4 Advanced Menu](#)

Asus ESC4000 DHD G4

[RS700-E7/RS4-C Advanced Menu](#)

Asus RS700-E7/RS4-C

[TS100-E3 Advanced Menu](#)

Asus TS100-E3

[RS720A-E9-RS12V2 Advanced Menu](#)

Asus RS720A-E9-RS12V2

[ESC4000 G4S Advanced Menu](#)

Asus ESC4000 G4S

[90SF00H1-M00080 Advanced Menu](#)

Asus 90SF00H1-M00080

[RS200-E9 Series Advanced Menu](#)

Asus RS200-E9 Series