



 
Sanyo PLC-WXU300 - 2500 Lumens Manual

Rs232 expand

1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73



•

[Table of Contents](#)

•

Bookmarks

Quick Links

[Download this manual](#) See also: [Owner's Manual](#), [Quick Reference Manual](#)



EXPAND SERIAL COMMAND FUNCTIONAL SPECIFICATIONS

PLC-WXU300

Ver. 1.00

SANYO Electric Co., Ltd

DS Company

Projector Division

Table of Contents

[Next Page](#)

1
2
3
4
5

Related Manuals for Sanyo PLC-WXU300 - 2500 Lumens

[Projector Sanyo PLC-WXU300K Owner's Manual](#)

Sanyo multimedia projector owner's manual (82 pages)

[Software Sanyo PLC-XU300 - XGA LCD Projector Owner's Manual](#)

Pj network manager for windows (32 pages)

[Projector Sanyo PLC-WXU300 - 2500 Lumens Manual](#)

Basic serial command specifications (23 pages)

[Projector Sanyo PLC-WXU300 - 2500 Lumens Brochure](#)

Ultra portable multimedia projector (2 pages)

[Projector Sanyo 3LCD PLC-WXU300 Quick Reference Manual](#)

Sanyo projector user manual (1 page)

[Projector Sanyo Plc-WXU300 Service Manual](#)

(118 pages)

[Projector Sanyo WXU30 - PLC - LCD Projector Owner's Manual](#)

Network set-up and operation (58 pages)

[Projector Sanyo PLC-WXU300 Specifications](#)

Ultra portable multimedia projector (2 pages)

[Projector Sanyo PLC-WXU300 Technical Information](#)

Sanyo lcd projector datasheet (1 page)

[Projector Sanyo PLC-WXU300 Dimensional Drawing](#)

Sanyo plc-wxu300 projector dimensional drawing (1 page)

[Projector Sanyo PLC-WXU300 Command List](#)

Ir command list (1 page)

[Projector Sanyo WXU30 - PLC - LCD Projector Owner's Manual](#)

Memory viewer function (13 pages)

[Projector Sanyo PLC-WXU30 Command List](#)

Ir command list (1 page)

[Projector Sanyo WXU30 - PLC - LCD Projector Owner's Manual](#)

Network set-up and operation (144 pages)

[Projector Sanyo PLC-WXU30 Service Manual](#)

Multimedia projector (130 pages)

[Projector Sanyo XU88 - PLC XGA LCD Projector Owner's Manual](#)

Instruction manual, plc-xu88 network set up (144 pages)

Summary of Contents for Sanyo PLC-WXU300 - 2500 Lumens

[Page 1](#) EXPAND SERIAL COMMAND FUNCTIONAL SPECIFICATIONS PLC-WXU300 Ver. 1.00
SANYO Electric Co., Ltd DS Company Projector Division...

[Page 2: Table Of Contents](#)

PLC-WXU300 Expand Serial Command Functional Specifications - CONTENTS - Overview		
.....7	Serial Interface Specification7
.....7	2.1 Transfer Specification8
.....7	2.2 Connection7
.....8	Notes for communication8
.....8	Name Definition8
.....9	Functional Execution Command Table9
.....9	Image Command Table9
.....9	PC Adjust Control Command Table9
.....9	Input Control Command Table9

.....9 Screen Command Table

[Page 3](#) PLC-WXU300 Expand Serial Command Functional Specifications 8.4.9 CF_PROGV Command 19 8.4.10 CF_NZRED Command 19 8.4.11 CF_IMAGE Command 20 8.4.12 CF_IMAGEADJ Command20 PC Adjust Control Command21 8.5.1 CF_FSYNC Command 21 8.5.2 CF_TDOTS Command 21 8.5.3 CF_CLAMP Command.....

[Page 4](#) PLC-WXU300 Expand Serial Command Functional Specifications 8.10.1 CF_LANG Command34 8.10.2 CF_MENUPOSITION Command34 8.10.3 CF_AUTOSUPPCADJ Command34 8.10.4 CF_AUTOSUPKEYSTONE Command 35 8.10.5 CF_INPUTSEARCH Command35 8.10.6 CF_AUTOSUP 35 8.10.7 CF_BACKGND Command35 8.10.8 CF_DISP Command

[Page 5](#) PLC-WXU300 Expand Serial Command Functional Specifications Transfer Example46 Operation Condition 46 Image Status Read Command47 9.4.1 CR_BRIGHT Command47 9.4.2 CR_CONT Command47 9.4.3 CR_COLOR Command 47 9.4.4 CR_TINT Command47 9.4.5 CR_SHARP Command

[Page 6](#) PLC-WXU300 Expand Serial Command Functional Specifications 9.8.1 CR_SCREEN Command57 9.8.2 CR_KYSTNMODE Command57 9.8.3 CR_VSCALE Command57 9.8.4 CR_VPOS Command57 9.8.5 CR_HSCALE Command58 9.8.6 CR_HPOS Command58 Lamp Status Read Command59 9.9.1 CR_LAMPREPL Command

[Page 7](#) PLC-WXU300 Expand Serial Command Functional Specifications 9.11.22 CR_RCODE Command66 9.11.23 CR_SECURITY Command 66 9.11.24 CR_KEYDIS Command66 9.11.25 CR_PJLOCKNOW Command67 9.11.26 CR_PJLOCKMENU Command67 9.11.27 CR_FANMODE Command 67 9.11.28 CR_FANCONTROL Command67 9.11.29 CR_FILH Command

[Page 8: Overview](#)

PLC-WXU300 Expand Serial Command Functional Specifications Overview 1.1 This Functional Specification defines communication functions for PLC-WXU300. 1.2 Compatible to Firmware Ver. 1.x of the projector. 1.3 Most commands can be used to control projector remotely from PC by RS-232C. Therefore, the commands are defined as Expand Serial Commands.

[Page 9: Notes For Communication](#)

PLC-WXU300 Expand Serial Command Functional Specifications Notes for communication 1. Expand Serial Command is defined as one command / one line that starts with "C" and ends with carriage return (0x0D) 2. There are two types of commands: Functional Execution Command and Status Read Command.

[Page 10: Functional Execution Command Table](#)

PLC-WXU300 Expand Serial Command Functional Specifications 5. Functional Execution Command Table 5.1 Image Command Table Execute command Item CF_BRIGHT_%1[CR] Set Brightness value CF_CONT_%1[CR] Set Contrast value CF_COLOR_%1[CR] Set Color value CF_TINT_%1[CR] Set Tint value CF_SHARP_%1[CR] Set Sharpness value CF_GAMMA_%1[CR] Set Gamma value CF_WBAL-R_%1[CR] Set White Balance Red value CF_WBAL-G_%1[CR]...

[Page 11: Screen Command Table](#)

PLC-WXU300 Expand Serial Command Functional Specifications 5.4 Screen Command Table Execute command Item CF_SCREEN_%1[CR] Select Screen size CF_DZCENT_%1[CR] Cancel Digital Zoom mode CF_KEYSTONE_%1[CR] Set Keystone CF_KYSTNMODE_%1[CR] Set Keystone Store mode CF_VSCALE_%1[CR] Set value of Vertical scale CF_VPOS_%1[CR] Set value of Vertical position CF_HSCALE_%1[CR] Set value of Horizontal scale CF_HPOS_%1[CR]...

[Page 12: Other Command Table](#)

PLC-WXU300 Expand Serial Command Functional Specifications 5.8 Other Command Table Execute command Item Behave the same as corresponding key of Projector / CF_KEYEMU_%1[CR] Remote control. CF_MENU_%1[CR] Switch ON/OFF of each Menu. CF_POWER_%1[CR] Switch ON/OFF of Power. CF_FREEZE_%1[CR] Set Freeze function.

CF_VMUTE_%1[CR] Set No show function.

[Page 13: Status Read Command Table](#)

PLC-WXU300 Expand Serial Command Functional Specifications 6. Status Read Command Table
6.1 Image Status Read Command Table Status read command Item CR_BRIGHT[CR] Get Brightness value CR_CONT[CR] Get Contrast value CR_COLOR[CR] Get Color value CR_TINT[CR] Get Tint value CR_SHARP[CR] Get Sharpness value CR_GAMMA[CR] Get Gamma value CR_WBAL-R[CR]...

[Page 14: Screen Status Read Command Table](#)

PLC-WXU300 Expand Serial Command Functional Specifications 6.5 Screen Status Read Command Table Status read command Item CR_SCREEN[CR] Get selected screen size CR_KYSTNMODE[CR] Get setting status of Keystone Store mode CR_VSCALE[CR] Get setting status of Vertical Scale CR_VPOS[CR] Get setting status of Vertical Position CR_HSCALE[CR] Get setting status of Horizontal Scale CR_HPOS[CR]...

[Page 15: Other Status Read Command](#)

PLC-WXU300 Expand Serial Command Functional Specifications CR_FILH[CR] Get Filter used time CR_FILREPL[CR] Get the information for Filter replacement time CR_FILTIMER[CR] Get time when Filter warning OSD is displayed 6.9 Other Status Read Command Status read command Item CR_STATUS[CR] Get setting status of Projector behavior CR_SIGNAL[CR] Get Signal Status if there is a signal or not CR_VMUTE[CR]...

[Page 16: Error Code Table](#)

PLC-WXU300 Expand Serial Command Functional Specifications 7. Error Code Table Error Code Contents -When the received data cannot be decoded -Parameter determination error (digit number error, including invalid value, etc.) The function is not available in the selected Mode Selected value is out of range (Not reflected) Command mismatched to Hardware (command for Optional function which is not installed) When reached upper or lower limit of increasing or...

[Page 17: Functional Execution Command](#)

PLC-WXU300 Expand Serial Command Functional Specifications 8. Functional Execution Command 8.1 Format PC issues commands in format as below: Pattern1 : "CF_COMMAND" [CR] Pattern2 : "CF_COMMAND_%1 [CR] CF_ : Header COMMAND : Character line %1 : Parameter (Character line) _ : Space (To separate COMMAND and Parameter) The projector decodes the received command and when it is ready to receive the next command, it returns the response.

[Page 18: Image Command](#)

PLC-WXU300 Expand Serial Command Functional Specifications 8.4 Image Command 8.4.1 CF_BRIGHT Command Command "CF_BRIGHT_%1"[CR] "000~063" ----- Directly select Brightness setting value "UP" ----- Current Brightness setting value + 1 "DN" ----- Current Brightness setting value - 1 Set Brightness value of user control The value set by this command will not be saved to projector.

[Page 19: Cf_Sharp Command](#)

PLC-WXU300 Expand Serial Command Functional Specifications 8.4.5 CF_SHARP Command Command "CF_SHARP_%1"[CR] "000~015" ----- Directly select Sharpness setting value "UP" ----- Current Sharpness setting value + 1 "DN" ----- Current Sharpness setting value - 1 Set Sharpness value of user control The value set by this command will not be saved to projector.

[Page 20: Cf_Coltemp Command](#)

PLC-WXU300 Expand Serial Command Functional Specifications 8.4.8 CF_COLTEMP Command Command "CF_COLTEMP_%1"[CR] "000" ----- Xlow "001" ----- Low "002" ----- Mid "003" ----- High Set Color Temperature. (Available only in the normal Power ON status) The value set by this command will not be saved to the projector. Therefore, when Details turning into Standby-mode or ALL is OFF, the value returns to original setting.

[Page 21: Cf_Image Command](#)

PLC-WXU300 Expand Serial Command Functional Specifications 8.4.11 CF_IMAGE Command Command "CF_IMAGE_%1"[CR] "DYNAMIC" ----- Dynamic (Fixed value to enable projection with a sharp, powerful picture tone) "STAND" ----- Standard (Image adjust value is set to factory

default) "REAL" ----- Real (Fixed value to display graphic image with natural tone)
"CINEMA"...

[Page 22: Pc Adjust Control Command](#)

PLC-WXU300 Expand Serial Command Functional Specifications 8.5 PC Adjust Control Command
8.5.1 CF_FSYNC Command Command "CF_FSYNC_%1"[CR] "0000~0031" ----- Directly
select Fine Sync setting value "UP" ----- Current Fine Sync setting value + 1 "DN"
----- Current Fine Sync setting value - 1 Set Fine Sync value of PC signal The
value set by this command will not be saved to projector.

[Page 23: Cf_H - Pos Command](#)

PLC-WXU300 Expand Serial Command Functional Specifications 8.5.4 CF_H - POS Command
Command "CF_H-POS_%1"[CR] "0000~nnnn" --- Directly select Horizontal Position setting value
"nnnn" shows maximum value, it is current Total Dots value - Display Dots value "UP" -----
- Current Horizontal Position setting value + 1 "DN"...

[Page 24: Cf_Dline Command](#)

PLC-WXU300 Expand Serial Command Functional Specifications 8.5.7 CF_DLINE Command
Command "CF_DLINE_%1"[CR] "0100~"nnnn" --- Directly select Display Line setting value
"nnnn" shows maximum value, it is current Total Line value - Vertical Position value "UP" -----
----- Current Display Line setting value + 1 "DN"...

[Page 25: Input Control Command](#)

PLC-WXU300 Expand Serial Command Functional Specifications 8.6 Input Control Command
8.6.1 CF_INPUT Command Command "CF_INPUT_%1"[CR] "COMPUTER1" ----- Select Computer1
Input "COMPUTER2" ----- Select Computer2 Input "HDMI" ----- Select HDMI Input
"VIDEO" ----- Select Video Input "S-VIDEO" ----- Select S-video "UP" -----
Switch Input setting forward When Computer 2 is selected in Terminal menu: Computer1 →...

[Page 26: Cf_Input1 Command](#)

PLC-WXU300 Expand Serial Command Functional Specifications When Input specified by %1 is
inappropriate for selected Input, the projector returns "101" and the command is not executed.
This command is available in normal Power ON status. Acceptable "000"[CR] Response
Unacceptable "Error Code"[CR] 8.6.3 CF_INPUT1 Command Command...

[Page 27: Cf_Input5 Command](#)

PLC-WXU300 Expand Serial Command Functional Specifications 8.6.7 CF_INPUT5 Command
Command "CF_INPUT5_%1"[CR] "S-VIDEO" ----- Select S-video Input Select S-video
input and source specified in %1 at once.. Details This command is available in normal Power
ON status. Acceptable "000"[CR] Response Unacceptable "Error Code"[CR] 8.6.8...

[Page 28: Cf_System Command](#)

PLC-WXU300 Expand Serial Command Functional Specifications 8.6.9 CF_SYSTEM Command
Command "CF_SYSTEM_%1"[CR] "VGA1" ----- Select VGA1 "XGA1" ----- Select XGA1
"WXGA3" ----- Select WXGA3 "1080I" ----- Select 1080I Input is "1035I" -----
Select 1035I Computer "720P" ----- Select 720P "575P" ----- Select 575P
"480P"...

[Page 29: Screen Control Command](#)

PLC-WXU300 Expand Serial Command Functional Specifications 8.7 Screen Control Command
8.7.1 CF_SCREEN Command Command "CF_SCREEN_%1"[CR] "NORMAL" ----- Select
Normal size "TRUE" ----- Select True size "FULL" ----- Select Full
screen size "CUSTOM" ----- Select Custom size Input is "DZOOM_UP" -----
Expand image size with Digital Zoom Computer "DZOOM_DN"...

[Page 30: Cf_Keystone Command](#)

PLC-WXU300 Expand Serial Command Functional Specifications 8.7.3 CF_KEystone Command
Command "CF_KEystone_%1"[CR] "UP" ----- Correct Keystone distortion to reduce upper
part of image "FUP" ----- Correct Keystone distortion to reduce upper part by 2steps "DN" ---
----- Correct Keystone distortion to reduce lower part of image "FDN"...

[Page 31: Cf_Vpos Command](#)

PLC-WXU300 Expand Serial Command Functional Specifications 8.7.6 CF_VPOS Command
Command "CF_VPOS_%1"[CR] "015" ----- +15 "014" ----- +14 ÿ "002" ----- +2 "001" ----
---- +1 "000" ----- +0 "-01" ----- -1 "-02" ----- -2 ÿ "-14" ----- -14 "-15" ----- -15
"UP"...

[Page 32: Cf_Hpos Command](#)

PLC-WXU300 Expand Serial Command Functional Specifications 8.7.8 CF_HPOS Command
Command "CF_HPOS_%1"[CR] "015" ----- +15 "014" ----- +14 ÿ "002" ----- +2 "001" ----
---- +1 "000" ----- +0 "-01" ----- -1 "-02" ----- -2 ÿ "-14" ----- -14 "-15" ----- -15
"UP"...

[Page 33: Lamp Command](#)

PLC-WXU300 Expand Serial Command Functional Specifications 8.8 Lamp Command 8.8.1
CF_LAMPMODE Command Command "CF_LAMPMODE_%1"[CR] "NORMAL" ----- Set lamp to
Normal mode status "ECO" ----- Set lamp to 3L mode status "UP" ----- Switch Lamp
mode forward "DN" ----- Switch Lamp mode backward Select Lamp Mode The value set
by this command is stored in EEPROM and its setting is effective Details...

[Page 34: Sound Command](#)

PLC-WXU300 Expand Serial Command Functional Specifications 8.9 Sound Command 8.9.1
CF_VOLUME Command Command "CF_VOLUME_%1"[CR] "000-063" ----- Directly
select Volume setting value "UP" ----- Current Volume setting value +1
"DN" ----- Current Volume setting value -1 Control Volume value The same
operation of Volume Up/Down as projector and RC, and directly select Volume setting value.

[Page 35: Setting Command](#)

PLC-WXU300 Expand Serial Command Functional Specifications 8.10 Setting Command 8.10.1
CF_LANG Command Command "CF_LANG_%1"[CR] "ENG" ----- Select English
"DEU" ----- Select German "FRA" ----- Select French "ITA" -----
----- Select Italian "ESP" ----- Select Spanish "POR" -----
Select Portuguese "NED" ----- Select Dutch "SVE"...

[Page 36: Cf_Autosetupkeystone Command](#)

PLC-WXU300 Expand Serial Command Functional Specifications 8.10.4
CF_AUTOSETUPKEYSTONE Command Command "CF_AUTOSETUPKEYSTONE_%1"[CR] "AUTO" ---
----- Set Auto Keystone function to Auto "MANUAL" ----- Set Auto Keystone
function to Manual "OFF" ----- Set Auto Keystone function to OFF Set Keystone
function of Auto setup This command is available in normal Power ON status.

[Page 37: Cf_Disp Command](#)

PLC-WXU300 Expand Serial Command Functional Specifications 8.10.8 CF_DISP Command
Command "CF_DISP_%1"[CR] "ON" ----- Select Display "OFF" -----
-- Cancel Display "CNTDWNOFF" ----- Count down OFF "UP" ----- Switch Display
mode forward ÿ On → Countdown OFF → Off → On →...ÿ "DN"...

[Page 38: Cf_Ceil Command](#)

PLC-WXU300 Expand Serial Command Functional Specifications 8.10.10 CF_CEIL Command
Command "CF_CEIL_%1"[CR] "ON" ----- Set Ceiling to ON "OFF" -----
Set Ceiling to OFF Set/Cancel Ceiling setting. The value set by this command is stored in
EEPROM and its setting is effective Details even after ALL is OFF This command is available in
normal Power ON status.

[Page 39: Cf_Terminal Command](#)

PLC-WXU300 Expand Serial Command Functional Specifications 8.10.14 CF_TERMINAL
Command Command "CF_TERMINAL_%1"[CR] "COMPUTER" -----Set Input mode
"MONITOR" ----- Set Monitor Out mode Set Terminal setup. This command is available
in normal Power ON status. Details Terminal means Computer 2 in this model. Acceptable
"000"[CR] "Error Code"[CR]...

[Page 40: Cf_Pipposition Command](#)

PLC-WXU300 Expand Serial Command Functional Specifications 8.10.17 CF_PIPPOSITION
Command Command "CF_PIPPOSITION_%1"[CR] "BTMRIGHT" ----- Move Subpicture to Bottom right "BTMLEFT" ----- Move Subpicture to Bottom left "TOPRIGHT" -----
----- Move Subpicture to Top right "TOPLEFT" ----- Move Subpicture to Top left "UP" ----- Switch Subpicture position forward ý...

[Page 41: Cf_P-Manetime Command](#)

PLC-WXU300 Expand Serial Command Functional Specifications 8.10.20 CF_P-MANETIME
Command Command "CF_P-MANETIME_%1"[CR] "01" ~ "30" ----- Directly select setting time by the minute "UP" ----- Plus one minute (01 → 02 → ý e ý e ý e → 30 → 01) ý...

[Page 42: Cf_Ccaptioncolor Command](#)

PLC-WXU300 Expand Serial Command Functional Specifications 8.10.23 CF_CCAPTIONCOLOR
Command Command "CF_CCAPTIONCOLOR_%1"[CR] "COLOR" ----- Select Color "WHITE" -----
Select White Select color of Closed caption. The status set with this command is stored in EEPROM and its setting is effective even after ALL is OFF. This command is available in normal Power ON status.

[Page 43: Cf_Pjpincode Command](#)

PLC-WXU300 Expand Serial Command Functional Specifications 8.10.26 CF_PJPINCODE
Command Command "CF_PJPINCODE_%1"[CR] "0000" - "9999" -----Set PJ PIN CODE directly
Set PJ PIN CODE to release PJ LOCK. PIN CODE cannot be changed by this command. -When PJ LOCK is in operation PIN CODE is correct ----- Command is valid (Acceptable) PIN CODE is incorrect ----- Command is invalid(Error Code"102") PIN CODE is out of %1 range ----- Command is invalid (Error Code "? ")

[Page 44: Cf_Filterimer Command](#)

PLC-WXU300 Expand Serial Command Functional Specifications 8.10.29 CF_FILTERIMER Command
Command "CF_FILTERIMER_%1"[CR] "100" ----- Set 100 hours "200" ----- Set 200 hours "300" ----- Set 300 hours "OFF" ----- No warning display "UP" -----
----- Switch Filter timer forward ý Off →100 → 200 → 300 → Off ý "DN"...

[Page 45: Other Command](#)

PLC-WXU300 Expand Serial Command Functional Specifications 8.11 Other Command 8.11.1
CF_KEYENU Command Command "CF_KEYENU_%1"[CR] "RIGHT" ----- Shift Pointer on OSD Menu to right "LEFT" ----- Shift Pointer on OSD Menu to left "UP" -----
----- Shift Pointer on OSD Menu to right "DN"...

[Page 46: Cf_Freeze Command](#)

PLC-WXU300 Expand Serial Command Functional Specifications 8.11.4 CF_FREEZE Command
Command "CF_FREEZE_%1"[CR] "ON" ----- Set Freeze to ON "OFF" -----
-- Set Freeze to OFF "UP" ----- Switch setting (On → Off → On → ý e ý e ý e)
"DN"...

[Page 47: Status Read Command](#)

PLC-WXU300 Expand Serial Command Functional Specifications 9. Status Read Command 9.1
Format PC issues commands in format as below: "CR_Command" [CR] Command: Character Line
When projector receives the appropriate command, it returns a character line as the required data "000ý ? "%1 [CR] %1: Required Data (Character Line).

[Page 48: Image Status Read Command](#)

PLC-WXU300 Expand Serial Command Functional Specifications 9.4 Image Status Read
Command 9.4.1 CR_BRIGHT Command Command "CR_BRIGHT"[CR] Details Get Brightness value of user control Acceptable "000_ý ý A "[CR] Response "000"~"063" Unacceptable "Error code"[CR] 9.4.2 CR_CONT Command Command "CR_CONT"[CR] Details Get Contrast value of user control Acceptable "000_ý...

[Page 49: Cr_Gamma Command](#)

PLC-WXU300 Expand Serial Command Functional Specifications 9.4.6 CR_GAMMA Command

Command "CR_GAMMA"[CR] Details Get Gamma value of user control Acceptable "000_%a"[CR] Response "000"~"015" Unacceptable "Error code"[CR] 9.4.7 CR_WBAL - R Command Command "CR_WBAL-R"[CR] Details Get White Balance Red value of user control Acceptable "000_%a"[CR] Response...

[Page 50: Cr_Nzred Command](#)

PLC-WXU300 Expand Serial Command Functional Specifications 9.4.11 CR_NZRED Command Command "CR_NZRED"[CR] Details Get setting status of Noise Reduction Acceptable "000_%1"[CR] "L1" ----- Noise Reduction for moving image Response "L2" ----- Noise Reduction for still image "OFF" ----- Noise Reduction is OFF Unacceptable "Error code"[CR] 9.4.12 CR_PROGV Command...

[Page 51: Pc Adjust Status Read Command](#)

PLC-WXU300 Expand Serial Command Functional Specifications 9.5 PC Adjust Status Read Command 9.5.1 CR_FSYNC Command Command "CR_FSYNC"[CR] Details Get Fine Sync value Acceptable "000_%a"[CR] "0000"~"0031" Response "Error Code"[CR] ----- When the command is invalid due to Unacceptable condition such as Input source "?"[CR] ----- When unclear command is received 9.5.2 CR_TDOTS Command...

[Page 52: Cr_V - Pos Command](#)

PLC-WXU300 Expand Serial Command Functional Specifications 9.5.5 CR_V - POS Command Command "CR_V POS"[CR] Details Get Vertical Position value Acceptable "000_%a"[CR] "0000"~"nnnn" (nnnn = Total Line - Display Line) Response "Error Code"[CR] ----- When the command is invalid due to Unacceptable condition such as Input source "?"[CR] ----- - When unclear command is received...

[Page 53: Video Status Read Command](#)

PLC-WXU300 Expand Serial Command Functional Specifications 9.6 Video Status Read Command 9.6.1 CR_SERSYS Command Command "CR_SERSYS"[CR] Get currently selected signal Details Returns auto-detected signal in Auto mode Only available for Video input. (N/A when Input is computer) Acceptable "000_%a"[CR] "1080I60" ----- 1080i 60Hz "1080I50"...

[Page 54: Input Status Read Command](#)

PLC-WXU300 Expand Serial Command Functional Specifications 9.7 Input Status Read Command 9.7.1 CR_INPUT Command Command "CR_INPUT"[CR] Details Get selected INPUT No. Acceptable "000_%1"[CR] Response Request data "1"- "5" Unacceptable "Error code"[CR] 9.7.2 CR_SOURCE Command Command "CR_SOURCE"[CR] Details Get selected Source Acceptable "000_%1"[CR] "ANALOG"...

[Page 55: Cr_Srcinp4 Command](#)

PLC-WXU300 Expand Serial Command Functional Specifications 9.7.6 CR_SRCINP4 Command Command "CR_SRCINP4" [CR] Details Get selected source of Input 4_Video Acceptable "000_%1"[CR] Response Request data "VIDEO" ----- Composite Video Input is selected Unacceptable "Error code"[CR] 9.7.7 CR_SRCINP5 Command Command "CR_SRCINP5" [CR] Details Get selected source of Input 5_S-video Acceptable...

[Page 56: Cr_Syslist Command](#)

PLC-WXU300 Expand Serial Command Functional Specifications "AUTO" ----- Auto is selected "1080i" ----- 1080i is selected "1035i" ----- 1035i is selected "720p" ----- 720p is selected Input is "575p" ----- 575p is selected Y,Pb/Cb,Pr "480p" ----- 480p is selected "575i" ----- 575i is selected "480i"...

[Page 57: Cr_Modelist Command](#)

PLC-WXU300 Expand Serial Command Functional Specifications 9.7.10 CR_MODELIST Command Command "CR_MODELIST"[CR] Details Get selectable Mode titles Acceptable "000_%1_%2_..._%x" [CR] Returns Error code "101" when Input is other than PC-Analog Returns Error code "101" when Input is PC-Analog but no signal When Input is PC-Analog and signal is found, returns selectable Mode among Mode1 -...

[Page 58: Screen Status Read Command](#)

PLC-WXU300 Expand Serial Command Functional Specifications 9.8 Screen Status Read Command 9.8.1 CR_SCREEN Command Command "CR_SCREEN"[CR] Details Get selected on-screen image size Acceptable "000_%a"[CR] "NORMAL" ----- Normal mode is selected "TRUE" ----- True mode is selected Input "FULL" ----- Full mode is selected "CUSTOM"...

[Page 59: Cr_Hscale Command](#)

PLC-WXU300 Expand Serial Command Functional Specifications 9.8.5 CR_HSCALE Command Command "CR_HSCALE"[CR] Details Get setting status of Horizontal Scale Store Mode Acceptable "000_%1"[CR] Response "-32" ~ "032" Unacceptable "Error code"[CR] 9.8.6 CR_HPOS Command Command "CR_HPOS"[CR] Details Get setting status of Horizontal Position Store Mode Acceptable "000_%1"[CR] Response...

[Page 60: Lamp Status Read Command](#)

PLC-WXU300 Expand Serial Command Functional Specifications 9.9 Lamp Status Read Command 9.9.1 CR_LAMPREPL Command Command "CR_LAMPREPL"[CR] Details Get information of Lamp Replacement time Acceptable "000_%1"[CR] "1Y" ----- Over lamp replacement time "1N" ----- Within lamp replacement time "1" means the number of lamps. Response (1 lamp model→...

[Page 61: Cr_Lampmsts Command](#)

PLC-WXU300 Expand Serial Command Functional Specifications 9.9.5 CR_LAMPMSTS Command Command "CR_LAMPSTS"[CR] Details Get Lighting status of lamp Acceptable "000_%1"[CR] "ÿ N **** " A number of * should be among 1-4. First character shows how many lamps are incorporated in projector.

[Page 62: Sound Status Read Command](#)

PLC-WXU300 Expand Serial Command Functional Specifications 9.10 Sound Status Read Command 9.10.1 CR_VOLUME Command Command "CR_VOLUME"[CR] Details Get Volume value of user control Acceptable "000_%a"[CR] Response "000"~"063" Unacceptable "Error code"[CR] 9.10.2 CR_MUTE Command Command "CR_MUTE"[CR] Details Get sound mute setting status Acceptable "000_%a"[CR] "ON"...

[Page 63: Setting Status Read Command](#)

PLC-WXU300 Expand Serial Command Functional Specifications 9.11 Setting Status Read Command 9.11.1 CR_LANG Command Command "CR_LANG"[CR] Details Get selected language Acceptable "000_%a"[CR] "ENG" ----- English is selected "DEU" ----- -- German is selected "FRA" ----- French is selected "ITA" ----- Italian is selected "ESP"...

[Page 64: Cr_Backgnd Command](#)

PLC-WXU300 Expand Serial Command Functional Specifications 9.11.5 CR_BACKGND Command Command "CR_BACKGND" [CR] Details Get setting status of Screen for no signal Acceptable "000_%1" [CR] "BLUE" ----- Blue Back is selected Response "USER" ----- ----- User is selected "BLACK" ----- Black Back is selected Unacceptable "Error Code"...

[Page 65: Cr_Hdmi Setup Command](#)

PLC-WXU300 Expand Serial Command Functional Specifications 9.11.10 CR_HDMI SETUP Command Command "CR_HDMI SETUP"[CR] Details Get status of Image mode in HDMI setup Acceptable "000_%1"[CR] "NORMAL" ----- Image mode is Normal Response "ENHANCED" ----- Image mode is Enhanced Unacceptable "Error code"[CR] 9.11.11 CR_HDMI SETUPSOUND Command Command "CR_HDMI SOUND"[CR]...

[Page 66: Cr_Pipposition Command](#)

PLC-WXU300 Expand Serial Command Functional Specifications 9.11.15 CR_PIPPOSITION Command Command "CR_PIPPOSITION" [CR] Details Get position of Subpicture in Picture in Picture Acceptable "000_%1"[CR] "BTMRIGHT" ----- Subpicture is Bottom right "BTMLEFT" ----- Subpicture is Bottom left Response "TOPRIGHT" ----- Subpicture is Top right "TOPLEFT"...

[Page 67: Cr_Ccaptiondisp Command](#)

PLC-WXU300 Expand Serial Command Functional Specifications 9.11.20 CR_CCAPTIONDISP Command Command "CR_CCAPTIONDISP"[CR] Details Get selected channel of Closed caption Acceptable "000_%a"[CR] "OFF" ----- Off "CC1" ----- CC1 is selected Response "CC2" ----- - CC2 is selected "a" "CC3"----- CC3 is selected "CC4"...

[Page 68: Cr_Pjlocknow Command](#)

PLC-WXU300 Expand Serial Command Functional Specifications 9.11.25 CR_PJLOCKNOW Command Command "CR_PJLOCKNOW" [CR] Details Get if PJ lock is actually in operation Acceptable "000_%1[CR] "LOCK" ----- PJ Lock is in operation. PJ Lock status is ON-1 or ON-2 on Menu, and PJ PIN CODE is not entered so that projector is actually locked.

[Page 69: Cr_Filrepl Command](#)

PLC-WXU300 Expand Serial Command Functional Specifications 9.11.30 CR_FILREPL Command Command "CR_FILREPL"[CR] Details Get the information of Filter replacement time Acceptable "000_%1"[CR] "1Y" ----- Over filter replacement time Response "1N" ----- Within filter replacement time Unacceptable "Error Code"[CR] 9.11.31 CR_FILTIMER Command Command "CR_FILTIMER"...

[Page 70: Other Status Read Command](#)

PLC-WXU300 Expand Serial Command Functional Specifications 9.12 Other Status Read Command 9.12.1 CR_STATUS Command Command "CR_STATUS"(CR) Get status of Projector behavior. Details This command affects the same as "CR0" of Basic Serial command, but this has an error code. Acceptable "000_%1"[CR] "00"= Power ON "80"= Stand by...

[Page 71: Cr_Ptimer Command](#)

PLC-WXU300 Expand Serial Command Functional Specifications 9.12.5 CR_PTIMER Command Command "CR_PTIMER"[CR] Details Get status of Presentation Timer Acceptable "000_%a"[CR] "ON" ----- Presentation timer is in operation Response "STOP" ----- Presentation timer is paused "OFF" ----- Presentation timer is not operating Unacceptable "Error code"[CR] 9.12.6 CR_TEMPWARN Command...

[Page 72: Cr_Temp Command](#)

PLC-WXU300 Expand Serial Command Functional Specifications 9.12.7 CR_TEMP Command Command "CR_TEMP"[CR] Get current temperature inside a projector. Details If there are several sensors installed, it is possible to get information from all the sensors at once. Acceptable "000_%1_%2_%3"[CR] %1= Sensor 1 temperature (Outside temperature) %2= Sensor 2 temperature (Inside temperature1) %3= Sensor 3 temperature (Inside temperature2) %1,%2 are consists of 6 bites fixed...

[Page 73: Cr_Tempfail Command](#)

PLC-WXU300 Expand Serial Command Functional Specifications 9.12.8 CR_TEMPFAIL Command Command "CR_TEMPFAIL"[CR] Get the temperature inside a projector when abnormal temperature occurs. Details If there are several sensors installed, it is possible to get information from all the sensors at once. Acceptable "000_%a_%b_%c"[CR] %a ----- Sensor 1 temp.

This manual is also suitable for: