



# **TOSHIBA**

Toshiba VX1A00016500 Quick Setup Manual



1  
2

--

•

Bookmarks

--

[Download this manual](#)

### Quick Links



VX1A00016500

## Simple at-a-glance reference of your remote control

*To mute the sound*

*To return to the previous programme*

*Widescreen viewing*

*On-screen Menus*

*No function on this model*

*No function on this model*

*When using a TOSHIBA VCR or DVD:*

**m**  
press

**r**  
to PAUSE/STEP





press

to PLAY

press

q

to REWIND

press

S

to FAST FORWARD

## W

press

to EJECT

press

to STOP

p

press I

q

to SKIP-REWIND

press

S

I to SKIP-FORWARD

### Number buttons

To select mode

Remove the back cover to insert the batteries, make sure they are inserted the right way round.

Suitable battery types for this remote are:

AAA, IEC R03 1.5V.

For On/Standby mode

To select input from external sources

Selectable picture preferences

To exit Menus

Navigation Ring:

Use P

and P

to change programme

f

e

positions and text pages

Use

- and

+ to alter the volume

j

j

When using menus press up, down, left

and right to move the cursor on the

screen. OK to confirm your selection



Text control buttons  
To display on-screen information  
Stereo/bilingual transmissions  
When in TV mode:  
Time display

/

8

9

To call up text

/

6

7

When in Text mode:  
To reveal concealed text

r

To hold a wanted page

q

To enlarge text display size

S

To select a page whilst viewing a


/

8

9

normal picture

Printed on recycled paper.  
100% Chlorine free.

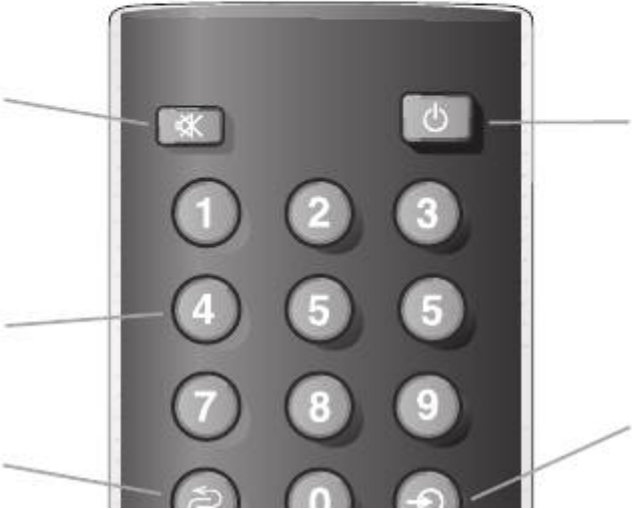

[Next Page](#)

1  
2

## Related Manuals for Toshiba VX1A00016500

[LCD TV Toshiba WL68 Owner's Manual](#)

(196 pages)

## Summary of Contents for Toshiba VX1A00016500

[Page 1](#) Text control buttons To select mode To display on-screen information No function on this model Stereo/bilingual transmissions No function on this model When using a TOSHIBA VCR or DVD: When in TV mode: Time display press to PAUSE/STEP To call up text...

[Page 2](#) TOSHIBA Auto Tune – WL68 Plug the aerial directly into the AERIAL INPUT on the television set. Ensure all other products are in standby before continuing. Connect the television to the mains, the red LED will light up. The Quick Setup screen will appear, this may take a few moments.

This manual is also suitable for:

Ct-865WL68