



Toshiba SD-R1512 User Manual

Cd-rw/dvd-rom combo drive

1	
Table Of Contents	
2	
3	
4	
5	
6	
7	
8	
9	
10	
11	
12	
13	
14	
15	
16	
17	

--	--

•

[Table of Contents](#)

-

Troubleshooting

•


Bookmarks

--

Quick Links

[1 Specifications](#)

[Download this manual](#)

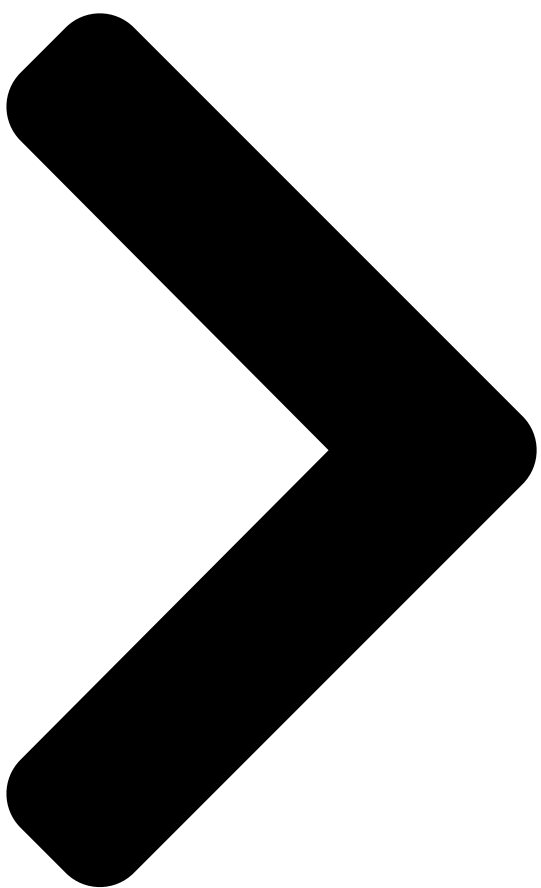

TOSHIBA AMERICA INFORMATION SYSTEMS
STORAGE DEVICE DIVISION
IRVINE, CALIFORNIA

SD-R1512 TOSHIBA

**CD-RW/DVD-ROM COMBO DRIVE
USER MANUAL**



[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba SD-R1512

[CD/CDR Drive Toshiba SD-R1002 Installation Instructions Manual](#)

Cd-rw/dvd-rom drive (12 pages)

[CD/CDR Drive Toshiba SD-R2102 User Manual](#)

Cd-rw/dvd-rom combination mobile drive (12 pages)

[CD/CDR Drive Toshiba SD-R2212 User Manual](#)

Cd-rw/dvd-rom combination mobile drive (12 pages)

[CD/CDR Drive Toshiba SD-R2412 User Manual](#)

Cd-rw/dvd-rom combination mobile drive (12 pages)

[CD/CDR Drive Toshiba SR-C8002 Product Specification](#)

Cd-r/cd-rw drive (31 pages)

[CD/CDR Drive Toshiba SR-M8102 User Manual](#)

Cd-r/cd-rw drive (16 pages)

[CD/CDR Drive Toshiba XM-6401B Instruction Manual](#)

(35 pages)

[CD/CDR Drive Toshiba XM-6702B User Manual](#)

(12 pages)

[CD/CDR Drive Toshiba XM-6802B User Manual](#)

Cd-rom drive (15 pages)

Summary of Contents for Toshiba SD-R1512

[Page 1](#) TOSHIBA AMERICA INFORMATION SYSTEMS STORAGE DEVICE DIVISION IRVINE, CALIFORNIA SD-R1512 CD-RW/DVD-ROM COMBO DRIVE USER MANUAL...

[Page 2: Table Of Contents](#)

CONTENTS Introduction.....1 Setup3 Using the Combo Drive6
Troubleshooting.....9 Specifications10 Drive Connectors.....14...

[Page 3: Introduction](#)

INTRODUCTION - SD-R1512 General Features Reads and records digital data on CD-R/-RW discs
3-way Disc Eject (eject button, software, emergency eject hole) Average Random Access Time
100ms DVD-ROM 120ms DVD-RAM 180ms Horizontal or Vertical Mount 2MByte Buffer Playback
interchangeability for CD-ROM and DVD-ROM discs Regionalization (RPC2 compliance) (DVD)
BUS Interface - ATAPI Types of Disc Formats Supported - Write...

[Page 4](#) Front Panel Figure 1.SD-R1512 DVD Writeable Drive Front Panel Loading Load disc
using tray. Tray The LED lights green or amber when the drive is operating (LED is amber when
drive is Busy Light writing.) Eject The Eject button is used to open the disc tray so you can
install or remove a disc. Button Emergency The emergency eject hole is to be used only when
the Loading Tray will not open when...

[Page 5: Setup](#)

SETUP - SD-R1512 The following steps must be performed to properly install your drive: • Set
Drive Jumper Settings • Connect Audio Cable • Attach IDE BUS Cable • Attach Power Cable •
Mount Drive Jumper Settings The mode select jumpers are 6 straight angle pins located on the
rear of the Combo drive. By placing a jumper on the pins, you can select the following functions:
Drive is configured using host interface signal CSEL Configures drive as Slave...

[Page 6](#) If the Combo drive is replacing a CD-ROM or DVD-ROM, remove drive presently

installed in your system. Your Toshiba Combo drive can be placed in any free half-height drive slot at the front of your computer. (It can be mounted horizontally or vertically.) Carefully start sliding the Combo drive into the opening with the disc tray facing the front of the computer.

[Page 7](#) Figure 6. Mounting Illustration Software Driver - Toshiba's optical drives do not require any unique device drivers for Windows '95/'98/2000/Me/XP/NT. After installing your drive and re-booting, your system should recognize your drive. Windows '95/'98/2000/Me/XP/NT Operating Systems support all Toshiba optical drives natively. If you prefer using DOS, download the DOS ATAPI driver from our web site.

[Page 8: Using The Combo Drive](#)

USING THE DVD Combo Drive - SD-R1512 Drive Operation Inserting a Disc - Horizontally To insert a disc into a drive that is mounted horizontally, perform the following steps: Figure 1. Inserting Disc 1. Open the drive's Loading tray by pressing the Eject Button. 2.

[Page 9](#) Figure 2. Inserting Disc Vertically Removing a Disc To remove a disc from the Combo drive, perform the following steps: 1. Open the Loading Tray by pressing the Eject Button. 2. Slide disc holders away from disc. 3. Grasp disc by edges, and lift out of loading tray. 4.

[Page 10](#) Emergency Ejection CAUTION: The following procedure is intended only as a last resort when pressing the eject button fails to open the Loading Tray 1. Turn computer power OFF by properly shutting down system. 2. Insert a solid bar (i.e. large paper clip) into Emergency Eject hole and push in until loading tray opens.

[Page 11: Troubleshooting](#)

TROUBLESHOOTING - SD-R1512 Solution Problem • Disc tray cannot be opened Check that there is power to drive. • Use Emergency Eject instructions to open tray. • Drive is not recognized by system Is the drive connected properly? Are all cables plugged in properly (e.g. Power Cable, Interface Cable and Audio Cables).

[Page 12: Specifications](#)

SPECIFICATIONS -SD-R1512 General Interface: ATAPI Applicable Formats - Write: Formats for Writing Disc at once, Track at once, session at once, Packet Write, incremental write, restricted overwrite Applicable Write Disc - CD-DA, CD+(E)G, CD-MIDI, CD-ROM, CD-ROM XA, CD-I, MIXED MODE CD-R/-RW CD, CD-I Bridge (Photo-CD, Video-CD), Multi-session CD (Photo-CD, CD-Extra, Portfolio)

[Page 13](#) Performance Rotational Speed DVD-ROM (single layer) 7,580rpm (5.0 - 12X CAV) DVD-ROM (dual layer) 5,053rpm (3.3 - 8X CAV) DVD-R (Ver. 2.0) 2,780rpm (2 - 4.8X CAV) DVD-R (Ver. 1.0) 3,200rpm (2 - 4.8X CAV) DVD-RW (Ver 1.1) 2,780rpm (2 - 4.8X CAV) DVD-RAM (Ver.

[Page 14](#) Reliability MTBF 100,000 hours Power ON Hours 5,436 hours/year ON/OFF Cycles 313 cycles/year Number of Access 600,000 accesses/year Operating Duty Cycle 20% of Power ON time (Reading/Seeking) 2% of Power ON time (Writing/Seeking) MTTR 0.5 hours Environmental Ambient Temperature Operating 5°...

[Page 15](#) Connectors DC input 4-pin Power Supply Connector ATAPI Interface Connector 40 Pin I/F ATAPI Standard Audio Connectors 4-pin and 2-pin connector (use matching housing, Part No. 70066, made by Molex Corp, or equivalent) Regulatory The SD-R1512 Combo drive has been certified by the following regulatory agencies: •...

[Page 16: Drive Connectors](#)

DRIVE CONNECTORS -SD-R1512 Figure 1. SD-R1512 Combo Drive Rear Panel - Connectors Power Power is supplied to your DVD drive by the connection with your computer's +5V/+12V power cable to the power socket at the back of drive. One side of the plug has chamfered Connector edges, so the power connector fits only one way CAUTION: Severe damage to the Drive circuits may occur if power cable is plugged in...

[Page 17](#) Table 1. Interface Pin Assignments INTERFACE PIN ASSIGNMENT SIGNAL HOST SIGNAL NAME SIGNAL HOST SIGNAL NAME NAME NAME Reset Host Reset HDRQ DMA Request Host Data Bus BIT 7 HWR-, STOP Host I/O Write Host Data Bus BIT 8 Host Data Bus BIT 6 HRD-, Host I/O Read HDMARDY, -...

