



# On-Screen Functions - Toshiba KV-7960A Instruction Manual

Virtual real-time & time lapse vcr



1

2

3

4

Table Of Contents

5

6

7

8

9

10

11

12

13

 
14

15

16

17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52



•

[Table of Contents](#)

•

## Bookmarks







## ON-SCREEN FUNCTIONS

When the power is turned ON, the time and date modes are displayed on the monitor screen (live picture). On-screen displays are not available in the event of no video input signal.

### Date-Time Display

Monitor screen

1

Date : Displayed with the month-day-year.

2

 
Day of the week : Automatically set to the correct day of the week when the date is set.

3

Time : Set to 24-hour cycle at factory.

It is possible to modify to 12-hour (AM/PM) cycle display.

4



Playback/Recording Time : Playback or Recording time display

## On-Screen Position

8/28/96 WED

17:30:02 A 2

8/28/96 WED

8/28/96 WED

17:30:02 A 2

17:30:02 A 2

17:30:02 A 2

8/28/96 WED

17:30:02 A 2

8/28/96 WED

17:30:02 A 2

Press the LOCATION SELECT button to adjust the display to desirable position.

The display moves in the direction shown by the arrows.

However, during the date-time display screen, pay attention to the following when setting the date and time display positions:

When the display is set to an end of the monitor screen as shown in the figure, synchronization instability or color flickering may occur in some monitor TVs.

VCR display

1

Date

**8/28/96 WED**

**17:30:02 A 2**

3

Time

Press this button : To down

LOCATION SELECT

Press this button : To right

 
2

Day of the week

4

Playback/Recording time

**16**

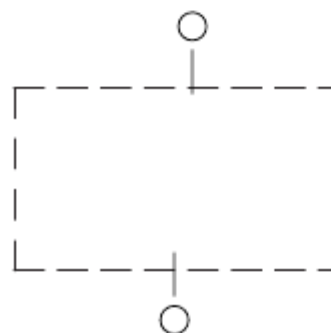

ManualsLib.com

[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)

1  
...  
14  
15  
16  
17  
18  
19  
20  
21

## Related Manuals for Toshiba KV-7960A

[VCR Toshiba KV-5024A Instruction Manual](#)

Time lapse vcr (20 pages)

[VCR Toshiba KV-5124A Instruction Manual](#)

Time lapse vcr (19 pages)

[VCR Toshiba KV-6200A Instruction Manual](#)

Time lapse vcr (44 pages)

[VCR Toshiba KV-6200A Instruction Manual](#)

Time lapse vcr (44 pages)

[VCR Toshiba KV-9168A Instruction Manual](#)

Virtual real-time & time lapse vcr (52 pages)

[VCR Toshiba KV-9960A Instruction Manual](#)

Virtual real-time & time lapse vcr (52 pages)

[VCR Toshiba KV-9096A Instruction Manual](#)

Virtual real-time & time lapse vcr (52 pages)

[VCR Toshiba KV-7168A Instruction Manual](#)

Virtual real-time & time lapse vcr (52 pages)

[VCR Toshiba KV-7168A Instruction Manual](#)

Virtual real-time & time lapse vcr (50 pages)

[VCR Toshiba KV-7024A Instruction Manual](#)

Virtual real-time & time lapse vcr (50 pages)

[VCR Toshiba W-515 Owner's Manual](#)

Toshiba video cassette recorder w-515 owner's manual (34 pages)

[VCR Toshiba V-804B Service Manual](#)

(128 pages)

[VCR Toshiba V-732EF Service Manual](#)

Video cassette recorder (99 pages)

[VCR Toshiba M-65 Owner's Manual](#)

Toshiba m65: user guide (51 pages)

[VCR Toshiba M-624 Owner's Manual](#)

(26 pages)

[VCR Toshiba M450 Owner's Manual](#)

Toshiba m450: user guide (45 pages)

## Related Content for Toshiba KV-7960A

[M-V19H01 Viewing The On-Screen Display](#)

Toshiba M-V19H01

[RD-XV45KB Vcr Functions](#)

Toshiba RD-XV45KB

[W-412 Initial Settings Using On-Screen Display](#)

Toshiba W-412

[V-804B Menu/Setup Screen](#)

Toshiba V-804B

[W-403 Initial Settings Using On-Screen Display](#)

Toshiba W-403

[M-782 Initial Settings Using On-Screen Display](#)

Toshiba M-782

[M-684 Initial Settings Using On-Screen Display](#)

Toshiba M-684

[W-512 Initial Settings Using On-Screen Display](#)

Toshiba W-512