

TOSHIBA

Toshiba 58L7350U User Manual

Wireless keyboard users guide I7300, I7350 series cloud tv

1
2

--

•

Bookmarks

Quick Links

[Download this manual](#) See also: [User Manual](#)



TOSHIBA

User's Guide

Wireless Touchpad Keyboard



Please read this user's guide before using your new touchpad keyboard.

Package Contents

- Touchpad Keyboard
- USB Receiver
- User's Guide
- 2x AA Batteries

Features

- Provides the compact, full-size keyboard
- Ultra-compact USB receiver

Install Batteries

1. Open the battery compartment cover at the bottom of the keyboard.
2. Insert two AA batteries according to the polarity symbols (+ and -) marked inside.
3. Replace the cover.



Important battery information

- Remove the batteries if your device is to be stored for an extended period of time without being used.
- Keep batteries out of reach of children.
- Insert the batteries in the proper direction as indicated by the positive (+) and negative (-) markings in the battery chamber.
- Do not mix old and new batteries or batteries of different types (for example, carbon and alkaline batteries).
- Always remove old, weak, or worn-out batteries promptly and recycle or proper disposal of them in accordance with Local and National Disposal Regulations.
- If a battery leaks, remove all batteries and recycle or dispose of them in accordance with the battery manufacturer's instructions and Local and National Disposal Regulations. If fluid from the battery comes into contact with skin or clothes, flush skin with water immediately.

Plug in the Receiver

1. Remove the USB receiver dongle from battery compartment.
2. Turn on your TV.
3. Plug the receiver into your TV USB port.
4. Slide the ID switch on the back of the keyboard (green). Your keyboard and receiver are on.



Note:

- If you do not plan to use your keyboard, slide the ID switch to OFF (red) to save battery life.
- See your operating system's online help for keyboard configuration information.
- Do not leave the unplugged USB receiver in reach of small children.

Sleep Mode

Your keyboard enters sleep mode if left idle. You unplug the receiver from your USB port keyboard, press any key (not the touchpad) the receiver (if unplugged).

[Next Page](#)

1

2

Related Manuals for Toshiba 58L7350U

[LED TV Toshiba 58L7350U User Manual](#)

Integrated high definition led television (198 pages)

[LED TV TOSHIBA 58L7350U User Manual](#)

Integrated high definition (103 pages)

[LED TV TOSHIBA 65L7350U User Manual](#)

(97 pages)

[LED TV Toshiba 58L7350U Resource Manual](#)

Integrated high definition led television (2 pages)

[LED TV Toshiba 39L4300UM User Manual](#)

Integrated high definition led television (186 pages)

[LED TV TOSHIBA 65L7300U User Manual](#)

(98 pages)

[LED TV TOSHIBA 65L7300U User Manual](#)

(90 pages)

[LED TV Toshiba 50L7300U Resource Manual](#)

Integrated high definition led television (2 pages)

[Keyboard Toshiba Toshiba Wireless Keyboard \(PA3959U-1ETB\) User Manual](#)

Toshiba wireless keyboard (pa3959u-1etb) user's guide (33 pages)

[Keyboard Toshiba Strata DK PC Attendant Console User Manual](#)

Digital business telephone systems (144 pages)

Summary of Contents for Toshiba 58L7350U

[Page 2](#) Commission (FCC) Specifications attached to this equipment. Operation with non-compliant peripherals or peripherals not recommended by TOSHIBA is likely to result in RF Distance 9.8 ft. (3m) This equipment has been tested and found to comply with the limits for interference to radio and TV reception.

This manual is also suitable for:

[65l7350u](#)[50l4300um](#)[50l7300u](#)[50l7300um](#)[58l7300u](#)[58l7300um](#) ... [Show all](#)