

TOSHIBA

Toshiba 23L1350U Resource Manual

Integrated high definition led television

1
2

--

•

Bookmarks

Quick Links

[Download this manual](#) See also: [User Manual](#)



Integrated High Definition LED Television

Resource Guide

23L1350U
29L1350U
32L1350U
39L1350U
50L1350U



Keep this Resource Guide in a convenient place to access important information about your television. To learn more about your television, consult the comprehensive electronic user's guide, or visit our website at support.toshiba.com.

If you need assistance:
Toshiba's Support Web site
support.toshiba.com

Owner's Record
The model number and serial number are on the back and side of your television. Record these numbers whenever you communicate with your Toshiba dealer about this television.

Model name _____

Serial number _____

Register your Toshiba Television at register.toshiba.com.
Note: To display a High Definition picture, the TV must be receiving a High Definition signal (such as an over-the-air High Definition TV broadcast, a High Definition digital cable program, or a High Definition satellite program). For details, contact your TV antenna installer, cable provider, or satellite provider.

(24) When selecting a location for the TV:
(25) Always leave a space of at least 4" (10cm) around the TV. The slots and the edge of the supporting furniture, openings are provided to protect the TV from overheating and to help maintain reliable operation of the TV.
(26) NEVER allow any part of the TV to hang over a surface. NEVER place the TV on tall furniture (or from overheating and to help maintain reliable operation of the TV).

(27) NEVER allow anything to rest on or roll over the power cord, and never place the TV on top of any other material between the power cord is subject to wear or damage to the TV and the supporting furniture, abuse.

(28) NEVER allow children to climb on the TV.
(29) To avoid damage to this product, never place or use the TV in an area subject to excessive heat or vibration.

(30) Always operate this equipment from a 120V AC, 60Hz power source.
(31) Always make sure the antenna system is properly grounded to provide adequate protection against voltage surges and following methods:

(1) Secure the TV with a mounting screw (the National Electric Code).
(2) Place the TV on a sturdy surface that has a sufficient thickness and screw the unit on the Antenna discharge unit.
(3) Secure the TV with a sturdy strap to a wall, ceiling, or other removable structure.
(4) Attach the strap to the TV using the hooks on the back of the TV, the clips on the pedestal, or Ground straps.
(5) Make sure the strap is tight, secure, and

(32) NEVER attempt to install any of the following:
(a) an antenna system, or b) cables, wires, or any home theater component connected to an antenna system in a hole, slot, gap, or similar surface or phone system.
(c) too close to drapes, curtains, or walls.
(d) in a confined space such as a bookshelf.
For better performance and safer operation of built-in cabinet, or any other place with your TOSHIBA TV, follow these poor ventilation.

(34) **DANGER: RISK OF SERIOUS PERSONAL INJURY OR DEATH!**
Use extreme care to make sure you are never in a position where your body (or any item you are in contact with, such as a ladder or screwdriver) can accidentally touch overhead power lines.
The product shall not be exposed to dripping liquids, such as water, shall be placed on the apparatus.

(35) NEVER attempt to install any of the following:
(a) an antenna system, or b) cables, wires, or any home theater component connected to an antenna system in a hole, slot, gap, or similar surface or phone system.
(c) too close to drapes, curtains, or walls.
(d) in a confined space such as a bookshelf.
For better performance and safer operation of built-in cabinet, or any other place with your TOSHIBA TV, follow these poor ventilation.




Dear Customer,
Thank you for purchasing this Toshiba LED TV. This guide will help you use the many exciting features of your new LED TV. Congratulations on your purchase. As you operate your LED TV, carefully read this guide completely, please keep these safety tips in mind:



Safety Precautions
The issue
WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.
displays are popular purchases. However, flat panel displays are not always supported on the proper stands or installed according

to the manufacturer's recommendations.
Flat panel displays that are not supported should never be placed on top of any other material between the power cord is subject to wear or damage to the TV and the supporting furniture, abuse.

The consumer electronics industry is committed to making home entertainment enjoyable and safe.
The manufacturer's literature accompanying the appliance, recommendations for the safe installation and use of your flat panel display, must be securely attached to the floor/wall in accordance with the installation instructions.
Carefully read and understand all enclosed instructions for proper use of this product.

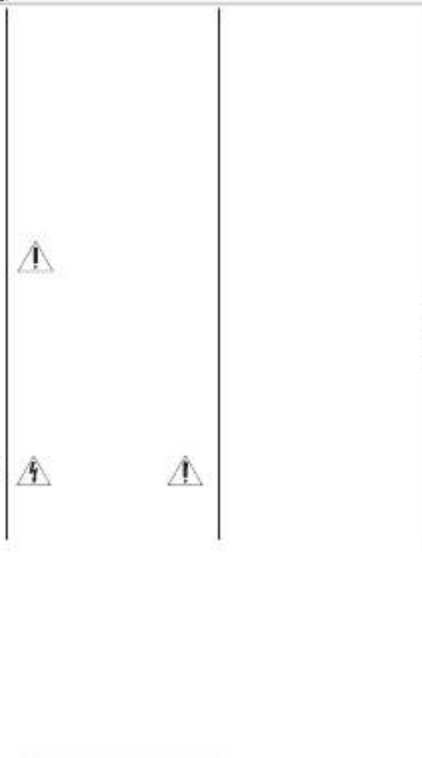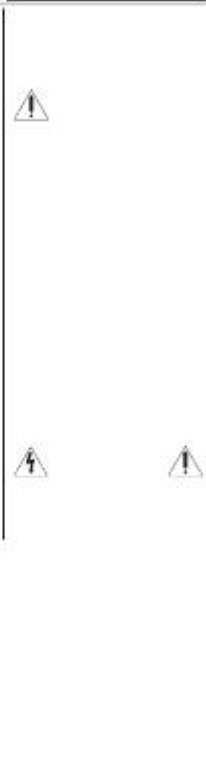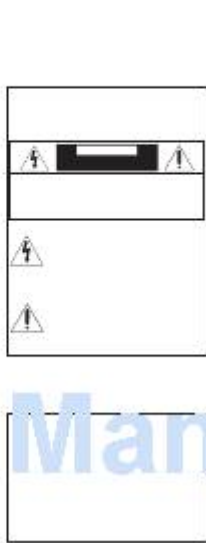

ManualsLib.com

ManualsLib.com

See instructions on item 26).

• Don't allow children to climb on or play with furniture and television sets.

WARNING: If you decide to wall mount this television, always use a mounting bracket that has been Listed by an independent laboratory (such as UL, CSA, ETL) and is **NOTED TO CATV INSTALLERS**. This is a **requirement** to call the CATV system appropriate for the size and weight of this installer's attention to Article 760 of the television. The use of inappropriate or non-Listed mounting brackets could result in improper grounding and, in part, cause a serious bodily injury and/or property damage. See "To Display your LED TV using a Wall the grounding system of the building, as close Bracket." below.

recommendations and precautions:

40) For added protection of your TV from

35) If you use the TV in a room where the lightning and power surges, always unplug

temperature is 32° F (0° C) or below, the power cord and disconnect the antenna

from the TV if you leave the TV unattended picture brightness may vary until the LED

warms up. This is not a sign of or unplug for long periods of time.

malfunction.

41) Always unplug the TV to completely

36) disconnect from mains power. When the

WARNING: RISK OF SERIOUS

TV is turned off using the on/off switch, it

PERSONAL INJURY, OR

is not completely disconnected from

EQUIPMENT DAMAGE! power and a mislead amount of current is

• Never use chemicals (such as air

still consumed.

fresheners, cleaning agents, etc.) on or

42) During normal use, the TV may make

near the TV pedestal. Studies indicate that

occasional snapping or popping sounds,

plastics may weaken and crack over time.

This is normal, especially when the unit is

from the combined effects of chemical

being turned on or off. If these sounds,

agents and mechanical stress (such as

become frequent or continuous, unplug

the weight of the TV. Failure to follow

the power cord and contact a Toshiba

these instructions could result in serious

Authorized Service Provider.

injury and/or permanent damage to TV.

43)

WARNING: RISK OF SERIOUS

and TV pedestal.

PERSONAL INJURY, OR

• Always unplug the TV before cleaning.

EQUIPMENT DAMAGE!

Gently wipe the display panel surface (the

TV screen) using a dry, soft cloth (cotton,

Never strike the screen with a sharp or

flannel, etc.). A hard cloth may damage

heavy object.

the surface of the panel.

44) • The LCD screen of this product can be

Avoid contact with alcohol, thinner,

damaged by ultraviolet radiation from the

benzene, acidic or alkaline solvent

sun. When selecting a location for the

cleaners, abrasives, cleaners, or chemical

television, avoid locations where the

cloths, which may damage the surface.

screen may be exposed to direct sunlight.

Never spray volatile compounds such as

such as in front of a window.

insecticide on the cabinet. Such products

• Never touch, press, or place anything on

the LCD screen. If you need to clean the

back cover. These actions will damage

screen, follow the instructions in item 36)

internal parts.

Service

38)

45)

WARNING:

RISK OF ELECTRIC SHOCK!

RISK OF ELECTRIC SHOCK!

Never spill liquids or push objects of any

Never attempt to service the TV yourself.

Kind into the TV cabinet slots.

Opening and removing the covers may

39) During a lightning storm, do not touch

expose you to dangerous voltage or other

the connecting cables or product.

• Don't place flat panel displays on furniture

Important Safety Instructions

that can easily be used as steps, such as a

1) Read these instructions

(chest of drawers,

2) Keep these instructions.

• Remember that children can become excited

3) Heed all warnings.

while watching a program, especially on a

4) Follow all instructions.

"larger than flat" flat panel display. Care

5) Do not use this apparatus near water.

should be taken to place or install the

6) Clean only with dry cloth.

display where it cannot be washed, pulled

7) Do not block any ventilation openings.

over, or knocked down.

8) Care should be taken to route all cords and

manufacturer's instructions.

8) Do not install near any heat sources

that they cannot be pulled or obstructed

(such as radiators, heat registers, stoves,

curious children,

or other products (including amplifiers)

Wall Mounting: If you decide to wall mount

that produces heat.

your flat panel display, always:

9) Do not defeat the safety

• Use a mount that has been recommended

purpose of the polarized

by the display manufacturer and/or listed by

or grounding type plug.

an independent laboratory (such as UL,

A polarized plug has two blades with one

CSA, ETL),

wider than the other. A grounding type

plug has two blades and a third

and wall mount manufacturers.

grounding prong. The wide blade or the

• If you have any doubts about your ability to

third prong are provided for your safety.

safely install your flat panel display, contact

if the provided plug does not fit into

your outlet, consult an electrician for

your outlet, consult an electrician for

• Make sure that the wall where you are

replacement of the discolored outlet.

mounting the display is appropriate. Some

10) Protect the power cord from being

wall mounts are not designed to be mounted

walked on or pinched, particularly at

to walls with steel studs or old cinder block

plugs, convenience receptacles, and the

construction. If you are unsure, contact a

point where they exit from the apparatus.

professional installer.

11) Only use attachments/accessories

• A minimum of two

specified by the manufacturer.

people are required

12) Use only with the cart,




for installation. Flat

stand, tripod, bracket, or

panel displays can

table specified by the

be heavy.

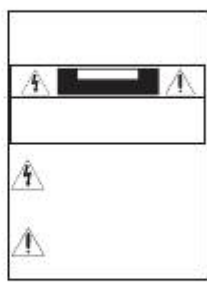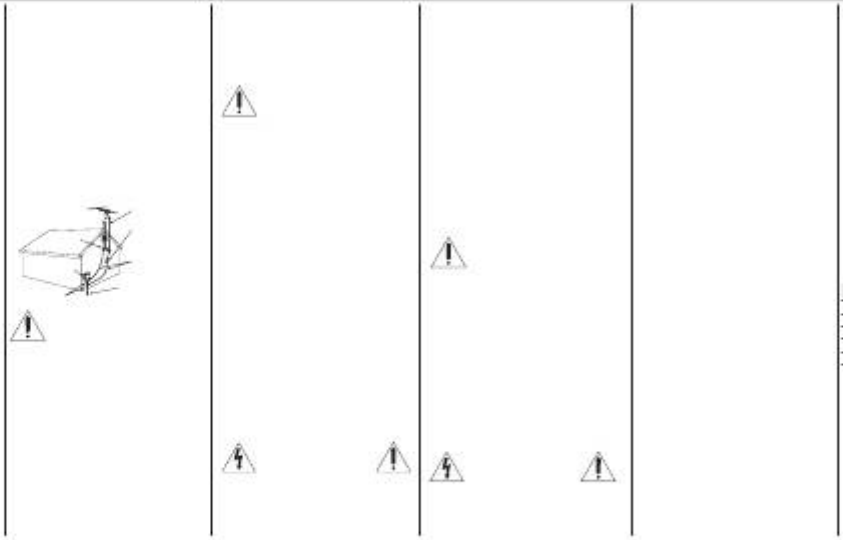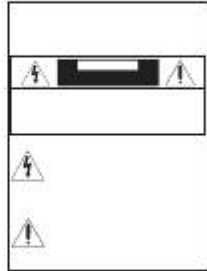

manufacturer, or sold with the apparatus.
 In the event of a fire, unplug the TV from the power source.
 When a cart is used, use caution when moving the cart product combination to avoid injury from tip-over.

OSHIBA
 Leading Innovation >>>

13) Unplug this apparatus during lightning storms or when unused for long periods of time.
 2) Unplug and remove any cables and other component connectors from the back of the TV.
 Toshiba Authorized Service Provider.

3) Remove the screws of the VESA Mounting Pattern shown in the table below.
 Ask the service technician to use only replacement parts specified by the manufacturer.

mount bracket to the TV.
 Upon completion of service, ask the service technician to perform routine safety checks to determine that the TV is in safe operating condition.

5) Follow the instructions provided with your wall bracket. Before proceeding, make sure the appropriate bracket(s) are attached to the wall and the back of the TV Pedestal Stand:
 Observe the following safety precautions with the wall bracket.

1) Read and follow the pedestal assembly instructions included with the pedestal to the wall and the back of the TV.
 CAUTION: Before beginning pedestal assembly, carefully lay the front of the LCD panel face down on a flat, cushioned surface such as a quilt or blanket.

7) VESA Mounting Pattern
 Leave the bottom of the unit protruding over the edge of the surface and assemble the pedestal as indicated below.

100x100 mm
 29L1350U
 200x100 mm
 32L1350U

200x200 mm
 200x200 mm
 39L1350U
 50L1350U
 400x400 mm

2) Place the TV on a sturdy, level surface that can support the weight of the TV.
 Removing the Pedestal Stand

1) Be sure to secure the TV to a wall stud.
 2) Carefully lay the front of the unit face down on a flat, cushioned surface such as a quilt or blanket. Leave the stand protruding over the edge of the surface.

To Display your LED TV using a Wall Bracket
 Note: Extreme care should always be used when removing the pedestal stand to avoid damage to the LCD panel.

independent laboratory (such as UL, CSA, ETL) that is appropriate for the size and diagram. This will allow removal of the weight of the TV pedestal stand.

1) CAUTION: Two people are required for installation.
 14) Refer all servicing to qualified service personnel. Servicing is required when Do not get water or other liquids come into contact with the product, as it may result in damage, liquid has been spilled or

18) WARNING: objects have fallen into the apparatus, the To prevent the spread of fire, keep candles apparatus has been exposed to rain or other open flames away from this moisture, does not operate normally, or product at all times.
 has been dropped.

19) WARNING: NEVER expose the TV to direct sunlight, fire or a heat source such as a heater. This may reduce the product lifetime or result in fire.
 14a) CAUTION: If the TV is dropped and the cabinet or enclosure surface has been damaged or the TV does not operate normally, take the following precautions:
 Follow these recommendations and ALWAYS turn off the TV and unplug the power cord to avoid possible electric shock installing your TV.

OSHIBA
 Leading Innovation >>>

19) WARNING: NEVER expose the TV to direct sunlight, fire or a heat source such as a heater. This may reduce the product lifetime or result in fire.
 14a) CAUTION: If the TV is dropped and the cabinet or enclosure surface has been damaged or the TV does not operate normally, take the following precautions:
 Follow these recommendations and ALWAYS turn off the TV and unplug the power cord to avoid possible electric shock installing your TV.






19) WARNING: NEVER expose the TV to direct sunlight, fire or a heat source such as a heater. This may reduce the product lifetime or result in fire.
 14a) CAUTION: If the TV is dropped and the cabinet or enclosure surface has been damaged or the TV does not operate normally, take the following precautions:
 Follow these recommendations and ALWAYS turn off the TV and unplug the power cord to avoid possible electric shock installing your TV.

19) WARNING: NEVER expose the TV to direct sunlight, fire or a heat source such as a heater. This may reduce the product lifetime or result in fire.
 14a) CAUTION: If the TV is dropped and the cabinet or enclosure surface has been damaged or the TV does not operate normally, take the following precautions:
 Follow these recommendations and ALWAYS turn off the TV and unplug the power cord to avoid possible electric shock installing your TV.

19) WARNING: NEVER expose the TV to direct sunlight, fire or a heat source such as a heater. This may reduce the product lifetime or result in fire.
 14a) CAUTION: If the TV is dropped and the cabinet or enclosure surface has been damaged or the TV does not operate normally, take the following precautions:
 Follow these recommendations and ALWAYS turn off the TV and unplug the power cord to avoid possible electric shock installing your TV.

19) WARNING: NEVER expose the TV to direct sunlight, fire or a heat source such as a heater. This may reduce the product lifetime or result in fire.
 14a) CAUTION: If the TV is dropped and the cabinet or enclosure surface has been damaged or the TV does not operate normally, take the following precautions:
 Follow these recommendations and ALWAYS turn off the TV and unplug the power cord to avoid possible electric shock installing your TV.

19) WARNING: NEVER expose the TV to direct sunlight, fire or a heat source such as a heater. This may reduce the product lifetime or result in fire.
 14a) CAUTION: If the TV is dropped and the cabinet or enclosure surface has been damaged or the TV does not operate normally, take the following precautions:
 Follow these recommendations and ALWAYS turn off the TV and unplug the power cord to avoid possible electric shock installing your TV.

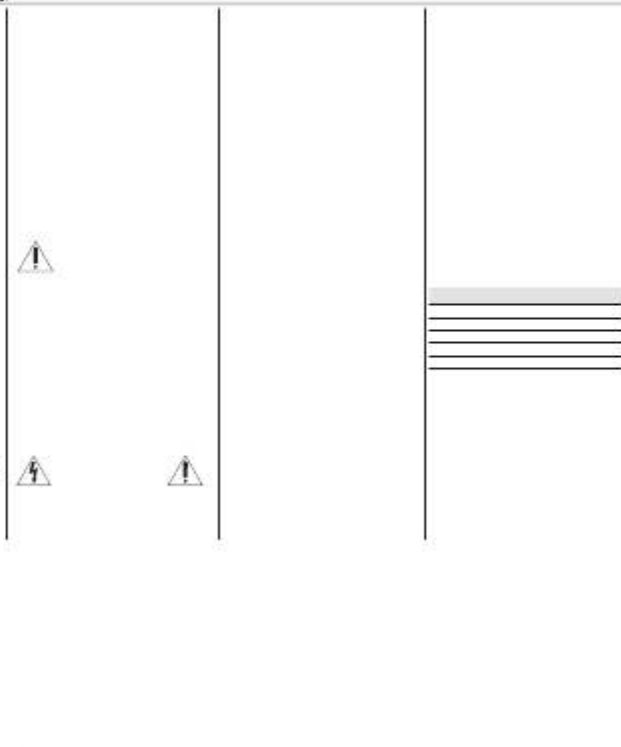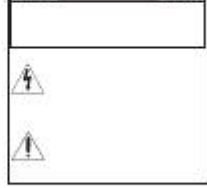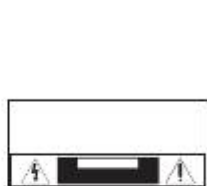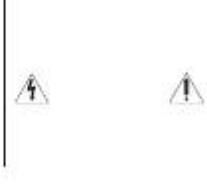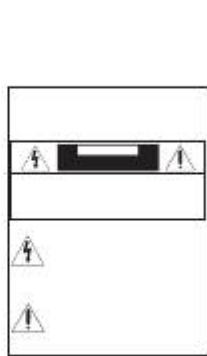

ManualsLib.com

ManualsLib.com

Never place the TV on an unstable

16) CAUTION:

Do not let children swallow any small parts
fall, causing serious personal injury, death, or serious damage to
the plastic bag. Keep the small parts and the
the TV.

plastic bag out of the reach of children.

3) Once you have removed all the parts, place the
pedestal stand from the TV.

CAUTION: Always place the TV on the floor or a sturdy, level, stable surface that can support
the weight of the unit. Secure the TV as described in part 20 of the important safety
instructions in this document.

Note: The 23L3500 does not include a hook on the back of the TV.

23" TV

23" TV

VESA Mounting Pattern

M4

M6

M6

M6

M8

33" TV

33" TV

6MA501162010 • 12/12

TOSHIBA
Leading Innovation >>>



[Next Page](#)

1

2

Related Manuals for Toshiba 23L1350U

[LED TV TOSHIBA 50L2300U User Manual](#)

(123 pages)

[LED TV Toshiba 39L2300U User Manual](#)

Integrated high definition led television (123 pages)

[LED TV Toshiba 50L1350U Specifications](#)

50" class led hd tv (2 pages)

[LED TV Toshiba 19L4200U User Manual](#)

Integrated high definition led television (141 pages)

[LED TV Toshiba 19L4200UOM User Manual](#)

Integrated high definition led television (139 pages)

[LED TV Toshiba 26SL400U Specifications](#)

720p hd led tv (2 pages)

[LED TV Toshiba 23L2300U Resource Manual](#)

Integrated high definition led television (2 pages)

[LED TV Toshiba 23PU200 series Owner's Manual](#)

(32 pages)

[LED TV Toshiba 23PB200 Series Owner's Manual](#)

(29 pages)

[LED TV Toshiba 23L2300UC Resource Manual](#)

Integrated high definition led television (2 pages)

[LED TV Toshiba 23L1400UC User Manual](#)

Integrated high definition led television (110 pages)

[LED TV Toshiba 32L110U Quick Setup Manual](#)

28" 720p, 60hz, led tv; 32" 720p, 60hz, led tv (2 pages)

[LED TV Toshiba Digital 19EL93 Series Owner's Manual](#)

(41 pages)

[LED TV Toshiba 24L3965 Owner's Manual](#)

(25 pages)

[LED TV Toshiba 24L3965EA Owner's Manual](#)

(29 pages)

[LED TV Toshiba 24L2900 Owner's Manual](#)

(26 pages)

Summary of Contents for Toshiba 23L1350U

[Page 1](#) Pattern shown in the table below. 30) Never allow anything to rest on or roll over to a suitable support, Note: The 23L1350U does not include a hook on the back of the TV. malfunction. 41) Always unplug the TV to completely •...

[Page 2: Trademark Information](#)

® PC audio cable Troubleshooting Computer Refer to the "Troubleshooting" chapter in the online User's Guide at support.toshiba.com. If you are still having trouble you may need to PC audio contact Toshiba for additional assistance. output Toshiba Support DVI/HDCP VIDEO...

This manual is also suitable for:

[2911350u2911350um3211350u3211350u13911350u3911350um](#) ... [Show all](#)