

TOSHIBA

Toshiba 50L7300U Resource Manual

Integrated high definition led television

1
2

•

[Table of Contents](#)

•

Bookmarks

Table of Contents

1 Additional Safety Precautions

2 To Display Your LED TV Using a Wall Bracket

3 Removing the Pedestal Stand

4 Using the Remote


5 Connecting Your TV

6 Connecting an HDMI

7 Connecting a Digital Audio System


[Download this manual](#)

See also: [User Manual](#)

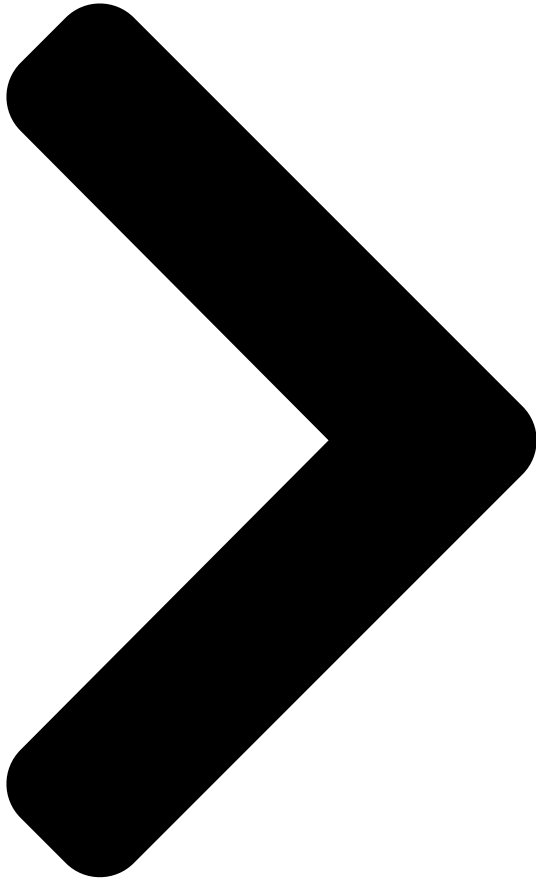

or phone system.
 39) During lightning storm, do not touch the Care
 (continued) or product.
 performance and safer operation of
 40) For added protection of your TV from lightning
 your TOSHIBA TV, follow the instructions below
 and power surges, lightning, and other hazards
 and precautions:
 (cont) and disconnect the antenna from the TV.
 35) If you use the TV in a room with lightning rods
 you have the TV unplug during lightning storms
 in 15-30 min. intervals, the picture brightness
 periods of time.
 may vary until the LCD warms up. This is not a
 41) Always unplug the TV to completely disconnect
 sign of malfunction.
 from main power. When the TV is turned off
 36)

WARNING: RISK OF SERIOUS PERSONAL INJURY OR DEATH
 using the on/off switch. It is not completely disconnected from power and a minute amount of current is still consumed.
 • Never use chemicals (such as air fresheners, cleaning agents, etc.) on or near the TV (occasional snapping or popping sounds. This is normal, especially when the unit is being turned on or off. If these sounds become frequent or combined effects of chemical agents and continuous, unplug the power cord and contact mechanical stress (such as the weight of the TV). Failure to follow these instructions a Toshiba Authorized Service Provider could result in serious injury and/or death.
WARNING: RISK OF SERIOUS PERSONAL INJURY OR DEATH
 permanent damage to TV and TV pedestal.
PERSONAL INJURY OR DEATH
 • Always unplug the TV before cleaning.
DAMAGE!
 Gently wipe the display panel surface (the screen) with one side of the other. Never spray water on the screen or heavy TV screen) using a dry, soft cloth (cotton, object, flannel, etc.). A hard cloth may damage the LCD screen. The LCD screen of this product can be damaged by ultraviolet radiation from the sun. Avoid contact with alcohol, thinner, benzene, acetone or alkaline solvent cleaners. Abrasive polishes and cleaning agents where the screen may be cleaned, or chemical cloths, which may damage the surface. Never spray volatile window cleaners such as insecticide on the screen, back, sides, or base of the TV cabinet. Such products may damage or discolor the cabinet.
 When you need to clean the LCD screen:
 37) Never hit, press, or place anything on the back cover. These actions will damage internal parts.
Important Safety Instructions
 1) Read these instructions.
 2) Keep these instructions.
ALWAYS
 3) Head all warnings.
 4) Follow all instructions.
 5) Do not use this apparatus near water.
 6) Clean only with dry cloth.
ALWAYS
 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.
 9) Do not defeat the safety purpose of the polarized or grounding type plug. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
 10) Protect the power cord from being walked on or run over, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
ALWAYS
 11) Only use attachments/accessories specified by the manufacturer.
 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus.
 (When a cart is used, use caution when moving the cart/appliance combination to avoid injury from tip-over.)
 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
Service

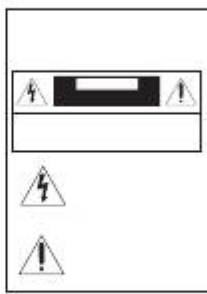

Manufacturers, retailers and the rest of the consumer electronics industry are committed to making home entertainment safe and enjoyable.
 As you enjoy your television, please note that all televisions - new and old - must be supported in proper stands as indicated according to the manufacturer's recommendations. Televisions that are inappropriately loaded on dressers, bookcases, shelves, desks, speakers, chests, carts, etc., may fall over, resulting in injury.
 Follow the manufacturer's recommendations for the safe installation of your television.
 Read and follow all instructions for proper use of your television.
 Always children to climb on or play on the television or the furniture on which the television is placed.
 Place the television on furniture that can easily be used as steps, such as a chest of drawers.
 Install the television where it cannot be pushed, pulled over or knocked down.
 Route cords and cables connected to the television so that they cannot be tripped over, pulled or grabbed.
 Doubt about your ability to safely mount your television.
 • Ask a mount that has been recommended by the television manufacturer and has a safety certification by an independent laboratory (such as UL, CSA, ETL).
 • Follow all instructions supplied by the television and mount manufacturers.
 • Make sure that the wall or ceiling where you are mounting the television is appropriate.
 • Some mounts are not designed to be mounted to walls and ceilings with steel studs or other block construction. If you are unsure, contact a professional installer.
 • Televisions can be heavy. A minimum of two people is required for a wall or ceiling mount installation.
 Many new television buyers move their older CRT televisions into a secondary room after the purchase of a flat-panel television. Special care should be made in the placement of older CRT televisions.
 • Place your older CRT television on furniture that is sturdy and appropriate for its size and weight.
 • Place your older CRT television on a dresser where children may be tempted to use the drawers to climb.
 • Make sure your older CRT television does not hang over the top of your furniture.
 CEA logo

WARNING: RISK OF SERIOUS PERSONAL INJURY OR DEATH
 permanent damage to TV and TV pedestal.
PERSONAL INJURY OR DEATH
 • Always unplug the TV before cleaning.
DAMAGE!
 Gently wipe the display panel surface (the screen) with one side of the other. Never spray water on the screen or heavy TV screen) using a dry, soft cloth (cotton, object, flannel, etc.). A hard cloth may damage the LCD screen. The LCD screen of this product can be damaged by ultraviolet radiation from the sun. Avoid contact with alcohol, thinner, benzene, acetone or alkaline solvent cleaners. Abrasive polishes and cleaning agents where the screen may be cleaned, or chemical cloths, which may damage the surface. Never spray volatile window cleaners such as insecticide on the screen, back, sides, or base of the TV cabinet. Such products may damage or discolor the cabinet.
 When you need to clean the LCD screen:
 37) Never hit, press, or place anything on the back cover. These actions will damage internal parts.
Important Safety Instructions
 1) Read these instructions.
 2) Keep these instructions.
ALWAYS
 3) Head all warnings.
 4) Follow all instructions.
 5) Do not use this apparatus near water.
 6) Clean only with dry cloth.
ALWAYS
 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.
 9) Do not defeat the safety purpose of the polarized or grounding type plug. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
 10) Protect the power cord from being walked on or run over, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
ALWAYS
 11) Only use attachments/accessories specified by the manufacturer.
 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus.
 (When a cart is used, use caution when moving the cart/appliance combination to avoid injury from tip-over.)
 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
Service




WARNING: RISK OF SERIOUS PERSONAL INJURY OR DEATH
 permanent damage to TV and TV pedestal.
PERSONAL INJURY OR DEATH
 • Always unplug the TV before cleaning.
DAMAGE!
 Gently wipe the display panel surface (the screen) with one side of the other. Never spray water on the screen or heavy TV screen) using a dry, soft cloth (cotton, object, flannel, etc.). A hard cloth may damage the LCD screen. The LCD screen of this product can be damaged by ultraviolet radiation from the sun. Avoid contact with alcohol, thinner, benzene, acetone or alkaline solvent cleaners. Abrasive polishes and cleaning agents where the screen may be cleaned, or chemical cloths, which may damage the surface. Never spray volatile window cleaners such as insecticide on the screen, back, sides, or base of the TV cabinet. Such products may damage or discolor the cabinet.
 When you need to clean the LCD screen:
 37) Never hit, press, or place anything on the back cover. These actions will damage internal parts.
Important Safety Instructions
 1) Read these instructions.
 2) Keep these instructions.
ALWAYS
 3) Head all warnings.
 4) Follow all instructions.
 5) Do not use this apparatus near water.
 6) Clean only with dry cloth.
ALWAYS
 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.
 9) Do not defeat the safety purpose of the polarized or grounding type plug. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
 10) Protect the power cord from being walked on or run over, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
ALWAYS
 11) Only use attachments/accessories specified by the manufacturer.
 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus.
 (When a cart is used, use caution when moving the cart/appliance combination to avoid injury from tip-over.)
 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
Service



WARNING: RISK OF SERIOUS PERSONAL INJURY OR DEATH
 permanent damage to TV and TV pedestal.
PERSONAL INJURY OR DEATH
 • Always unplug the TV before cleaning.
DAMAGE!
 Gently wipe the display panel surface (the screen) with one side of the other. Never spray water on the screen or heavy TV screen) using a dry, soft cloth (cotton, object, flannel, etc.). A hard cloth may damage the LCD screen. The LCD screen of this product can be damaged by ultraviolet radiation from the sun. Avoid contact with alcohol, thinner, benzene, acetone or alkaline solvent cleaners. Abrasive polishes and cleaning agents where the screen may be cleaned, or chemical cloths, which may damage the surface. Never spray volatile window cleaners such as insecticide on the screen, back, sides, or base of the TV cabinet. Such products may damage or discolor the cabinet.
 When you need to clean the LCD screen:
 37) Never hit, press, or place anything on the back cover. These actions will damage internal parts.
Important Safety Instructions
 1) Read these instructions.
 2) Keep these instructions.
ALWAYS
 3) Head all warnings.
 4) Follow all instructions.
 5) Do not use this apparatus near water.
 6) Clean only with dry cloth.
ALWAYS
 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.
 9) Do not defeat the safety purpose of the polarized or grounding type plug. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
 10) Protect the power cord from being walked on or run over, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
ALWAYS
 11) Only use attachments/accessories specified by the manufacturer.
 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus.
 (When a cart is used, use caution when moving the cart/appliance combination to avoid injury from tip-over.)
 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
Service



WARNING: RISK OF SERIOUS PERSONAL INJURY OR DEATH
 permanent damage to TV and TV pedestal.
PERSONAL INJURY OR DEATH
 • Always unplug the TV before cleaning.
DAMAGE!
 Gently wipe the display panel surface (the screen) with one side of the other. Never spray water on the screen or heavy TV screen) using a dry, soft cloth (cotton, object, flannel, etc.). A hard cloth may damage the LCD screen. The LCD screen of this product can be damaged by ultraviolet radiation from the sun. Avoid contact with alcohol, thinner, benzene, acetone or alkaline solvent cleaners. Abrasive polishes and cleaning agents where the screen may be cleaned, or chemical cloths, which may damage the surface. Never spray volatile window cleaners such as insecticide on the screen, back, sides, or base of the TV cabinet. Such products may damage or discolor the cabinet.
 When you need to clean the LCD screen:
 37) Never hit, press, or place anything on the back cover. These actions will damage internal parts.
Important Safety Instructions
 1) Read these instructions.
 2) Keep these instructions.
ALWAYS
 3) Head all warnings.
 4) Follow all instructions.
 5) Do not use this apparatus near water.
 6) Clean only with dry cloth.
ALWAYS
 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.
 9) Do not defeat the safety purpose of the polarized or grounding type plug. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
 10) Protect the power cord from being walked on or run over, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
ALWAYS
 11) Only use attachments/accessories specified by the manufacturer.
 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus.
 (When a cart is used, use caution when moving the cart/appliance combination to avoid injury from tip-over.)
 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
Service

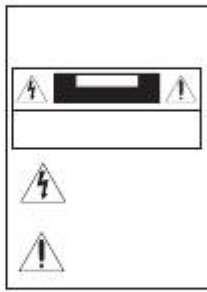

Manufacturers, retailers and the rest of the consumer electronics industry are committed to making home entertainment safe and enjoyable.
 As you enjoy your television, please note that all televisions - new and old - must be supported in proper stands as indicated according to the manufacturer's recommendations. Televisions that are inappropriately loaded on dressers, bookcases, shelves, desks, speakers, chests, carts, etc., may fall over, resulting in injury.
 Follow the manufacturer's recommendations for the safe installation of your television.
 Read and follow all instructions for proper use of your television.
 Always children to climb on or play on the television or the furniture on which the television is placed.
 Place the television on furniture that can easily be used as steps, such as a chest of drawers.
 Install the television where it cannot be pushed, pulled over or knocked down.
 Route cords and cables connected to the television so that they cannot be tripped over, pulled or grabbed.
 Doubt about your ability to safely mount your television.
 • Ask a mount that has been recommended by the television manufacturer and has a safety certification by an independent laboratory (such as UL, CSA, ETL).
 • Follow all instructions supplied by the television and mount manufacturers.
 • Make sure that the wall or ceiling where you are mounting the television is appropriate.
 • Some mounts are not designed to be mounted to walls and ceilings with steel studs or other block construction. If you are unsure, contact a professional installer.
 • Televisions can be heavy. A minimum of two people is required for a wall or ceiling mount installation.
 Many new television buyers move their older CRT televisions into a secondary room after the purchase of a flat-panel television. Special care should be made in the placement of older CRT televisions.
 • Place your older CRT television on furniture that is sturdy and appropriate for its size and weight.
 • Place your older CRT television on a dresser where children may be tempted to use the drawers to climb.
 • Make sure your older CRT television does not hang over the top of your furniture.
 CEA logo

WARNING: RISK OF SERIOUS PERSONAL INJURY OR DEATH
 permanent damage to TV and TV pedestal.
PERSONAL INJURY OR DEATH
 • Always unplug the TV before cleaning.
DAMAGE!
 Gently wipe the display panel surface (the screen) with one side of the other. Never spray water on the screen or heavy TV screen) using a dry, soft cloth (cotton, object, flannel, etc.). A hard cloth may damage the LCD screen. The LCD screen of this product can be damaged by ultraviolet radiation from the sun. Avoid contact with alcohol, thinner, benzene, acetone or alkaline solvent cleaners. Abrasive polishes and cleaning agents where the screen may be cleaned, or chemical cloths, which may damage the surface. Never spray volatile window cleaners such as insecticide on the screen, back, sides, or base of the TV cabinet. Such products may damage or discolor the cabinet.
 When you need to clean the LCD screen:
 37) Never hit, press, or place anything on the back cover. These actions will damage internal parts.
Important Safety Instructions
 1) Read these instructions.
 2) Keep these instructions.
ALWAYS
 3) Head all warnings.
 4) Follow all instructions.
 5) Do not use this apparatus near water.
 6) Clean only with dry cloth.
ALWAYS
 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.
 9) Do not defeat the safety purpose of the polarized or grounding type plug. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
 10) Protect the power cord from being walked on or run over, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
ALWAYS
 11) Only use attachments/accessories specified by the manufacturer.
 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus.
 (When a cart is used, use caution when moving the cart/appliance combination to avoid injury from tip-over.)
 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
Service

To Display your LED TV using a Wall Bracket:
 45) If you decide to wall mount your LED TV, always use a wall bracket listed by an independent laboratory (such as UL, CSA, ETL) that is appropriate for the size and weight of the TV.
CAUTION: Two people are required for Never attempt to service the TV yourself. Opening and removing the covers may expose you to dangerous voltage or other hazards. Failure to follow this WARNING may result in death or serious injury. Refer to servicing not specified.
 Remove the screws of the VESA Mounting in this manual to a Toshiba Authorized Service Pattern show in the table below, if applicable. **CAUTION: Do not use the screws removed from the TV.**
 46) If you have the TV serviced:
 back cover to attach the wall mount bracket to the TV.
 • Ask the service technician to use only the replacement parts specified by the manufacturer.
 • Upon completion of service, ask the service technician to perform routine safety checks.
 5) Read the instructions provided with your wall bracket to determine that the TV is in safe operating condition. Before proceeding, make sure the appropriate bracket(s) are attached to the wall and the back of the TV as described in the Choosing a location for your LED TV instructions provided with the wall bracket.
To Display your LCD TV on the included



Manufacturers, retailers and the rest of the consumer electronics industry are committed to making home entertainment safe and enjoyable.
 As you enjoy your television, please note that all televisions - new and old - must be supported in proper stands as indicated according to the manufacturer's recommendations. Televisions that are inappropriately loaded on dressers, bookcases, shelves, desks, speakers, chests, carts, etc., may fall over, resulting in injury.
 Follow the manufacturer's recommendations for the safe installation of your television.
 Read and follow all instructions for proper use of your television.
 Always children to climb on or play on the television or the furniture on which the television is placed.
 Place the television on furniture that can easily be used as steps, such as a chest of drawers.
 Install the television where it cannot be pushed, pulled over or knocked down.
 Route cords and cables connected to the television so that they cannot be tripped over, pulled or grabbed.
 Doubt about your ability to safely mount your television.
 • Ask a mount that has been recommended by the television manufacturer and has a safety certification by an independent laboratory (such as UL, CSA, ETL).
 • Follow all instructions supplied by the television and mount manufacturers.
 • Make sure that the wall or ceiling where you are mounting the television is appropriate.
 • Some mounts are not designed to be mounted to walls and ceilings with steel studs or other block construction. If you are unsure, contact a professional installer.
 • Televisions can be heavy. A minimum of two people is required for a wall or ceiling mount installation.
 Many new television buyers move their older CRT televisions into a secondary room after the purchase of a flat-panel television. Special care should be made in the placement of older CRT televisions.
 • Place your older CRT television on furniture that is sturdy and appropriate for its size and weight.
 • Place your older CRT television on a dresser where children may be tempted to use the drawers to climb.
 • Make sure your older CRT television does not hang over the top of your furniture.
 CEA logo

WARNING: RISK OF SERIOUS PERSONAL INJURY OR DEATH
 permanent damage to TV and TV pedestal.
PERSONAL INJURY OR DEATH
 • Always unplug the TV before cleaning.
DAMAGE!
 Gently wipe the display panel surface (the screen) with one side of the other. Never spray water on the screen or heavy TV screen) using a dry, soft cloth (cotton, object, flannel, etc.). A hard cloth may damage the LCD screen. The LCD screen of this product can be damaged by ultraviolet radiation from the sun. Avoid contact with alcohol, thinner, benzene, acetone or alkaline solvent cleaners. Abrasive polishes and cleaning agents where the screen may be cleaned, or chemical cloths, which may damage the surface. Never spray volatile window cleaners such as insecticide on the screen, back, sides, or base of the TV cabinet. Such products may damage or discolor the cabinet.
 When you need to clean the LCD screen:
 37) Never hit, press, or place anything on the back cover. These actions will damage internal parts.
Important Safety Instructions
 1) Read these instructions.
 2) Keep these instructions.
ALWAYS
 3) Head all warnings.
 4) Follow all instructions.
 5) Do not use this apparatus near water.
 6) Clean only with dry cloth.
ALWAYS
 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.
 9) Do not defeat the safety purpose of the polarized or grounding type plug. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
 10) Protect the power cord from being walked on or run over, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
ALWAYS
 11) Only use attachments/accessories specified by the manufacturer.
 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus.
 (When a cart is used, use caution when moving the cart/appliance combination to avoid injury from tip-over.)
 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
Service



Manufacturers, retailers and the rest of the consumer electronics industry are committed to making home entertainment safe and enjoyable.
 As you enjoy your television, please note that all televisions - new and old - must be supported in proper stands as indicated according to the manufacturer's recommendations. Televisions that are inappropriately loaded on dressers, bookcases, shelves, desks, speakers, chests, carts, etc., may fall over, resulting in injury.
 Follow the manufacturer's recommendations for the safe installation of your television.
 Read and follow all instructions for proper use of your television.
 Always children to climb on or play on the television or the furniture on which the television is placed.
 Place the television on furniture that can easily be used as steps, such as a chest of drawers.
 Install the television where it cannot be pushed, pulled over or knocked down.
 Route cords and cables connected to the television so that they cannot be tripped over, pulled or grabbed.
 Doubt about your ability to safely mount your television.
 • Ask a mount that has been recommended by the television manufacturer and has a safety certification by an independent laboratory (such as UL, CSA, ETL).
 • Follow all instructions supplied by the television and mount manufacturers.
 • Make sure that the wall or ceiling where you are mounting the television is appropriate.
 • Some mounts are not designed to be mounted to walls and ceilings with steel studs or other block construction. If you are unsure, contact a professional installer.
 • Televisions can be heavy. A minimum of two people is required for a wall or ceiling mount installation.
 Many new television buyers move their older CRT televisions into a secondary room after the purchase of a flat-panel television. Special care should be made in the placement of older CRT televisions.
 • Place your older CRT television on furniture that is sturdy and appropriate for its size and weight.
 • Place your older CRT television on a dresser where children may be tempted to use the drawers to climb.
 • Make sure your older CRT television does not hang over the top of your furniture.
 CEA logo




6) After attaching the appropriate bracket(s) to the Pedestal Stand:
 The wall mount kit of the TV, remove the pedestal stand from the TV, as described below.
 Observe the following safety precautions:

7) VESA Mounting Pattern:
 1) Read and follow the pedestal assembly instructions included with the pedestal.
 TV Size
 Hole Pattern (HxV) Screw Size
 CAUTION: Before beginning pedestal assembly,



50L7300U
 400x200 mm
 (Locally by the front of the LCD Panel Face)
 58L7300U
 400x400 mm
 (Locally on a flat, cushioned surface such as a couch or blanket. Leave the bottom of the unit protruding over the edge of the surface and assemble the pedestal as indicated below.)
 Note: Extreme care should always be used when attaching the pedestal stand to avoid damage to the LCD panel.

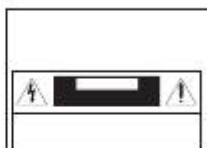

2) Place the TV on a sturdy, level surface that can support the weight of the TV.
 3) Be sure to secure the TV to a wall, pillar, structure, or other immovable structure (see item 26) for additional details.
 14) Refer all servicing to qualified service personnel. Servicing is required when the Do not get water or other liquids come into contact with the product, as it may result in damage, as power-supply cord or plug is damaged, or fire.



15) CAUTION: Do not let water or other liquids come into contact with the product, as it may result in damage, as power-supply cord or plug is damaged, or fire.
 16) WARNING: If liquid has been spilled or objects have fallen onto the television, the apparatus has been or other open flames away from this product exposed to rain or moisture, does not operate at all times, normally, or has been dropped.
 17) CAUTION: Keep the product away from direct sunlight, fire or a heat source such as a heater. This may reduce the product lifetime or result in



Additional Safety Precautions


Fire:
 Head of the TV is dropped and the cabinet or enclosure surface has been damaged or

Installation, Care, and Service
 or enclosure surface has been damaged or installation. Follow these recommendations and precautions following precautions:
 (and heed all warnings when installing your TV:
 • ALWAYS turn off the TV and unplug the power cord to avoid possible electric shock to excessive heat such as sunlight, or fire.

• NEVER allow your body to come in contact with any broken glass or liquid from the damaged television. The LCD panel inside the TV contains glass and a toxic liquid. If unplugged in case the product requires service, the liquid comes in contact with your mouth or eyes, or your skin is cut by broken glass, wall or similar enclosed area, rinse the affected area thoroughly with water.
 21) NEVER route the product's power cord inside a wall or similar enclosed area.

22) Never modify this equipment. Changes or modifications may void: a) the warranty, b) the user's authority to operate this equipment or dropped.
 under the rules of the Federal Communications Commission.
 15) CAUTION: Commission.
 • To reduce the risk of electric shock, do not

23) **DANGER: RISK OF SERIOUS PERSONAL INJURY, DEATH, OR EQUIPMENT DAMAGE**
 blades can be inserted or removed to prevent blade exposure.
 (cart, stand, or table. The TV may
 • To prevent electric shock, match wide blade
 fall, causing serious personal injury or serious damage to the TV.
 16) CAUTION: Do not let children swallow any small parts included on or with the product or play with the plastic bag. Keep the small parts and the plastic bag out of the reach of children.

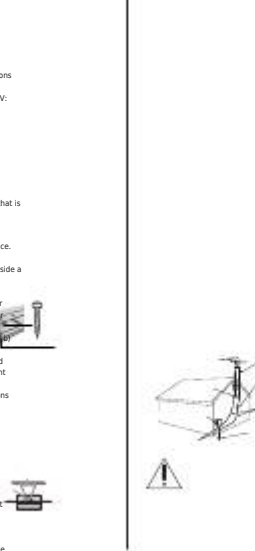

Removing the Pedestal Stand

1) Carefully lay the front of the LCD panel face down on a flat, cushioned surface such as a couch or blanket. Leave the bottom of the unit protruding over the edge of the surface and assemble the pedestal as indicated below.
 Note: Extreme care should always be used when removing the pedestal stand to avoid damage to the LCD panel.



2) Remove the stand screws shown in the diagram below. This will allow removal of the pedestal stand.
 3) Once you have removed all of the screws holding the pedestal stand in place, remove the pedestal stand from the TV.
 CAUTION: Always place the TV on the floor or a sturdy, level, stable surface that can support the weight of the unit. Secure the TV as described in item 26) of the Important Safety Instructions in this document.
 Sony SPT 65 VESA Mounting Pattern




M6
 Four stand screws
 One clip
 M6
 (Sample illustration)
 M6
 (unit in mm)
 GMA501157010 1/13

Do not doubt about your ability to safely mount your television.
 • Also a mount that has been recommended by the television manufacturer and has a safety certification by an independent laboratory (such as UL, CSA, STUL).
 • Follow all instructions supplied by the television and mount manufacturers.
 • Make sure that the wall or ceiling where you are mounting the television is appropriate.
 • Some mounts are not designed to be mounted to walls and ceilings with steel studs or other block construction. If you are unsure, contact a professional installer.
 • Televisions can be heavy. A minimum of two people is required for a wall or ceiling mount installation.

• Manufacturers, retailers and the rest of the consumer electronics industry are committed to making home entertainment safe and enjoyable.
 • As you enjoy your television, please note that all televisions - new and old - must be supported in proper stands as intended according to the manufacturer's recommendations. Televisions that are inappropriately loaded on dressers, bookcases, shelves, desks, speakers, chests, carts, etc., may fall over, resulting in injury.
 • Follow the manufacturer's recommendations for the safe installation of your television.
 • Read and follow all instructions for proper use of your television.
 • Allow children to climb on or play on the television or the furniture on which the television is placed.
 • Place the television on furniture that can easily be used as steps, such as a chest of drawers.
 • Install the television where it cannot be pushed, pulled over or knocked down.
 • Route cords and cables connected to the television so that they cannot be tripped over, pulled or grabbed.

• Many new television types move their older CRT televisions into a secondary room after the purchase of a flat-panel television. Special care should be made in the placement of a flat-panel television on furniture that is sturdy and appropriate for its size and weight.
 • Place your older CRT television on a dresser where children may be tempted to use the drawers to climb.
 • Make sure your older CRT television does not hang over the edge of your furniture.

CEA
 Electronic Industries Association
 www.cea.com

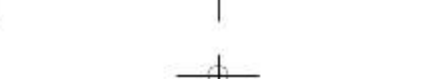

[Next Page](#)

1

2

Related Manuals for Toshiba 50L7300U

[LED TV Toshiba 39L4300UM User Manual](#)

Integrated high definition led television (186 pages)

[LED TV TOSHIBA 65L7300U User Manual](#)

(98 pages)

[LED TV TOSHIBA 65L7300U User Manual](#)

(90 pages)

[Keyboard Toshiba 58L7350U User Manual](#)

Wireless keyboard users guide I7300, I7350 series cloud tv (2 pages)

[LED TV Toshiba 19L4200U User Manual](#)

Integrated high definition led television (141 pages)

[LED TV Toshiba 50L2200U User Manual](#)

Integrated high definition led television (131 pages)

[LED TV Toshiba 32L2200U User Manual](#)

Integrated high definition led television (139 pages)

[LED TV Toshiba 50L1350U Specifications](#)

50" class led hd tv (2 pages)

[LED TV Toshiba 32L2400U Resource Manual](#)

Integrated high definition led television (2 pages)

[LED TV Toshiba 32L1400U Resource Manual](#)

Integrated high definition led television (2 pages)

[LED TV Toshiba 32L1400U User Manual](#)

Integrated high definition led television (115 pages)

[LED TV Toshiba 39L4300 Series Owner's Manual](#)

With android (60 pages)

[LED TV Toshiba 49L420U Quick Start Manual](#)

(2 pages)

[LED TV Toshiba 50L711U18 Quick Setup Manual](#)

50"/55" 2160p (4k), 60hz, led chromecast built-in tv (2 pages)

[LED TV Toshiba 43LF621U19 Quick User Manual](#)

43 inch / 50 inch / 55 inch 60 hz led tv / 4k ultra hd (2 pages)

[LED TV Toshiba 40L555 Series Owner's Manual](#)

Led tv with android (72 pages)

Summary of Contents for Toshiba 50L7300U

[Page 1](#) Dear Customer, Important Safety Instructions 14) Refer all servicing to qualified service 17) CAUTION: Thank you for purchasing this Toshiba LED TV. CHILD SAFETY: personnel. Servicing is required when the Do not let water or other liquids come into Read these instructions.

[Page 2](#) Connecting a digital audio system Connecting a DVD player with ColorStream ® or a VCR with composite video For detailed information, see the "Connecting your TV" section in the User's Guide located at support.toshiba.com. TV back panel Digital audio system HDMI IN...

This manual is also suitable for:

5017300um5817300u5817300um6517300u6517300um