





## Whirlpool LGR4634JQ2 Use & Care Manual

Electric and gas dryers



1  
Table Of Contents  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15

• PAGE

1



- 

[Table of Contents](#)

- 

Troubleshooting

•

## Bookmarks

## Quick Links

[1 Table of Contents](#)

[2 Parts and Features](#)

[3 Checking Your Vent](#)

[4 Troubleshooting](#)

[Download this manual](#)





®

1 01

Appliances

# ELECTRIC AND GAS DRYERS

For questions about features, operation/performance,  
parts  
accessories or service call 1-800-253-t301.  
In Canada,



ELE  
CA

for assistance, call: 1-800-462-5681

for  
installation

and service,

call: 1-800-807-6777

or visit our website at...www.whirlpool.com

or

www.whirlpool.com/canada

# S]\_CHEUSES ]\_LECTRIQUESET hGAZ

## Guide d'utilisation et d'entretien

Pour assistance, composer le 1-800-461-5681,

pour installation ou service le 1-800-807-6777

ou visitez notre site web & www.whirlpool.com/canada

Table of Contents/ Table des matières ..... 2

8314832

--



ELE  
GA  
Us

For questions a  
access

In Canada  
for install

[Table of Contents](#)

[Next Page](#)

1  
2  
3  
4  
5

## Related Manuals for Whirlpool LGR4634JQ2

[Dryer Whirlpool LGR4634JQ0 Installation Instructions Manual](#)

(13 pages)

[Dryer Whirlpool LGR4634PQ Installation Instructions Manual](#)

29" (73.7 cm) gas dryer (20 pages)

[Dryer Whirlpool LGR4634PQ User Instructions](#)

User instructions (16 pages)

[Dryer Whirlpool GEQ8831LL0 User Instructions](#)

Whirlpool user instructions dryer (16 pages)

[Dryer Whirlpool LDR3422A Use And Care Manual](#)

Compact automatic dryers (16 pages)

[Dryer Whirlpool LDR3822D Use And Care Manual](#)

Compact electric and gas dryers (20 pages)

[Dryer Whirlpool LDR3822B Use And Care Manual](#)

Compact electric and gas dryers (21 pages)

[Dryer Whirlpool LGR4634EQ3 Top And Console Parts](#)

Gas dryer (7 pages)

[Dryer Whirlpool LEC8858EZ0 Use And Care Manual](#)

Electric and gas dryers (27 pages)

[Dryer Whirlpool LER3624EQ1 Use & Care Manual](#)

Electric and gas dryers (21 pages)

[Dryer Whirlpool LEC8858EQ1 Use & Care Manual](#)

Electric and gas dryers (23 pages)

[Dryer Whirlpool LGR6646BW2 Use And Care Manual](#)

Electric and gas dryers (25 pages)

[Dryer Whirlpool LGR7620LQ0 Parts List](#)

Whirlpool 29" gas dryer top and console parts (8 pages)

[Dryer Whirlpool Gas dryer Installation Instructions](#)

(5 pages)

[Dryer Whirlpool LER56000 Use & Care Manual](#)

(21 pages)

[Dryer Whirlpool LER3624PQ User Instructions](#)

User instructions (16 pages)

## Summary of Contents for Whirlpool LGR4634JQ2

[Page 1](#) 1-800-807-6777 or visit our website at...www.whirlpool.com www.whirlpool.com/canada S]\_CHEUSES ]\_LECTRIQUESET hGAZ Guide d'utilisation et d'entretien Pour assistance, composer le 1-800-461-5681, pour installation ou service le 1-800-807-6777 ou visitez notre site web & www.whirlpool.com/canada Table of Contents/Table des matières ..... 2 8314832...

### [Page 2: Table Of Contents](#)

TABLE OF TABLES MATURES CONTENTS DRYER SAFETY .....SECURITE DE LA SIECHEUSE .....PARTS AND FEATURES .....PIECES ET CARACTERISTIQUES .....1\_ CHECKING YOUR VENT ..... VÉRIFICATION DU CONDUIT D'ÉVACUATION ..... 2( USING YOUR DRYER

### [Page 3: Dryersafety](#)

DRYERSAFETY Your safety and the safety of others are very important. We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages. This symbol alerts you to potential hazards that can kill or hurt you and others. All safety messages will follow the safety alert symbol and either the word "DANGER"...

[Page 4](#) IMPORTANT SAFETY INSTRUCTIONS WARNING: To reduce the risk of fire, electric shock, or injury to persons when using the dryer, follow basic precautions, including the following: • Read all instructions before using the dryer. • Do not repair or replace any part of the dryer or attempt any servicing unless specifically recom- •...

### [Page 5: Partsand Features](#)

PARTSAND FEATURES .....4. :%.; Control panel Additional features your dryer may have: Model and serial number label Large side-swing door End of Cycle Signal selector Dryer drum WRINKLE SHIELD" selector 4. ,\_lint screen WRINKLE SHIELD" PLUS selector 5r\_il Exhaust grill ACCUDRY"...

### [Page 6: Checking Your Vent](#)

3. The exhaust vent can be routed up, down, left, ri( CHECKING straight out the back of the dryer. Space requiren are listed in your Installation Instructions. YOUR VENT Your dryer must be properly installed and vented to achieve maximum drying efficiency and shorten drying times.

### [Page 7: Using Yourdryer](#)

USING Starting YourDryer Before using your dryer, wipe the dryer drum with a damp YOURDRYER cloth to remove dust from storing and shipping. 1. Load clothes loosely into the dryer and close the door. Do not pack the dryer. Allow space for clothes to tumble freely.

### [Page 8: Stopping And Restarting](#)

Cycle tips Stopping and Restarting • Dry most loads using the Energy Preferred Automati setting ( \* ). You can stop your dryer anytime during a cycle. • Use the no heat (air) cycle (if available) for rubber, To stop your dryer plastic or heat sensitive fabrics.

### [Page 9: Additional Features](#)

Shake and fluff pillows by hand periodically during on the temperature selector. DRYEL, when used in cycle. accordance with the manufacturer's directions, has been • Dry item completely. Foam rubber pillows are slow to tested and approved for use in full-size dryers built by Whirlpool Corporation. dry.

[Page 10](#) Damp Dry 3. Select the Timed Drying cycle and temperature, or the Fluff Air cycle. Push the START button. Select this setting to dry items to a damp level or dry items that do not require an entire drying cycle. Damp dry items such as jeans (to prevent stiffness) or cotton clothes (to make pressing easier).

### [Page 11: Caring Foryour Dryer](#)

To wash CARING FORYOUR 1. Wet both sides of lint screen with hot water, 2. Wet a nylon brush with hot water and liquid detergent, DRYER Scrub lint screen with the brush to remove residue buildup. Cleaning the Lint Screen 3, Rinse screen with hot water.

### [Page 12: Changing The Drum Light](#)

TROUBLE. Changing the Drum If your dryer has a drum light, the dryer light automatically SHOOTING turns on inside the dryer drum when you open the door. First try the solutions suggested here and possibly avoid the cost of a service call... Clothes are not drying satisfactorily Check the following: Is the lint screen clogged with lint?

[Page 13](#) Unusualsounds Items shrinking Has the dryer had a period of non-use? • Was the dryer overloaded? If the dryer hasn't been used for a while, there may be a Dry smaller loads that can tumble freely. thumping sound during the first few minutes of Did the load overdry? operation.

## [Page 14: Troubleshooting](#)

To locate the Whirlpool designated service company in your area, you can also look in your telephone directory Yellow Pages. For further assistance If you need further assistance, you can write to Whirlpool with any questions or concerns at: Whirlpool Corporation Consumer Assistance Center c/o Correspondence Dept.

## [Page 15: Warranty](#)

Whirlpool Corporation will pay for FSP \_ replacement parts and repair labor to correct defects in materials or workmanship. Service must be provided by a Whirlpool deslgneted service company. Whirlpool Corporation will not pay for: 1.

This manual is also suitable for:

[Ler4634jz0Lgr4634jq1Lgr4634jt1Len2000jt0Ler4634jt0Lgr4634jz1](#) ... [Show all](#)