



Whirlpool MH2155XP Use & Care Manual

Microwave hood combination

1	
Table Of Contents	
2	
3	
4	
5	
6	
7	
8	
9	
10	
11	
12	
13	
14	
15	
16	



-

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks

Quick Links

[1 Troubleshooting](#)

[Download this manual](#)



MICROWAVEHOOD COMBINATION

For questions
about features, operation/performance
parts, accessories
or service,
call: 1-800-253-1301.
or visit our website at...
www.whirlpool.com

Table of Contents

2

Model

MH2155XP

8205965/4619-652-64132

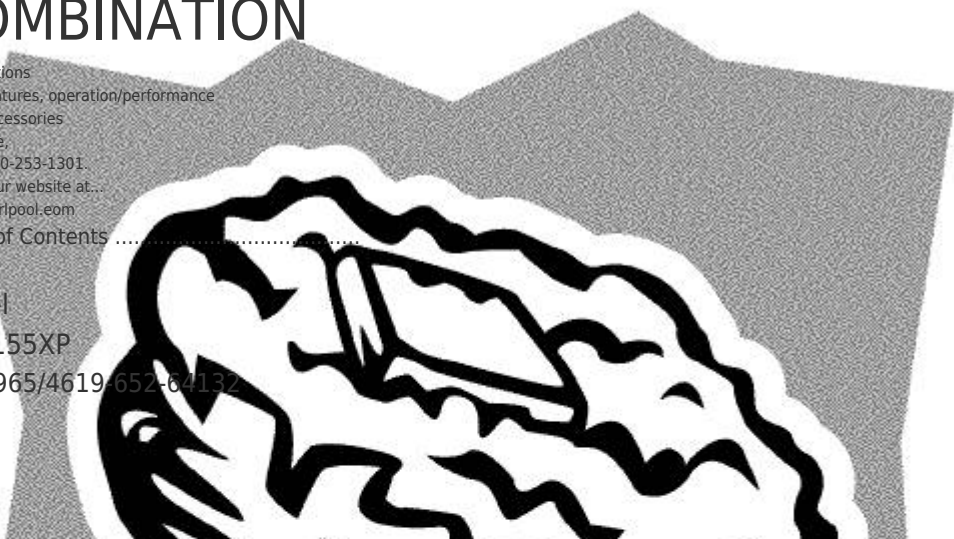


Table of Contents

[Next Page](#)

1
2
3
4
5

Related Manuals for Whirlpool MH2155XP

[Microwave Oven Whirlpool MH2155XP Use & Care Manual](#)

Whirlpool microwave/hood combination use & care guide mh2155xp (16 pages)

[Microwave Oven Whirlpool MH2155XPB0 Use & Care Manual](#)

Hood combination (16 pages)

[Microwave Oven WHIRLPOOL 8183878-D-WH Dimensions And Installation Information](#)

(1 page)

[Microwave Oven WHIRLPOOL 8206540 Use And Care Manual](#)

Microwave hood combination (20 pages)

[Microwave Oven Whirlpool MH1170XS Installation Instructions Manual](#)

Microwave hood combination (12 pages)

[Microwave Oven Whirlpool MH2175XSB User Instructions](#)

Microwave hood combination (6 pages)

[Microwave Oven Whirlpool MH2175XST Use And Care Manual](#)

Microwave hood combination (20 pages)

[Microwave Oven Whirlpool MH2175SXB0 Parts List](#)

Microwave oven 1.7 cu. ft. (7 pages)

[Microwave Oven Whirlpool MH2175XS Installation Instructions Manual](#)

Whirlpool mh2175xs: install guide (12 pages)

[Microwave Oven Whirlpool GMH3174XV Dimensions](#)

Microwave hood combination (1 page)

[Microwave Oven Whirlpool MH2175XS Use & Care Manual](#)

Whirlpool microwave hood combination mh2175xs use & care guide (20 pages)

[Microwave Oven Whirlpool MH1160XS Product Dimensions](#)

Microwave hood combination (1 page)

[Microwave Oven Whirlpool MH2175XS Limited Warranty](#)

Whirlpool mh2175xs: user guide (1 page)

[Microwave Oven Whirlpool MH2175XSB1 Parts List](#)

Microwave oven/hood 1.7 cu. ft. (7 pages)

[Microwave Oven Whirlpool MH2175XSQ1 Parts List](#)

Microwave oven 1.7 cu. ft. (7 pages)

[Microwave Oven Whirlpool MH1170XSY4 User Instructions](#)

Hood combination (6 pages)

Summary of Contents for Whirlpool MH2155XP

[Page 1](#) MICROWAVEHOOD COMBINATION For questions about features, operation/performance parts, accessories or service, call: 1-800-253-1301. or visit our website at... www.whirlpool.com Table of ContentsModel MH2155XP 8205965/4619-652-64132...

[Page 2: Table Of Contents](#)

TABLEOF CONTENTS MICROWAVE OVEN SAFETYElectrical Requirements
PARTS AND FEATURESTurntableCooking RackMICROWAVE
OVEN CONTROL DisplayProgress Bar Number Codes
.....StartAdd 30 SecondsCancelClock

Tones

[Page 3: Microwave Oven Safety](#)

MICROWAVE OVEN SAFETY safety safety important. Your and the others are very We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages. This symbol alerts you to potential hazards that can kill or hurt you and others. All safety messages will follow the safety alert symbol and either the word "DANGER"...

[Page 4](#) IMPORTANT SAFETY INSTRUCTIONS [] Liquids, such as water, coffee, or tea are able to be [] Do not clean with metal scouring pads. Pieces can overheat beyond the boiling point without appearing burn off the pad and touch electrical parts involving a risk of electric shock.

[Page 5: Parts and Features](#)

PARTS AND FEATURES This manual may cover several different models. The model you have purchased may have some or all of the features shown here. The appearance of your particular model may differ slightly from the illustrations in this manual. Electrical Shock Hazard Plug into a grounded 3 prong outlet.

[Page 6: Microwave Oven Control](#)

- Rack will become hot. Always use oven mitts or pot holders
- Turning Off the Turntable when handling. The turntable can be turned off (except during an auto function). This is helpful when cooking with plates that are larger than the •...

[Page 7: Display](#)

The microwave oven is preset with shortcut number codes. A Tones are audible signals, indicating the following: number code includes one or more of the following: cooking power, cook time and food quantity or weight. See the charts in One tone the "Cooking" and/or " Reheating" sections for additional • Valid entry (short tone) information.

[Page 8: Vent Fan](#)

The vent fan has 4 speeds ranging from 4 (fastest) to 1 (slowest). The cooktop light has 3 settings: on, night and off. Zero (0) is off. To Turn On/Night/Off: Touch LIGHT ON-NIGHT-OFF repeatedly To protect the microwave oven, if the temperature from the range to cycle through settings. or cooktop below the microwave oven gets too hot, the vent fan will automatically turn on at speed 4. It may stay on for up to...

[Page 9: Cookware And Dinnerware](#)

Do Not Use Cookware and dinnerware must fit on the turntable. Always use Metal cookware and bakeware, gold, silver, pewter, non- oven mitts or pot holders when handling because any dish may approved meat thermometers, skewers, twist ties, foil liners such become hot from heat transferred from the food. Do not use as sandwich wrappers, staples and objects with gold or silver cookware and dinnerware with gold or silver trim.

[Page 10](#) FOOD SERVING SIZE INSTRUCTIONS Frozen 10-20 oz Remove from package. To Use: Entree (283-567 g) Loosen cover on three sides. If not in microwavable 1. Touch COOK TIME. container, place on plate, Touch number pads to enter cooking time. cover with plastic wrap and 2.

[Page 11: Sensor Cooking](#)

To Use Preset Cooking: 1. Touch COOK. 2. Touch number pad from chart Times and cooking power have been preset for reheating specific foods. Use the following chart as a guide. Touch COOK repeatedly to scroll through foods. FOOD QUANTITY/INSTRUCTIONS 3.

[Page 12: Warm Hold](#)

The Defrost system has 3 categories: Meat, Poultry and Fish. It To Defrost Manually: should not be used for food left outside the freezer more than 1. Touch COOK TIME. 20 minutes and frozen ready-made food. Use the following chart 2.

[Page 13: General Cleaning](#)

OVEN CAVITY COOKING RACK Do not use abrasive cleansers or scrubbers. Do not use soap-filled scouring pads, abrasive cleaners, steel- wool pads, gritty washcloths or some recycled paper towels. • Mild cleanser, water and washcloth Damage may occur. • Do not place in dishwasher. The area where the oven door and frame touch when closed should be kept clean.

[Page 14: Troubleshooting](#)

TROUBLESHOOTING The cooktop light is a candelabra base bulb. See "Assistance Service" section to reorder. Try the solutions suggested here first in order to avoid the cost of an unnecessary service call. To Replace: 1. Unplug microwave oven or disconnect power.

[Page 15: Assistance Orservice](#)

- Is the incoming voltage less than specified in "Microwave If you need further assistance, you can write to Whirlpool Oven Safety?" Corporation with any questions or concerns at: Have a qualified electrician check the electrical system in the home.

[Page 16](#) YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE. Outside the 50 United States and Canada, this warranty does not apply. Contact your authorized Whirlpool dealer to determine if another warranty applies.