



Whirlpool WMC30516 Use & Care Manual

1	
Table Of Contents	
2	
3	
4	
5	
6	
7	
8	
9	
10	
11	
12	
13	
14	
15	
16	



-

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks

Quick Links

[1 Installation Instructions](#)

[2 Display](#)

[3 Troubleshooting](#)

[4 Replacement Parts](#)

[Download this manual](#)

See also: [Use and Care Manual](#)



1

®

MICROWAVEOVEN

For questions
about features, operation/performance,
parts, accessories
or service,

call: 1-800-253-1301
or visit our website at...
www.whirlpool.com

Table of Contents

2

Model

WMC30516

W10434129B



Table of Contents

[Next Page](#)

1
2
3
4
5

Related Manuals for Whirlpool WMC30516

[Microwave Oven Whirlpool WMC30516H Use & Care Manual](#)

(16 pages)

[Microwave Oven Whirlpool WMC30516AB Use And Care Manual](#)

Use & care guide (16 pages)

[Whirlpool WMC30516HV - 1.6 cu. ft. Countertop Microwave with 1,200-Watt Cooking Power Manual](#)

(article)

[Microwave Oven Whirlpool WMC30311LUS Use & Care Manual](#)

(28 pages)

[Microwave Oven Whirlpool WMC30309LS Use & Care Manual](#)

(28 pages)

[Whirlpool WMC30309LS - 0.9 Cu. Ft. Capacity Countertop Microwave with 900 Watt Cooking Power Manual](#)

(article)

[Microwave Oven Whirlpool WMC30311LD Use & Care Manual](#)

(28 pages)

[Whirlpool WMC30311LD - 1.1 Cu. Ft. Capacity Countertop Microwave with 900 Watt Cooking Power Manual](#)

(article)

[Microwave Oven Whirlpool WMC10007AB Installation Instructions Manual](#)

Under-the-cabinet installation instructions (12 pages)

[Microwave Oven Whirlpool WMC10007AB Use And Care Manual](#)

Use & care guide (24 pages)

[Microwave Oven Whirlpool WMC50522AS Use And Care Manual](#)

2.2 cu. ft. countertop microwave with greater capacity (16 pages)

[Microwave Oven WHIRLPOOL wmc10511 Use & Care Manual](#)

(32 pages)

[Microwave Oven Whirlpool WMC11009AS Use & Care Manual](#)

(32 pages)

[Microwave Oven Whirlpool WMCS7024PW Series Use & Care Manual](#)

(32 pages)

[Microwave Oven Whirlpool WMCS7022PW Series Use & Care Manual](#)

(32 pages)

[Microwave Oven Whirlpool WMCS7024RW Use & Care Manual](#)

(40 pages)

Summary of Contents for Whirlpool WMC30516

[Page 1](#) ® MICROWAVEOVEN For questions about features, operation/performance, parts, accessories or service, call: 1-800-253-1301. or visit our website at... www.whirlpool.com Table of ContentsModel WMC30516 W10434129B...

[Page 2: Table Of Contents](#)

TABLE OF CONTENTS	MICROWAVE OVEN SAFETY	INSTALLATION INSTRUCTIONS					
.....	Unpacking	Location Requirements	Electrical Requirements		
PARTS AND FEATURES	Turntable	MICROWAVE OVEN CONTROL			
Display	Start	Add 30 Seconds	Cancel	Tones
.....	Clock						

[Page 3: Microwave Oven Safety](#)

MICROWAVE OVEN SAFETY Your safety and the safety of others are very important. We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages. This is the safety alert symbol. This symbol alerts you to potential hazards that can kill or hurt you and others. All safety messages will follow the safety alert symbol and either the word "DANGER"...

Page 4 **IMPORTANT SAFETY INSTRUCTIONS** [] Do not store this microwave oven outdoors. Do not use [] Do not operate any heating or cooking appliance beneath the microwave oven. Do not use the microwave oven near water - for example, near a kitchen sink, in a wet basement, or near a swimming pool. [] Do not mount microwave oven over or near any portion of a pool, or similar locations.

[Page 5: Installation Instructions](#)

INSTALLATION INSTRUCTIONS 1. Empty the microwave oven of any packing materials. 2. Clean the inside with a soft, damp cloth. 3. Check for damage, such as: • a door that is not lined up correctly • damage around the door, or •...

[Page 6: Parts and Features](#)

PARTS AND FEATURES **MICROWAVE OVEN CONTROL** This manual may cover several different models. The model you have purchased may have some or all of the features shown here. The appearance of your particular model may differ slightly from the illustrations in this manual. •...

[Page 7: Display](#)

When power is first supplied to the microwave oven, "0:00" will appear in the display. Tones are audible signals that cannot be turned off. These tones appear in the display. If the "0:00" appears in the display at any time, it indicates the following: other time, a power failure has occurred. Reset the clock if one tone is needed.

[Page 8: Microwave Oven Use](#)

MICROWAVE OVEN USE A magnetron in the microwave oven produces microwaves which reflect off the metal floor, walls and ceiling and pass through the turntable and appropriate cookware to the food. Microwaves are attracted to and absorbed by fat, sugar and water molecules in the food, causing them to move, producing friction and heat. Covering food helps retain moisture, shorten cook time and...

[Page 9: Aluminum Foil And Metal](#)

MATERIAL RECOMMENDATIONS Melamine Follow manufacturer's recommendations. Many recipes for microwave cooking specify which cooking power to use by percent or name. For example, PL7=70%= Paper: Towels, Use nonrecycled and those approved by Medium-High. Dinnerware, the manufacturer for microwave oven use. Napkins One of the power icons (see "Function Icons"...

[Page 10: Manual Cooking](#)

NOTE: To cook at 100% power, begin by touching the number pads. Use the FAVORITE control to program, store and recall the top ten timer cook times, then touch START. 3 most frequently used manual cook programs. Each Favorite may have 1 or 2 stages (see "Cooking in Stages" section). In the event of a power failure, the saved Favorites will have to be reprogrammed.

[Page 11: Quick Touch Menu \(Sensor And Non-Sensor\)](#)

The following menu items are preprogrammed for quick and easy cooking/reheating. For added convenience, the available/recommended amounts shown in the following chart are included on the Cooking Guide label (see "Parts and Features" for its location). **MENU ITEM SERVING SIZE**

[Page 12: Weight Defrost / Time Defrost](#)

The Weight Defrost feature's preset programs can be used, the Timed Defrost feature can be used, or the microwave oven can be manually set to defrost. • Unwrap foods and remove lids (for example, from fruit juice Use Weight Defrost: containers) before defrosting.

[Page 13: Microwave Ovencare](#)

MICROWAVE OVENCARE IMPORTANT: Before cleaning, make sure all controls are off and the microwave oven is cool. Always follow label instructions cleaning products. Soap, water and a soft cloth or sponge are suggested unless otherwise noted. MICROWAVE OVEN CAVITY MICROWAVE OVEN DOOR AND EXTERIOR The area where the microwave oven door and frame touch when To avoid damage to the microwave oven cavity, do not use soap...

[Page 14: Troubleshooting](#)

TROUBLESHOOTING Try the solutions suggested here first in order to avoid the cost of an unnecessary service call. Turntable alternates rotation directions Nothing will operate Has a household fuse blown, or has a circuit breaker • This is normal and depends on motor rotation at beginning of tripped? cycle.

[Page 15: Assistance Or Service](#)

Before calling for assistance or service, please check "Troubleshooting." It may save you the cost of a service call. If If you need further assistance, you can write to Whirlpool you still need help, follow the instructions below. Corporation with any questions or concerns at:...

[Page 16: Warranty](#)

3. The consultant will advise whether the microwave qualifies for repair or replacement. 4. In the event of repair, you may be directed to forward the product to a Whirlpool designated service center. You are responsible for insurance and freight to the designated service center. Please include your name and address on a piece of paper, along with a copy of the proof of purchase (register receipt, charge slip, etc.).

This manual is also suitable for:

[Kcms1655](#)