

TOSHIBA

Toshiba 14DVL75 Owner's Manual

14-inch diagonal lcd tv/dvd combination

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

Table Of Contents

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54

--

•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks

[Download this manual](#)

Quick Links



TOSHIBA

0 00 -

VIDE
o

OJGWTACA.OWO
DIGITAL

TOSHIBA

14-inch* Diagonal LCD TV/DVD

COMBINATION



Introduction
Connections
Basic setup |
TV operation

14-inch* Diagonal LCD TV/DVD

14DLV75

OWNER'S MANUAL

Basic playback
Advanced playback
Function setup i
Others

TOSHIBA

©2005 Toshiba Corporation

Before operating the unit, please read this manual thoroughly.

*Screen size is approximate.

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba 14DVL75

[TV DVD Combo Toshiba 14DLV75 Service Manual](#)

14-inch lcd tv/dvd combination (116 pages)

[TV DVD Combo Toshiba 14DLV75 Owner's Manual](#)

14-inch diagonal lcd tv/dvd combination (54 pages)

[TV DVD Combo Toshiba 19LV610U Owner's Manual](#)

19/22/26-inch class lcd tv/dvd combination (76 pages)

[TV DVD Combo Toshiba 15DLV77 Owner's Manual](#)

15-inch diagonal lcd tv/dvd combination (68 pages)

[TV DVD Combo Toshiba 15DLV77 Service Manual](#)

15-inch diagonal lcd tv/dvd combination (38 pages)

[TV DVD Combo Toshiba 15DLV76 Owner's Manual](#)

15-inch diagonal lcd tv/dvd combination (60 pages)

[TV DVD Combo Toshiba 17HLV85 Owner's Manual](#)

Lcd tv/dvd (66 pages)

[TV DVD Combo Toshiba 19CV100U Owner's Manual](#)

Integrated high definition lcd tv/dvd combination (88 pages)

[TV DVD Combo Toshiba 19HLV87 Owner's Manual](#)

19-inch diagonal lcd tv/dvd combination (85 pages)

[TV DVD Combo Toshiba 19HLV87 Owner's Manual](#)

19-inch lcd tv/dvd combination (80 pages)

[TV DVD Combo TOSHIBA 24SLV411U Owner's Manual](#)

Integrated high definition lcd tv/dvd combination (337 pages)

[TV DVD Combo Toshiba 19DV733G Owner's Manual](#)

Lcd tv/dvd combination (92 pages)

[TV DVD Combo Toshiba 19DV733G Service Manual](#)

Lcd tv/dvd combination (76 pages)

[TV DVD Combo Toshiba 19DV555DB Owner's Manual](#)

19/22-inch diagonal lcd tv/dvd combination (64 pages)

[TV DVD Combo Toshiba 19DV555DB Service Manual](#)

19-inch diagonal lcd tv/dvd combination (176 pages)

[TV DVD Combo toshiba 19DV550P Service Manual](#)

19-inch diagonal lcd tv/dvd combination (76 pages)

Summary of Contents for Toshiba 14DVL75

[Page 1](#) DIGITAL Connections 14-inch* Diagonal LCD TV/DVD COMBINATION Basic setup | TV operation 14DLV75 Basic playback Advanced playback OWNER'S MANUAL Function setup | Others ©2005 Toshiba Corporation Before operating the unit, please read this manual thoroughly. *Screen size is approximate.

[Page 2](#) Introduction IMPORTANT SAFEGUARDS The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

[Page 3: Important Safeguards](#)

IMPORTANT SAFEGUARDS 1. READ INSTRUCTIONS All the safety and operating instructions should be read before the unit is operated. 2. RETAIN INSTRUCTIONS The safety and operating instructions should be retained for future reference. 3. HEED WARNINGS All warnings on the unit and in the operating instructions should be adhered to. 4.

[Page 4](#) Introductio_ IMPORTANT SAFEGUARDS (continued) 13. LIGHTNING To protect your unit from a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the unit due to lightning and power line surges.

[Page 5](#) --41 19. REPLACEMENT PARTS When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards. 20.

[Page 6: Precautions](#)

[Notes on moisture condensation • Do not shock the LCD panel. It may cause unit Moisture condensation damages the unit. Please damage and malfunction. read the following carefully. • When shipping the unit, the original shipping carton and packing materials come in handy.

[Page 7: Notes On Discs](#)

• Do not touch the playback side of the disc. Normally, DVD video discs are divided into titles, and For example, handle the disc so that it is shown in the titles are sub-divided into chapters. Video CDs and Audio CDs are divided into tracks. figure below.

[Page 8](#) Because of problems and errors that can occur during the creation of DVD software and/or the manufacture of DVD discs, Toshiba cannot guarantee that the DVD player contained in the unit will play every feature of every DVD bearing the DVD logo. As one of the creators of DVD...

[Page 9: Table Of Contents](#)

Introduction Basic playback IMPORTANT SAFEGUARDS2 Playing a discPrecautions
.....Notes on discs Advanced playback ContentsZooming
.....Identification of controlsLocating desired sceneRepeat playback
.....Connections A-B Repeat playbackProgram playback Antenna connections
.....

[Page 10: Identification Of Controls](#)

/_ ntification of controls See the page in [_ for details. VOLUME (-/+) buttons SKIP (1 1 1/I,-.1)
b_uttons [_ CHANNEL (V/A) buttons STOP(m) button [_ PLAY (1_) button [_ ÷ ÷ POWER indicator
Remote sensor 14/01/2005, 7:43 PM...

[Page 11](#) & Adjusting the angle of the base Approx. 5° Left Side Right Side You can adjust the angle of the TV-screen for 5 ° forward or for 15 ° backward from vertical angle. Hold the base of the TV while adjusting the angle.

[Page 12](#) REPEAT A-B button [_ ANGLE AUDIO SUBTITLE ANGLE button [_ AUDIO button [_
SUBTITLE button [_ TOSHIBA DO-LB1 *DVD MENU button Use the DVD MENU button to display
the menu included on many DVD video discs. To operate a menu, follow the instructions in
"DVD menu."...

[Page 13](#) | Inserting batteries Open the battery compartment Install two "R03/AAA" batteries
Replace the compartment cover in the direction of the (supplied), paying attention to cover.
arrow, the polarity indicated in the battery compartment. & • Aim the remote control at the
remote sensor and press control buttons to operate. • ...

[Page 14: Antenna Connections](#)

:: tenna connections If you are using an indoor or outdoor antenna, follow the instructions below
that correspond to your antenna system. If you are using a cable TV service (CABLE), see page
15 for Cable TV connections. Combination VHF/UHF antenna (Single 75 ohm cable or 300 ohm

twin,lead wire) Connect the 75 ohm cable from the combination Antenna Antenna...

[Page 15: Cable Tv Connections](#)

TV connections This TV/DVD has an extended tuning range and can tune most cable channels without using a Cable TV converter box. Some cable companies offer "premium pay channels" in which the signal is scrambled. Descrambling these signals for normal viewing requires the use of a descrambler device which is generally provided by the cable company. Antenna For basic cable service not requiring a converter/descrambler jack...

[Page 16: Connecting To Optional Equipment](#)

The unauthorized recording, use, distribution, i: nneeting to optional equipment or revision of television programs, videotapes, DVDs, and other materials is prohibited under can enjoy VCR, camcorder or YV game with connection to external the Copyright Laws of the United States and input.

[Page 17](#) Connecting an optional equipment with ColorStream _ (Component video) output] Your TV/DVD is capable of using ColorStream ® (component video). Connecting your TV/DVD to a component video compatible DVD player, such as a Toshiba DVD player with ColorStream ® can greatly enhance picture +...

[Page 18](#) i:: nnecting to optional equipment (continued) You can enjoy high quality dynamic sounds by connecting * This section uses the following reference mark. TV/DVD to optional audio equipment. Front speaker D : Center speaker Rear speaker _ : Signal flow Sub woofer Connecting to an amplifier equipped...

[Page 19](#) MPEG2 sound You can enjoy motion picture and live concert DVD video discs encoded via the MPEG2 recording system with dynamic realistic sound by connecting an amplifier equipped with an MPEG2 audio decoder or MPEG2 audio processor. & " _ Rear lower right of the TV _mplifier equipped with MPEG2 audio decoder / type digital...

[Page 20: Power Source](#)

source TO USE AC POWER 1. Connect the AC cord to the AC adapter.
ggggggOODDggggggggggOODDggggggggggOODDggggggggggOODDggggggggggOODDgggggg
ggggggOODDggggggggggOODDggggggggggOODDggggggggggOODDgggggggggg 2. Connect the AC adapter plug into the TV/DVD's DC input jack.
ggggggOODDggggggggggOODDggggggggggOODDggggggggggOODDgggggggggg 3. Connect the AC cord into a wall outlet. Notes: • Make sure to insert the plug of each cord securely. •...

[Page 21: Basic Setup Setting The Language](#)

iiii _:_ POWER This TV/DVD can display the on screen language in English, Spanish or French in the TV mode. Select the language you prefer first, then proceed with the other menu <iii options. Alr/</• ENTER MENU To turn on the TV/DVD, press POWER.

[Page 22: To Memorize Channels](#)

..memorize channels This TV/DVD is equipped with a channel memory feature which allows channels to skip up or down to the next channel set into memory, skipping over unwanted channels. Before selecting channels, they must be programmed into the TV/DVD's memory.

[Page 23: Tv Operation Tv Operation](#)

operation POWER To turn on the TV/DVD, press POWER. Press direct channel selection (0-9) to select the channel. The Power indicator on the front of the main unit will light. TV mode direct channel selection © When the TV/CABLE selection is in the TV position, all channels...

[Page 24](#) iiiii 0 C: _ , operation (continued) SLEEP chRECALLRTN VOL +/- GAME MUTE r• CHANNEL UP/DOWN • SLEEP Press and release CH + or -. The channel automati- To set the TV/DVD to turn off after a preset amount time, press SLEEP on the remote control.

[Page 25: Closed Captions](#)

captions WHAT IS CLOSED CAPTIONING? This television has the capability to decode and display closed captioned television programs. Closed captioning will display text on the screen for hearing impaired viewers or it will translate and display text in another language. Captions: This closed caption mode will display text on the screen in English or another language (depending

on the setting of the closed captions CH 1/2).

[Page 26: Setting The V-Chip](#)

Setting the V-Chip An age limitation can be set to forbid children to see and hear violent scenes or pictures for adults, etc. The TV/DVD corresponds to "TV RATING" and "MOVIE RATING". To use the V-Chip function, you must register a password. If you forget the password, you cannot set the V-Chip.

[Page 27](#) To register password as left page, then press **•** or **•** to select desired rating. Repeat steps 1 ~ 3 in "To register password" as left page, then press **•** or **•** to select "V- After setting, press ENTER.

[Page 28: Picture Control Adjustment](#)

Picture control adjustment/ Adjusting the picture preference Picture controls are factory preset but you can adjust them individually as follows: CANCEL And also you can select four picture modes--Standard, Sports, Movie, and ENTER Memory--as described in the following table:...

[Page 29: Selecting The Color Temperature](#)

Selecting the color temperature CANCEL or **•** to select [] option.

[Page 30: Sound Control Adjustment](#)

Sound control adjustment/ Stereo and Second Audio Program (SAP) Sound controls are factory preset but you can adjust them individually as follows: The TV/DVD is equipped with a feature known as multi-channel TV sound or MTS. MTS broadcasts greatly enhance TV viewing by bringing you programs with high fidelity stereo sound.

[Page 31: Basic Playback Playing A Disc](#)

This section shows you the basics on how to play a disc. CAUTION Keep your fingers well clear of the disc slot when disc is loading or unloading. Neglecting to do so may cause serious POWER VOLUME PLAY STOP...

[Page 32](#) a disc (continued) To obtain a higher quality picture Occasionally, some picture noise may appear on the TV screen while playing a DVD video disc because the high resolution pictures on these discs include a lot of information.

[Page 33](#) ...PLAY CZ:) ...PAUSE _FWD SKIP I_ / SLOW 41 / I_" reverse Playing in fast fast forward directions To resume normal playback Press REV or FWD during playback. Press PLAY. PLAY REV: Fast reverse playback FWD: Fast forward playback Notes: Each time you press REV or FWD...

[Page 34: Advanced Playback Zooming](#)

Zooming/ desired scene ZOOM JUMP ENTER AIVI41P_ ANCEL RECALL This unit will allow you to zoom in on the frame image. You Use the title, chapter and time recorded on the DVD disc to can then make selections by switching the position of the locate the desired point to play back.

[Page 35: Repeat Playback](#)

Repeat playback/A-B Repeat playback PLAY MODE ..ENTER PLAY REPEAT A-B repeat playback allows you to repeat material between two selected points. Press PLAY MODE during playback or stop mode. PLAY MODE Press REPEAT A-B during playback. REPEAT AIR The start point is selected.

[Page 36: Program Playback](#)

Program playback/Random playback You can arrange the playback order of tracks or files on the disc • And also the unit selects tracks or files at random and playback them • These feature works for Audio CD, Video CD and MP3/WMA/JPEG CANCEL

[Page 37: Changing Angles](#)

Changing angles/Title selection/DVD menu TOP MENU DVD MENU A/V/</I_ ENTER i:;;; _ PLAY ANGLE When playing back a disc recorded with multi-angle facility, you can change the angle that you are viewing the scene from. Press ANGLE repeatedly until the desired angle Press ANGLE during playback.

[Page 38: Changing Soundtrack Language](#)

Changing soundtrack language/ Subtitles SUBTITLE AUDIO !i ..Changing soundtrack language Subtitles You can select the language when you play a multilingual When playing back a disc recorded with subtitles, you can disc. select the subtitle language or turn the subtitle off. Press AUDIO during playback.

[Page 39: Karaoke Playback](#)

Disc status/ i!i ri> 0 <X, iii RECALL To turn off the PBC i!iO i,)ii. ! O iiiii AUDIO arao e.,a, ac J I Oisc status You can turn the vocal on or off recorded on the DVD With each press of RECALL, the status...

[Page 40: Mp3/Wma/Jpeg](#)

Pre-recorded DVDs are automatically set to these standards. There are many different types of recordable disc formats (including CD-R containing MP3/WMA files). Given the fact that technology in this area is still maturing, Toshiba cannot guarantee that all genre of recordable discs will produce optimal playback quality. The technical criteria set out in this owner's manual are meant as a guide only.

TOP MENU PLAY STOP i!il Load a disc on which MP3 or WMA files have Press STOP to end playback. been recorded in the disc slot. STOP Press •/• or ENTER to select folder. A file menu screen will appear on the screen. •...

TOP MENU DVD MENU You can select your desired JPEG file on the file menu and picture menu. ,&/V/ I/I_ The selected JPEG file is automatically adjusted to the TV screen. (When the ENTER STOP aspect ratio of the JPEG file is different to the TV screen, the black bar will appear at the top and bottom, or the both sides of the TV screen.

[Page 43: Customizing The Function Settings](#)

ENTER You can change the default settings of the DVD mode to customize performance to your preference. _RETURN Press SETUP during stop mode. Press • or • to select the desired option. MENU SETUP The following on-screen display...

Picture Language L_ _a P icture Sound parental other La!guage _c _eSound ParentalOt!et 1 Screen Menu En_ i_ h Subtitl e _utomaii € Fiancais Display 4:3 D Audio English Espanol JPEG Interva Sel#ct Files ,41 _AT EnterSetupReturn < I_AT/EntedSetup/Retum • Menu, Subtitle, Audio • Tv Screen You can select the language of "Menu", "Subtitle"...

[Page 45: Others](#)

Setting details To change the parental level Sound _nguage _i_ure Rarent a Othe_ Press • or • to select "Password". I DRC Press Number buttons (0-9) to enter the password you have stored. Press ENTER. • The rating is now unlocked. Press •...

[Page 46: Temporary Disabling Of Rating Level By Dvd Disc](#)

Depending on the DVD disc, the disc may try to temporarily cancel the rating ---0-9 level that you have set. It is up to you to decide whether to cancel the rating level or not. •...

[Page 47: Language Code List](#)

Language code list Enter the appropriate code number for the initial settings "Menu", "Subtitle" and/or "Audio" [_ . Language Name Code Language Name Code Language Name Code Language Name Code &bkhazian 1112 Fiji 1620 Lingala 2224 Singhalese 2919 &far 1111 Finnish 1619 Lithuanian 2230...

[Page 48: Troubleshooting](#)

Use the following check list for troubleshooting when you have problems with your unit. Consult your local dealer or service outlet if problems persist. Be sure all connections are properly made when using with other units. SYMPTOMS POSSIBLE SOLUTIONS I PAGI_ POWER •...

[Page 49](#) IPAG SYMPTOMS POSSIBLE SOLUTIONS • No disc is loaded. Playback doesn't start. • The disc may be dirty. Clean up the disc. • The unit cannot play CD-ROMs, etc. No picture. • TV/DVD selector is not set correctly. • Check the input selector of the amplifier is set properly. No sound.

[Page 50: Reception Disturbances](#)

ception disturbances Most types of television interference can be remedied by adjusting the height and position of the VHF/UHF antenna. Outdoor antennas are recommended for best results. The most common types of television interference are shown below. If one of these symptoms appear when the TV/DVD is connected to a Cable TV system, the disturbance may be caused by the local Cable TV company broadcast.

[Page 51: Specifications](#)

General Power supply AC 120V 60Hz (with supplied AC adapter) Power consumption Operation: 62 W, Stand by: 1 W (with supplied AC adapter) Weight 12.1 lbs (5.5 kg) Dimensions Width: 17-3/16 inches (437 mm) Height: 13-1/16 inches (331.5 mm) Depth: 7-1/4 inches (184 mm) Operating temperature 5°C-40°C...

[Page 52: Limited United States Warranty](#)

LCD TV/DVD Combination--Repair Warranty Toshiba America Consumer Products, L.L.C. ("TACP") makes the following limited warranties to original consumers in the United States. THESE LIMITED WARRANTIES EXTEND TO THE ORIGINAL CONSUMER PURCHASER OR ANY PERSON RECEIVING THIS DVD PLAYER AS A GIFT FROM THE ORIGINAL CONSUMER PURCHASER AND TO NO OTHER PURCHASER OR TRANSFEREE.

[Page 53](#) LCD TV/DVD Product to and from the Service Station. For additional information, visit TACP's web site: www.tacp.toshiba.com ALL WARRANTIES IMPLIED BY THE LAW OF ANY STATE OF THE U.S.A., INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSLY LIMITED TO THE DURATION OF THE LIMITED WARRANTIES SET FORTH ABOVE.

[Page 54](#) ÷ ÷ ÷ TOSHIBA ® ColorStream is registered trademark of Toshiba America Consumer Products, L.L.C. Printed in Thailand J5N00621A [E] (P52-Back) 14/01/2005, 7:43 PM...

This manual is also suitable for:

14dlv75