

TOSHIBA

Toshiba 32A32 Owner's Manual

Colorstream color television

1

2

3

4

Table Of Contents

5

6

7

8

9

10

11

12

13

14

15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35

--

•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks

--

Quick Links

[Download this manual](#) See also: [Service Manual](#), [Owner's Manual](#)



TOSHIBA

OWNER'S MANUAL

.) i i _ii ! _iii _i !!!!!

) i _ii _ii

(_i _i _i _i _i

iii _iii!

_ii) iii _i !!!!! _iiii _iii

!!!! i ii!

TOSHIBA

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba 32A32

CRT TV Toshiba 32A32 Owner's Manual

Colorstream color television (36 pages)

Color television Toshiba 32A32 Service Manual

(33 pages)

CRT TV Toshiba 34HF81 Owner's Manual

Colorstream color television (56 pages)

[TV DVD Combo Toshiba MD20FL1 Owner's Manual](#)

Combination 20" flat color television and dvd/cd player (52 pages)

TV Toshiba 32A42 Specifications

Toshiba color television product brochure (2 pages)

CRT TV Toshiba 36A42 Specification Sheet

Toshiba color television specification sheet (2 pages)

TV Toshiba 32A35 Specifications

32" diagonal black color tv (2 pages)

[TV Toshiba 32A35 Service Manual](#)

(42 pages)

[TV Toshiba COLORSTREAM 32A35 Owner's Manual](#)

(36 pages)

TV Toshiba 32A35C Owner's Manual

Toshiba owner's manual color tv (32 pages)

[TV Toshiba 32A36C Owner's Manual](#)

Colorstream color television (64 pages)

TV Toshiba 32A36C Service Manual

(43 pages)

[TV Toshiba 32A3000P Manual](#)

Lcd color television (129 pages)

[TV Toshiba 27AF62 Service Manual](#)

N2f chassis (38 pages)

[TV Toshiba 32AV83*G Manual](#)

Digital series (59 pages)

[TV Toshiba 26EL933B Owner's Manual](#)

Digital series (72 pages)

Summary of Contents for Toshiba 32A32

Page 1

[Page 2: Important Safety Information](#)

Dear Customer, Child Safety Thank you for purchasing this Toshiba TV. This manual will help you use the many exciting features of your new TV. Before operating the TV, please read this manual It MakesA Difference completely, and keep it nearby for future reference.

Page 3 Installation, Care, and Service Important Safety Instructions Installation 1) Read these

instructions. 2) Keep these instructions. Follow these recommendations and precautions and heed all 3) Heed all warnings. warnings when installing your TV: 4) Follow all instructions. 15) Never modify this equipment. Changes or modifications may void: a) the warranty, and b) the user's authority to operate this equipment under the rules of the Federal...

[Page 4](#) (16:9) display (gray bars on left and right sides of screen). Care Service For better performance and safer operation of your TOSHIBA TV, follow these recommendations and precautions: WARNING: RISK OF ELECTRIC / | _ SHOCK! Never attempt to service the yourself.

[Page 5: Table Of Contents](#)

TV converterAuto power off Programming the remote control to operate a Using the dosed caption featurenon-Toshiba VCR or cable TV converter Adjusting the soundVCR codes Muting the sound Cable TV converter codes

[Page 6: Introduction](#)

- Place the TV far enough from the walls to allow proper ventilation. Inadequate ventilation may cause overheating, which can damage the TV. TOSHIBA CT-90037 NOTE: Before installing your TV, please read the important safety information on pages 2-4.

[Page 7: Connecting Your Tv](#)

- S-Video cable is for use with video equipment that has an S-Video input. • Component video cables come in set of three, and are for use with video equipment S-video cable that has component video inputs. (ColorStream ® is Toshiba's brand of component video.)

NOTE REGARDING PICTURE QUALITY When connecting video equipment to your Toshiba TV: Component video cables •...

[Page 8: Connecting A Cable Converter Box And A Vcr](#)

Connecting a cable converter box and a VCR With this connection you can: • watch videotapes • watch and record basic and premium cable channels From • record one channel while watching the same or another channel Cable OUT Cable Tune the VCR to channel Stereo VCR _ _ _...

[Page 9: Connecting A Dvd Player With Colorstream](#)

Your TV has ColorStream ® (component video) inputs. Connecting your TV to a component video-compatible DVD player (such as a Toshiba DVD player with ColorStream ®) can greatly enhance picture quality and performance. With this connection you can: From antenna •...

[Page 10: Using The Remote Control](#)

Your TV remote control can operate your TV and most VCRs and cable TV converters, even if they are different brands. If you have a Toshiba VCR or cable TV converter: Your TV remote control is already programmed to operate it.

[Page 11: Location Of Controls On Tv And Remote Control](#)

(Set to "TV" to control the TV). _ VCR FAV CH TV/VIDEO TVNVIDEO [16] FAV CH Y/,& [18] VCR function buttons Note: The PIP functions (Still, VPIP LOCATE SWAP Source, PIP, PIP Ch, Locate, and Swap) are not available. TOSHIBA CT-90037...

[Page 12: Using The Remote Control To Operate A Vcr Or Cable Tv Converter](#)

Using the remote control to operate a VCR or cable TV converter • If you have a non-Toshiba VCR or cable TV converter, you must first program the remote control to recognize your VCR or converter brand (see pages 13-14).

[Page 13: Programming The Remote Control To Operate A Non-Toshiba Vcr Or Cable Tv Converter](#)

Your Toshiba TV remote control is preprogrammed to operate Toshiba brand VCRs and cable TV converters. To program your TV remote control to operate a non-Toshiba VCR or a cable TV converter, follow these steps: In the code table on page 14, find the code for your brand of VCR or cable TV converter.

[Page 14: Vcr Codes](#)

Programming the remote control to operate a non-Toshiba VCR or cable TV converter (cont.) In some rare cases, you may not be able to operate your non-Toshiba equipment with your TV remote control. Your other equipment may use a code that is not recognized by the TV remote control.

[Page 15: Setting Up Your Tv](#)

--i r- Picture TWVCR STOP pLAY r_r_ GD r- ..@ © STILL SOURCE VpIpcHA LOCATE SWAP PICTURE Audio CONTRAST BRIGHTNESS TOSHIBA SHARPNESS /J_ CT-90037 COLOR TINT RESET AUDIO Set Up I MOVE [STR] MONO Closed Caption...

[Page 16: Changing The On-Screen Display Language](#)

W/VIDEO VPIP LOCATE SWAP 32A32 32A42 and 36A42 To verify the signal source: TOSHIBA CT-90037 Press RECALL. Programming channels into the TV's memory When you press CHANNEL AV on the TV or remote control, the TV stops only on the channels stored in the TV's memory.

[Page 17: Adding And Erasing Channels Manually](#)

3. Press • or • to highlight TV/CABLE. 4. Press • or _ to highlight TV (if you use an antenna) or CABLE RECALL MUTE ® (if you use cable). 5. Press • to highlight CH PROGRAM. SET UP SET UP CHANNEL LA_GUAGE LANGUAGE:...

[Page 18: Using The Tv's Features](#)

CH & LOCATE SWAP To program your favorite channels: 1. Tune the TV to a channel you want to program as a favorite TOSHIBA channel. CT-90037 2. Press MENU. 3. Press • or _ to highlight the SET UP menu.

[Page 19: Using The V-Chip Control \(Blocking\) Feature](#)

SLOW PAUSE 13_3 13D 12_312_3 6. Press • or _ to highlight CLEAR. VPIP LOCATE SWAP TOSHIBA CT-90037 [TV: CYAN _ABgE: BLUI_ SELECT [4 P'] CLEAR [_1 7. Press • to clear the current channel number from the list.

[Page 20: Changing Your Pin Code](#)

5. Use the CHANNEL NUMBERS (0-9) to enter your four-digit PIN code. After the code is entered, the V-Chip Control menu appears. RECALL MUTE RECALL SET UP I_F:t:tl:ll;KlIII,'41[_ _£T RATING 5_T gLOgK_NG O_ON5 --CHANNEL NEW P_N COD_gI.o_K CHANN_ NUMBERS MOVE [vA] SELECT...

[Page 21: Blocking Programs By Ratings](#)

Blocking programs by ratings Note: The Motion Picture Association of America (MPAA) Press RECALL to see the rating uses a rating system to qualify motion picture content. STEREO of the program you are viewing. Television broadcasters employ a similar rating system Not all programs are rated, to qualify the content of television programs.

[Page 22: Unblocking Programs Temporarily](#)

8. Press • or • to highlight SET RATING. 9. Press • or _ to display the Set Rating menu. MUTE POWER RECALL 10. Press • or • to highlight MPAA Rating, Youth TV Rating, or MUTE TV Rating. ® @®...

[Page 23: Blocking Unrated Movies And Programs](#)

Blocking unrated movies and programs Some movies and programs are not rated. You can use the V-Chip RECALL MUTE ® Control feature to block unrated movies and programs. To block unrated movies and programs: 1. Press MENU. 2. Press < or _ to highlight the SET UP menu. CHANNEL NUMBERS 3.

[Page 24: Blocking Channels](#)

Blocking channels You can block a maximum of four TV channels and four cable channels. RECALL MUTE ® Blocked channels cannot be viewed, regardless of their programs' ratings. If you try to tune the TV to a blocked channel, the nearest unblocked channel will display.

[Page 25: Adjusting The Picture](#)

Adjusting the picture MUTE POWER RECALL Adjusting the picture quality You can adjust the picture's contrast, brightness, sharpness, color, and tint. Your picture quality adjustments are stored automatically in the TV's memory. You can keep these settings or choose preset options in...

[Page 26: Adjusting The Picture Preference](#)

Adjusting the picture preference You can select from four picture modes--Sports, Standard, Movie, and MUTE POWER RECALL Memory. --RECALL To adjust the picture preference: 1. Press MENU. 2. Press \bullet or \downarrow to highlight the PREFERENCE menu.

[Page 27: Using The Dosed Caption Feature](#)

Using the closed caption feature The Closed Caption feature has two options: • Captions_An on-screen display of the dialogue, narration, and sound effects of programs and videos that are closed-captioned RECALL@ MUTE@ (usually identified in your local TV listing as "CC"). ...

[Page 28: Adjusting The Sound](#)

Adjusting the sound Muting the sound MUTE Press MUTE to temporarily turn off the sound. While the sound is off, RECALL the screen displays the word "MUTE" in the lower right corner. To restore the sound, press MUTE or VOL \bullet \downarrow . RECALL ...

[Page 29: Adjusting The Sound Quality](#)

Adjusting the sound quality You can change the sound quality of your TV by adjusting the bass, treble, and balance. To reset the audio adjustments (bass, treble, and balance) to the factory settings, select RESET in the PICTURE menu (see note on 1).

[Page 30: Viewing The Demonstration \(Demo\) Mode](#)

Viewing the demonstration (DEMO) mode The DEMO mode automatically demonstrates several features of your TV. RECALL MUTE --POWER To start the DEMO mode: --RECALL 1. Press MENU. 2. Press \bullet or \downarrow to highlight the SET UP menu. ...

[Page 31: Appendix](#)

Appendix Specifications NTSC standard Television system Channel coverage VHF: 2 through UHF: 14 through Cable TV: mid band (A-8 through A-1, A through super band (J through hyper band (AA through ZZ, AAA, BBB) ultra band (65 through 94, 100 through 125) Power source 120V AC, 60Hz...

[Page 32: Troubleshooting](#)

Troubleshooting Before calling service personnel, please check the following chart for a possible cause of the problem you are experiencing. A minor adjustment on your part may eliminate the problem and restore your TV reception. Problem Checks and Adjustments TV will not turn on ...

[Page 33: Limited United States Warranty](#)

EXCLUSIONS MAY NOT APPLY TO YOU UNDER SUCH (3) The warranties from TAC and THI are effective only if the CIRCUMSTANCES. television is purchased and operated in the U.S.A. or Puerto Rico. FST PURE_ is a registered trademark of Toshiba America Consumer Products, Inc. REV. MAR02...

[Page 34: Limited Canada Warranty](#)

(3) The warranties from TCL are effective only if the television is purchased from an authorized TCL dealer and operated in Canada. FST PURE_ is a registered trademark of Toshiba America Consumer Products, Inc. REV. MAR02...

Page 35 TOSHIBA AMERICA CONSUMER PRODUCTS, INC. HEAD OFFICE: 820 TOWAROAD, WAYNE, NJ 07470, U.S.A. NATIONAL SERVICE DIVISION: 1420 BTOSHIBA DRIVE, LEBANON, TN 37087, U.S.A. TOSHIBA HAWAII, INC. HEAD OFFICE: 327 KAMAKEE STREET, HONOLULU, HI 96814, U.S.A. TOSHIBA CANADA LTD. HEAD OFFICE: 191 McNABB STREET, MARKHAM, ONTARIO, L3R8H2, CANADA- TEL: (905) 470-5400 SERVICE CENTERS: TORONTO: 191 McNABB STREET, MARKHAM, ONTARIO, L3R8H2, CANADA- TEL: (905) 470-5400 MONTREAL: 1

643NORTHSERVICE RD.,TRANS-CANADA HIGHWAY, D ORVAL QUEBEC, H 9P1J1,CANADA -
TEL:(514) 856-4100...

This manual is also suitable for:

32a4236a42