

TOSHIBA

Toshiba 13A26 Owner's Manual

1
2
3
4
5
6
7
8
9
10
11
12
13
14
Table Of Contents
15

• PAGE
1



-

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks

Quick Links

[1 Tv/Video Selection](#)

[Download this manual](#)

See also: [Service Manual](#) , [Owner's Manual](#)





3X00121A(E)
COVER
1

22/12/05,
4:15 PM



TOSHIBA

Table of Contents

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba 13A26

[TV Toshiba 13A26 Service Manual](#)

(43 pages)

[TV Toshiba 13A26 Service Manual](#)

(33 pages)

[CRT TV Toshiba 13A26C Owner's Manual](#)

Toshiba color television owner's manual 13a26c, 19a26c (29 pages)

[TV Toshiba 13A26 Owner's Manual](#)

Toshiba tv 13a26, 19a26 owner's manual (29 pages)

[CRT TV Toshiba 19A26 Service Manual](#)

Toshiba 19a26 color television service manual (34 pages)

[CRT TV Toshiba 19A26 Specifications](#)

19" (measured diagonally) color tv (2 pages)

[TV Toshiba 13A25C Service Manual](#)

(43 pages)

[TV Toshiba 13A25 Service Manual](#)

(10 pages)

[TV Toshiba 13A21 Owner's Manual](#)

13a21 user's guide (4 pages)

[TV Toshiba 13A21 Service Manual](#)

(64 pages)

[TV Toshiba 13A23W Service Manual](#)

(43 pages)

[TV Toshiba 13A24 Service Manual](#)

(32 pages)

[TV Toshiba 13A24 Owner's Manual](#)

(47 pages)

[TV Toshiba 13A21C Service Manual](#)

Toshiba service manual tv 13a21c (31 pages)

[TV Toshiba 13A20 Service Manual](#)

(38 pages)

[TV Toshiba 14N21E2 Service Manual](#)

(38 pages)

Summary of Contents for Toshiba 13A26

[Page 1](#) ÷ 3X00121A(E) COVER 22/12/05, 4:15 PM...

[Page 2: Safety Precautions](#)

÷ Dear Customer, Thank you for purchasing this Toshiba TV. This manual will help you use the many exciting features of your new TV. Before operating the TV, please read this manual completely, and keep it nearby for future reference. Congratulations on your purchase! As you enjoy...

[Page 3: Important Safety Instructions](#)

÷ installation, Care, and Service important Safety instructions installation 1] Read instructions. these Follow these recommendations and precautions and heed 2] Keep these instructions. all warnings when installing your TV: 3] Heed all warnings. /43 Follow all instructions. 16} Never modify this equipment. Changes or modifications may void: a] the warranty, and b) the user's authority...

[Page 4](#) \tj__r-&_-'_5 off. If these sounds become frequent ' (NECSection 810-21) or continuous, unplug the power cord Grounding conductors and contact a Toshiba Authorized Service Center. Power service grounding Grouud clmp_ _ ..electrodesystem (NECArt 250 Part H)

[Page 5](#) ÷ FEATURES ,181 Channel Tuner - The tuning system is capable of receiving all 68 VHF/UHF standard broadcast channels that are available in your area. When operating on a cable system, it can tune to the standard VHF channel frequencies plus up to 113 cable channel frequencies.

[Page 6: Remote Control](#)

÷ REMOTE CONTROL SLEEP Button - To set the TV to turn off after a preset amount of time, press the SLEEP button on the remote control. The clock will count down 10 minutes each time the button is pressed in the order of 120, 110, 100, ..20, 10, 0.

[Page 7: Tv/Video Selection](#)

÷ ANTENNA/CABLE TV CONNECTIONS Choose one of the following seven connections, based on your Combination VHF/UHF antenna (Single 75 ohm cable or 300 equipment and service: ohm twin-lead wire) Connect the 75 ohm cable from a combination VHF/UHF Combination VHF/UHF antenna antenna to the antenna jack.

[Page 8: Setting The Language](#)

÷ SETTING THE LANGUAGE This TV can display the on-screen displays and adjustment menus in English, Spanish, or French. The on-screen language selection (step 3, below) will automatically appear on the screen when you press the MENU button initially. Select the language you prefer first, then proceed with the other menu options. Press SET + or - until the "...

[Page 9](#) ÷ TO MEMORIZE CHANNELS ThisTV isequipped witha channel r nernory feature thatallows the TO ADD/DELETE CHANNELS TV to skip up or down to the next channel set into memory, skip- Press MENU. ping over unwanted channels. Before selecting channels, they must be programmed into the TV's Press SET + or- until the indicator next to r _u SETUP L.Z] memory.

[Page 10: Closed Caption](#)

÷ CLOSED CAPTION WHAT IS CLOSED CAPTIONmNG? languages or words requiring emphasis. Words that are sung usually This television has the capability to decode and display closed appear enclosed by musical notes. captioned television programs. When available, closed captioning will display text on the screen for hearing...

[Page 11: Using The Lock Menu](#)

÷ USING THE LOCK MENU The LOCK menu includes the CH LOCK, VIDEO LOCK, GAMETIMER and CHANGE PASSWORD functions. You can use these functions after entering the correct PASSWORD. (This password is the same one selected under "SETTING THE V-CHIP" on page 10.) LOCKING CHANNELS With the CH LOCK feature, you can lock specific channels.

[Page 12: Troubleshooting](#)

÷ TROUBLESHOOTING GUIDE Before requesting service, please refer to the following chart for the symptom and possible solution. SYMPTOMS POSSIBLE SOLUTIONS SYMPTOMS POSSmBLE SOLUTNONS • Check all Cable TV connections. • Make sure the power cord is plugged in. TV does not •...

[Page 13: Limited United States Warranty](#)

÷ Limited United States Warranty for Non-FST PURE ® CRT-based TVs 26" and Smaller Toshiba America Consumer Products, EL,C, ("TACP") makes the Your Responsibility following limited warranties to original consumers in the United States. THE ABOVE WARRANTIES ARE SUBJECT

TO THE FOLLOWING...

[Page 14](#) AMERICA CONSUMER PRODUCTS= L=L,C. Head Office 82 Totowa Road, Wayne, NJ 07470 National Service Division 1420B Toshiba Drive, Lebanon, TN 37087 TOSHIBA GameTimer is a trademark of Toshiba America Consumer Products, L.L.C. PRINTED IN THAILAND 3X00121A(E) P13-BACK 22/12/05, 4:15 PM...

This manual is also suitable for:

[19a26](#)