



Whirlpool MH1140XMB4 Use & Care Manual

Hood combination

1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16



•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks

[Download this manual](#)

Quick Links



MICROWAVEHOOD COMBINATION

For questions
about features, operation/performance
parts, accessories
or service,
call: 1-800-253-1301.
or visit our website at...
www.whirlpool.com

Table of Contents

2

Model

MH1140XM

8205967/4619-652-82133

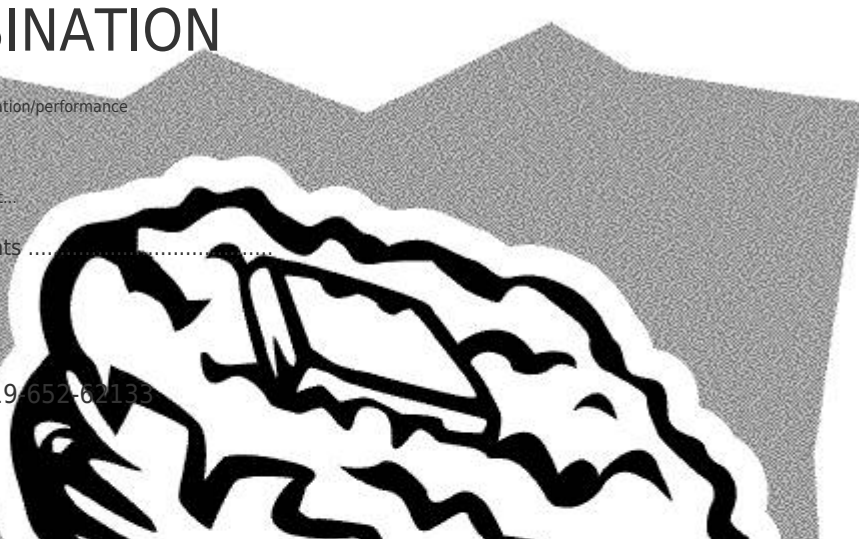


Table of Contents

[Next Page](#)

1
2
3
4
5

Related Manuals for Whirlpool MH1140XMB4

[Microwave Oven Whirlpool MH1140XM Use & Care Manual](#)

Whirlpool microwave hood combination use & care guide mh1140xm (16 pages)

[Microwave Oven Whirlpool MH1140XMQ3 Use & Care Manual](#)

Microwave hood combination (16 pages)

[Microwave Oven Whirlpool MH1150XMB Dimensions](#)

Microwave hood combination (1 page)

[Microwave Oven Whirlpool MH1141XM Use & Care Manual](#)

Whirlpool microwave hood combination mh1141xm use & care guide (16 pages)

[Microwave Oven Whirlpool MH1141XMQ4 Use & Care Manual](#)

Hood combination (16 pages)

[Microwave Oven Whirlpool MH1141XMB Use & Care Manual](#)

Hood combination (16 pages)

[Microwave Oven Whirlpool MH1141XMB0 Use & Care Manual](#)

Microwave hood combination (16 pages)

[Microwave Oven Whirlpool MH1160XS Use & Care Manual](#)

Whirlpool microwave hood combination use & care guide mh1160xs (16 pages)

[Microwave Oven Whirlpool MODEL MH1170XS Use & Care Manual](#)

Microwave hood combination (20 pages)

[Microwave Oven Whirlpool MH1170XS Installation Instructions Manual](#)

Microwave hood combination (12 pages)

[Microwave Oven Whirlpool MH1170XST Use And Care Manual](#)

Microwave hood combination (20 pages)

[Microwave Oven Whirlpool MH1160XSB Installation Instructions Manual](#)

Microwave hood combination (13 pages)

[Microwave Oven Whirlpool MH1160XSD1 Parts List](#)

Microwave oven 1.7 cu. ft. (7 pages)

[Microwave Oven Whirlpool MH1160XSQ2 Parts List](#)

Microwave oven 1.7 cu. ft. (7 pages)

[Microwave Oven Whirlpool MH1150XMQ3 Use & Care Manual](#)

Hood combination (16 pages)

[Microwave Oven Whirlpool MH1150XMQ Tech Sheet](#)

(13 pages)

Summary of Contents for Whirlpool MH1140XMB4

[Page 1](#) MICROWAVEHOOD COMBINATION For questions about features, operation/performance parts, accessories or service, call: 1-800-253-1301. or visit our website at... www.whirlpool.com Table of ContentsModel MH1140XM 8205967/4619-652-62133...

[Page 2: Table Of Contents](#)

TABLEOF CONTENTS MICROWAVE OVEN SAFETYElectrical Requirements
PARTS AND FEATURESTurntableMICROWAVE OVEN CONTROL
DisplayNumber CodesStartCancel*OffAdd
Minute Clock Tones Timer Child Lock

.....Vent Fan

[Page 3: Microwave Oven Safety](#)

MICROWAVE OVEN SAFETY safety safety important. Your and the others are very We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages. This symbol alerts you to potential hazards that can kill or hurt you and others. All safety messages will follow the safety alert symbol and either the word "DANGER"...

[Page 4](#) IMPORTANT SAFETY INSTRUCTIONS [] Liquids, such as water, coffee, or tea are able to be [] Do not clean with metal scouring pads. Pieces can burn off the pad and touch electrical parts involving an overheated beyond the boiling point without appearing risk of electric shock.

[Page 5: Electrical Requirements](#)

PARTS AND FEATURES This manual may cover several different models. The model you have purchased may have some or all of the features shown here. The appearance of your particular model may differ slightly from the illustrations in this manual. Electrical Shock Hazard Plug into a grounded 3 prong outlet.

[Page 6: Microwave Oven Control](#)

MICROWAVE OVEN The microwave oven is preset with shortcut number codes. A CONTROL number code includes one or more of the following: cooking power, cook time and food quantity or weight. See the charts in the "Cooking" and/or "Reheating" sections for additional information.

[Page 7: Tones](#)

Tones a readable signals, indicating the following: The Child Lock shuts down the control panel pads to prevent unintended use of the microwave oven. One tone When the control is locked, only the Vent Fan and Light pads will • Valid entry (short tone) function.

[Page 8: Microwave Oven Use](#)

MICROWAVE OVEN USE Covering A magnetron in the oven produces microwaves which reflect off Covering food helps retain moisture, shorten cook time and the metal floor, walls and ceiling and pass through the turntable reduce spattering. Use the lid supplied with cookware. If a lid is and appropriate cookware to the food.

[Page 9: Aluminum Foil And Metal](#)

MATERIAL RECOMMENDATIONS Plastic Wraps, Use those approved by the manufacturer Many recipes for microwave cooking specify which cooking Bags, Covers, for microwave oven use. power to use by percent, name or number. For example, Dinnerware, 70%=7=Medium-High. Containers Use the following chart as a general guide for the suggested Pottery and Clay Follow manufacturer's recommendations.

[Page 10: Cooking](#)

• Do not use regular paper bags or glassware. To Use: • Pop only one package of popcorn at a time. 1. Touch COOK TIME. • Follow manufacturer's instructions when using a microwave Touch number pads to enter cooking time. popcorn popper. 2. Touch COOK POWER. •...

[Page 11: Pizza](#)

To Use Preset Cooking: 1. Touch COOK. 2. Touch number pad from chart Up to 3 pizza slices may be heated in the microwave oven by using the Pizza function. Touch COOK repeatedly to scroll through foods. To Use Pizza: 3.

[Page 12: Defrosting](#)

To Use Auto Defrost: 1. Touch DEFROST. 2. Touch the number pad 1 for Meat, 2 for Poultry or 3 for Fish The Auto Defrost feature can be used or the microwave oven can be manually set to defrost. Touch DEFROST repeatedly to scroll through foods. •...

[Page 13: General Cleaning](#)

To Remove and Replace Charcoal Filter: OVEN CAVITY 1. Unplug microwave oven or disconnect

power. 2. Remove the 2 mounting screws located above the cover. Do not use soap-filled scouring pads, abrasive cleaners, steel- Then loosen the 2 inner screws. wool pads, gritty washcloths or some recycled paper towels.

[Page 14: Replacing Microwave Oven Light](#)

P_l ____ d_i__:_-____ TROUBLESHOOTING .•_..•.9 , • The microwave oven light is a candelabra base 30-watt bulb. It will automatically come on when the door is opened and when Try the solutions suggested here first in order to avoid the the microwave oven is operating.

[Page 15: Assistance Orservice](#)

- Is the cooking power set properly? See "Cooking Power" section. For further assistance If you need further assistance, you can write to Whirlpool • Are large amounts of food being heated? Corporation with any questions or concerns at: Larger amounts of food need longer cooking times.

[Page 16](#) YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE. Outside the 50 United States and Canada, this warranty does not apply. Contact your authorized Whirlpool dealer to determine if another warranty applies.

This manual is also suitable for:

[Mh1140xmq4Mh1140xm](#)