

Sabbath Mode - Whirlpool GBS279PVS00 Use & Care Manual

Built-in electric convection oven

1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40

•

[Table of Contents](#)


-

Troubleshooting

•

Bookmarks

Available languages

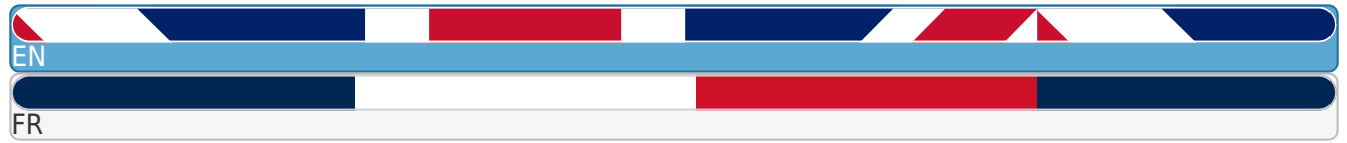



The Sabbath Mode sets the oven to remain on in a bake setting until turned off. A timed Sabbath Mode can also be set to keep the oven on for only part of the Sabbath.

When the Sabbath Mode is set, the number pads are active. On single oven models, OFF/CANCEL and START are also active. On double oven models, upper and lower oven OFF/CANCEL are also active. No tones will sound, and the display will not show messages or temperature changes. The heat sources icons will appear lit on the oven display throughout the Sabbath Mode. When the oven door is opened or closed, the oven light will not turn on or off and the heating elements will not turn on or off immediately.

If a power failure occurs when the Sabbath Mode is set, the oven will return to the Sabbath Mode and is still in the bake with a

Sabbath Mode

4. Press START.
5. Press and hold the number pad 0. "SAB ON" appears on the display.
6. To turn off the Sabbath Mode, press and hold the number pad 0. "SAB ON" disappears from the display.

To Regularly Set, Timed:



will return to the Sabbath Mode in an untimed bake with a temperature of 350°F (177°C).

To Enable:

The Sabbath Mode sets the oven to remain on in a bake setting. Before the Sabbath Mode can be regularly set, the oven(s) must first be enabled with a one time only setup. On double oven models, the following steps will enable both ovens. On single ovens, open the oven door. On double ovens, open the upper oven door. On single ovens, press CANCEL/OFF. On double ovens, press upper oven OFF/CANCEL. On single ovens, press CANCEL/OFF. Press the number pads 7, 8, 9, 6, in this order. Press START. "SAb On" will appear on the display. Press the OFF/CANCEL pad for the respective oven to clear the display. Close oven door.

To Disable:

The oven can be disabled of the ability to set the Sabbath Mode.

When disabled the Sabbath Mode cannot be regularly set until re-enabled. On double oven models, the following steps will

disable both ovens. On double ovens, the following steps will enable both ovens.

1. On double ovens, open the upper oven door.

On single ovens, open the oven door.

2. On double ovens, press upper oven OFF/CANCEL. On single ovens, press CANCEL/OFF.

3. Press the number pads 7, 8, 9, 6, in this order.

On single ovens, press CANCEL/OFF.

On double ovens, press upper oven OFF/CANCEL.

4. Press upper oven OFF/CANCEL.

"SAb On" will appear on the display. Press the OFF/CANCEL pad for the respective oven to clear the display.

5. Close oven door.

To Regularly Set, Untimed:

1. On double ovens only, press UPPER OVEN or LOWER OVEN.

Each oven can be independently set.

2. Press OVEN LIGHT to desired option.

3. Press BAKE.

Press the number pads to enter a temperature other than 350°F (177°C). The bake range can be set between 170°F and 500°F (77°C and 260°C).

On single ovens, open the oven door.

On double ovens, press upper oven OFF/CANCEL.

On single ovens, press CANCEL/OFF.

3. Press the number pads 7, 8, 9, 6, in this order.

4. Press upper oven OFF/CANCEL.

"SAb On" will appear on the display. Press the OFF/CANCEL pad for the respective oven to clear the display.

5. Close oven door.

To Regularly Set, Timed:

1. On double ovens only, press UPPER OVEN or LOWER OVEN.

Each oven can be independently set.

2. Press OVEN LIGHT to desired option.

3. Press BAKE.

Press the number pads to enter a temperature other than 350°F (177°C). The bake range can be set between 170°F and 500°F (77°C and 260°C).

On single ovens, open the oven door.

On double ovens, press upper oven OFF/CANCEL.

On single ovens, press CANCEL/OFF.

3. Press the number pads 7, 8, 9, 6, in this order.

4. Press upper oven OFF/CANCEL.

"SAb On" will appear on the display. Press the OFF/CANCEL pad for the respective oven to clear the display.

5. Close oven door.

To Regularly Set, Untimed:

1. On double ovens only, press UPPER OVEN or LOWER OVEN.

Each oven can be independently set.

2. Press OVEN LIGHT to desired option.

 
3. Press BAKE.

Press the number pads to enter a temperature other than 350°F (177°C). The bake range can be set between 170°F and 500°F (77°C and 260°C).

Sabbath Mode

4. Press START.
5. Press and hold the number pad "SAb ON" appears on the display.
6. To turn off the Sabbath Mode, press and hold the number pad "ON" disappears from the display.

To Regularly Set, Timed:

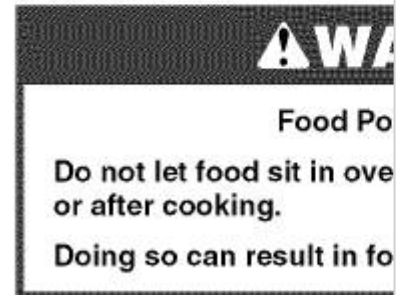

1. On double ovens only, press UPPER OVEN or LOWER OVEN. Each oven can be independently set.
2. Press OVEN LIGHT to desired option.
3. Press BAKE. Press the number pads to enter a temperature other than 350°F (177°C). The bake range can be set between 170°F and 500°F (77°C and 260°C).
4. Press COOK TIME. Press the number pads to enter the cook time. The cook time can be set from 1 to 99 minutes.
5. Press START. The start time, stop time, and remaining time will appear on the display. On double ovens, only the upper oven stop time will show the lower oven time on the upper oven. Press and hold the number pad "SAb ON" appears on the display.
6. On double ovens only, if set, press UPPER OVEN or LOWER OVEN. The start time, stop time, and remaining time will appear on the display.
7. Press START. The start time, stop time, and remaining time will appear on the display. On double ovens, only the upper oven stop time will show the lower oven time on the upper oven. Press and hold the number pad "SAb ON" appears on the display.
8. When the stop time is reached, press and hold the number pad "SAb ON" appears on the display.
9. To turn off the Sabbath Mode, press and hold the number pad "ON" disappears from the display.

Temperature Change

The oven temperature can be changed while in the Sabbath Mode. No tones will sound. The heating element will continue to heat the oven. The time, anywhere from 16 to 24 minutes, may take up to one-half hour.

170°F and 500°F (77°C and 260°C).

4. Press COOKTIME.

5. Press the number pads to enter the length of Sabbath Mode time, up to 9 hours 59 minutes.

6. On double ovens only, if setting the second oven, repeat

steps 1 through 5.

7. Press START. The Sabbath Mode sets the oven to remain on in a bake setting until turned off. A timed Sabbath Mode can also be set to keep the oven on for only part of the Sabbath.

The Sabbath Mode is set, the number pads are active. On single oven models, OFF/CANCEL and START are also active. On double oven models, upper and lower oven OFF/CANCEL are also active. No tones will sound, and the display will not show messages or temperature changes. The heat sources icons will appear lit on the oven display throughout the Sabbath Mode.

When the oven door is opened or closed, the oven light will not turn on or off and the heating elements will not turn on or off immediately.

8. When the stop time is reached, the oven will automatically turn off. If a power failure occurs when the Sabbath Mode is set, the oven will return to the Sabbath Mode in an untimed bake with a temperature of 350°F (177°C).

Temperature Change

To Enable:

Before the Sabbath Mode can be regularly set, the oven(s) must first be enabled with a one time only setup. On double oven models, the following steps will enable both ovens.

1. On double ovens, open the upper oven door.

 
On single ovens, open the oven door.

2. On double ovens, press upper oven OFF/CANCEL.

Sabbath Mode

4. Press START.
5. Press and hold the number pad 6 for about 5 seconds until "SAB ON" appears on the display.
6. To turn off the Sabbath Mode, press OFF/CANCEL and hold the number pad 6 for about 5 seconds until "SAB ON" disappears from the display.

To Regularly Set, Timed:

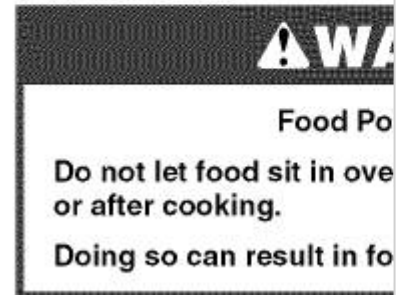

1. On double ovens only, press upper oven OFF/CANCEL. Each oven can be independently set.
2. Press OVEN LIGHT to deactivate the oven light.
3. Press BAKE.

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
5
6
7
8
9
10
11
12

Quick Links:

[Table of Contents](#)

[Clock](#)

[Displays](#)

[Self-Cleaning Cycle](#)

[Oven Door](#)

[Troubleshooting](#)

Related Manuals for Whirlpool GBS279PVS00

[Convection Oven Whirlpool GBD279 Use & Care Manual](#)

Whirlpool built-in electric convection oven use & care guide (40 pages)

[Oven Whirlpool RBS277PV Installation Instructions Manual](#)

27" (68.6 cm) and 30" (76.2 cm) electric single and double built-in oven (16 pages)

[Convection Oven Whirlpool GBD277 Use & Care Manual](#)

Whirlpool use & care guide built-in electric convection oven gbd277, ygbd277,

gbs277, ygbs277, gbd307, ygbd307, gbs307, ygbs307 (16 pages)

[Convection Oven Whirlpool GBS277PRB00 Parts List](#)

Whirlpool 27" built-in electric single convection oven part list (7 pages)

[Convection Oven Whirlpool GBS277PRB01 Parts List](#)

27" built-in electric single convection oven (7 pages)

[Convection Oven Whirlpool GBS277PRB03 Parts List](#)

27" built-in electric single convection oven (7 pages)

[Convection Oven Whirlpool GBS277PRS02 Parts List](#)

Whirlpool 27" built-in electric single convection oven (gold line) parts list (7 pages)

[Convection Oven Whirlpool GM8155XJB0 Parts List](#)

Whirlpool convection microwave oven parts list (8 pages)

[Convection Oven Whirlpool GM8155XJB2 Parts List](#)

Whirlpool convection microwave oven parts list (8 pages)

[Convection Oven Whirlpool GM8155XJ Use & Care Manual](#)

Whirlpool microwave convection oven use and care guide gm8155xj (60 pages)

[Convection Oven Whirlpool GR673LXSB0 Parts List](#)

30" electric ceran freestanding range self clean convection oven (8 pages)

[Convection Oven Whirlpool GR773LXSB1 Parts List](#)

Whirlpool 30" electric ceran freestanding range self clean convection oven parts list (8 pages)

[Convection Oven Whirlpool GSC308 Use & Care Manual](#)

Built-in electric convection oven (16 pages)

[Convection Oven Whirlpool GSC278 Use & Care Manual](#)

Built-in electric convection oven (16 pages)

[Convection Oven Whirlpool GSC278 Use & Care Manual](#)

Built-in electric convection oven (16 pages)

[Convection Oven Whirlpool GH7208XR Use & Care Manual](#)

Whirlpool use&care guide speedcook microwave oven with convection gh7208xr (36 pages)

Related Content for Whirlpool GBS279PVS00

[GH7208XR Demo Mode](#)

Whirlpool GH7208XR

This manual is also suitable for:

[Gbs309pvs03Gbs279pvb02Gbs279pvq03Gbs279pvq04Gbs309pvs00Gbd279pvq00](#) ... [Show all](#)