

Cycle Status Indicators; Sensor System; Drying System - Whirlpool DU1100XTPS9 Use & Care Manual

1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44

•

[Table of Contents](#)


-


Troubleshooting

•

Bookmarks

Available languages

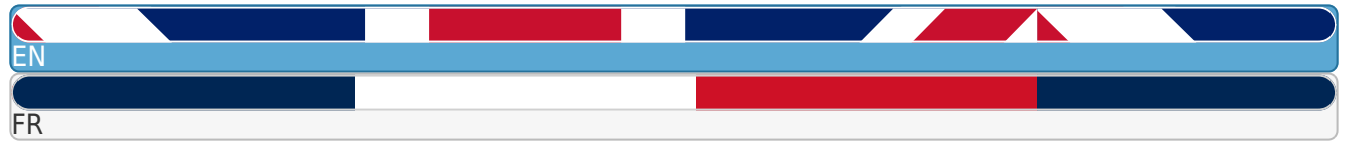

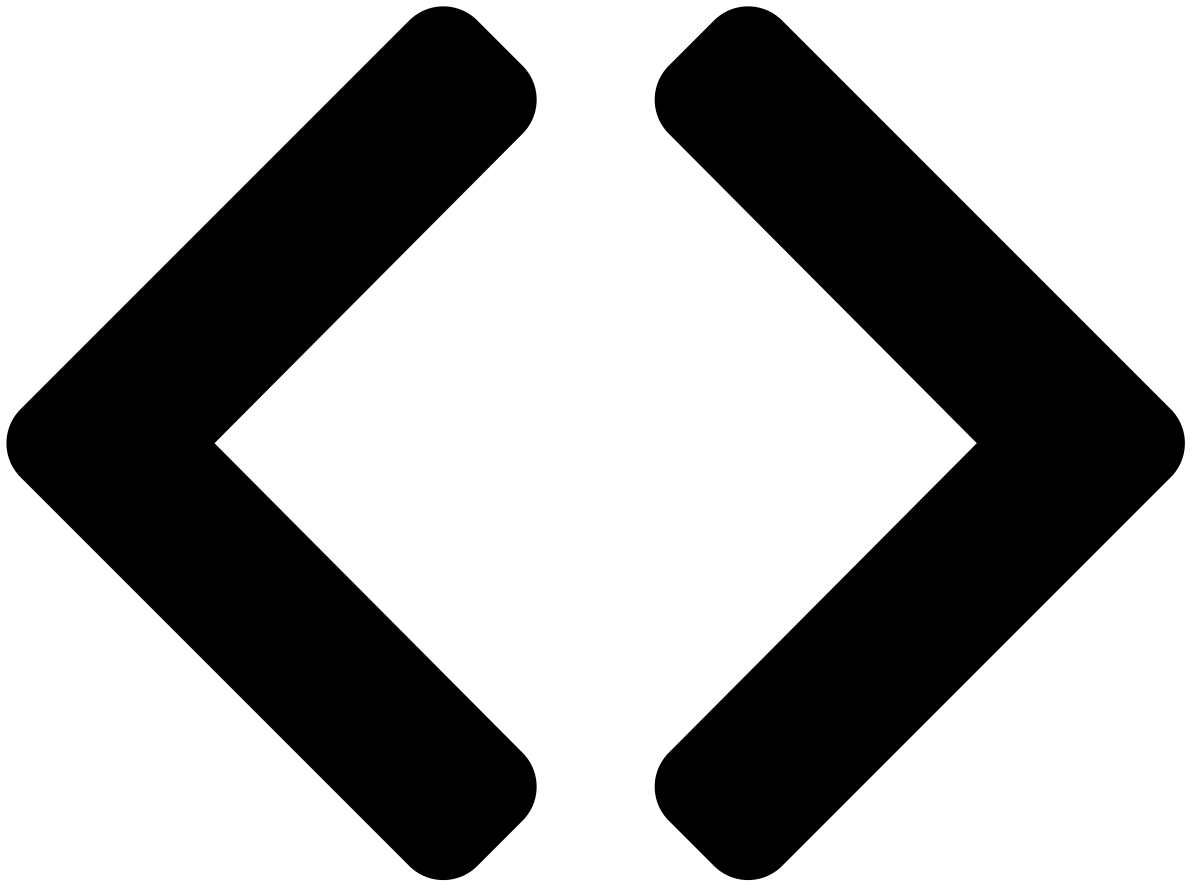

Enlarged version

Lock

Use the lock to avoid unintended

use of the dishwasher. You can

also use the lock feature to avoid unintended

cycle or option

changes

during a cycle.

HAT_D
DRY

When the lock is lit, all buttons are disabled.

NOTES:

The dishwasher

door can be opened while the controls are

locked.

When the lock is lit, all buttons are disabled.

You can turn on the lock while the dishwasher

is running. If

you open the door, unlock the controls and press STOP/

RESUME to restart. You can lock controls again, if desired.

To turn on the lock

 
■ You can turn on the lock while the dishwasher is running. If



Cycle Sta

Follow the progress of your d
indicators.

Sensing Washing



NOTE: Your model may have
above.

Sensing (on some mode

Sensing glows during the Sen
dishwasher senses soil level
water temperature during wa
Washing continues while Sen

 
Press and hold HEATED DRY for 4 seconds. The lock glows.
 If you press any pad while your dishwasher is locked, the light flashes 3 times and the selection is ignored.

Lock

Press and hold HEATED DRY for 4 seconds. The light turns off.

Use the lock to avoid unintended use of the dishwasher. You can also use the lock feature to avoid unintended cycle or option changes during a cycle.

After adding items, close the door firmly until it latches. The delay countdown will not continue if the door is not latched. Press START/RESUME. If the door is unlatched, the Start/Resume indicator flashes. The delay countdown



stops until you latch the door and press START/RESUME.

NOTES:

Models with 4 Hour Delay

To delay the start of the cycle, press the Delay pad.

1. Press DELAY 1 time for a 2-hour delay, 2 times for a 4-hour

delay, or 3 times for a 6-hour delay. The number above or to the

left of the 4 Hour Delay pad glows.

2. Select a wash cycle and option or skip to Step 3 to use the cycle and options selected for last cycle.

3. Press START/RESUME. (The door must be closed.) The delay

countdown starts, and the cycle will begin after 4 hours.

Press and hold HEATED DRY for 4 seconds. The lock glows.

If you press any pad while your dishwasher is locked, the light

flashes 3 times and the selection is ignored.

To cancel the delay and start the cycle, press START/RESUME.

Press and hold HEATED DRY for 4 seconds. The light turns off.

Models with 2-4-6 hour Delay

To delay the start

1. Press DELAY 1 time for a 2-hour delay, 2 times for a 4-hour

delay, or 3 times for a 6-hour delay. The number glows above

the Delay pad.

2. Select a wash cycle and option or skip to Step 3 to use the cycle and options selected for last cycle.

3. Press START/RESUME. (The door must be closed.) The delay

countdown starts, and the cycle will begin after the selected

number of hours.

Press and hold HEATED DRY for 4 seconds. The lock glows.

If you press any pad while your dishwasher is locked, the light

flashes 3 times and the selection is ignored.

To cancel the delay and start the cycle, press START/RESUME.

Press and hold HEATED DRY for 4 seconds. The light turns off.

Models with 4 Hour Delay

To delay the start of the cycle, press the Delay pad.

1. Press DELAY 1 time for a 2-hour delay, 2 times for a 4-hour

delay, or 3 times for a 6-hour delay. The number above or to the

left of the 4 Hour Delay pad glows.

2. Select a wash cycle and option or skip to Step 3 to use the cycle and options selected for last cycle.

3. Press START/RESUME. (The door must be closed.) The delay

countdown starts, and the cycle will begin after 4 hours.

Press and hold HEATED DRY for 4 seconds. The lock glows.

If you press any pad while your dishwasher is locked, the light

flashes 3 times and the selection is ignored.

To cancel the delay and start the cycle, press START/RESUME.

Press and hold HEATED DRY for 4 seconds. The light turns off.

Models with 2-4-6 hour Delay

To delay the start of the cycle, press the Delay pad.

1. Press DELAY 1 time for a 2-hour delay, 2 times for a 4-hour

delay, or 3 times for a 6-hour delay. The number glows above

the Delay pad.

2. Select a wash cycle and option or skip to Step 3 to use the cycle and options selected for last cycle.

3. Press START/RESUME. (The door must be closed.) The delay

countdown starts, and the cycle will begin after the selected

number of hours.


Press and hold HEATED DRY for 4 seconds. The lock glows.

If you press any pad while your dishwasher is locked, the light

flashes 3 times and the selection is ignored.

Cycle Status

Follow the progress of your dishwasher cycle with the Cycle Status indicators.

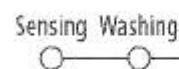

NOTE: Your model may have some or all of the indicators shown above.

Sensing (on some models)

Sensing glows during the Sensing part of the cycle. The dishwasher senses soil level and water temperature during water heating. Washing continues while Sensing is on.

Clean

Clean glows when a cycle is finished. The light turns off when you open and close the door or press any button.

Sanitized

If you select the Sani Rinse or Sani Rinse cycle is finished. If you select the Sani Rinse cycle to sanitize your dishes, the light can happen if the cycle is interrupted. The light turns off when you open and close the door or press any button.

This dishwasher is equipped with a sensor that detects water temperature and wash cycles are adjusted based on the sensor's reading.

The dishwasher "senses" water temperature and the amount of the wash water. It automatically adjusts the wash temperature and wash time. Lightly soiled dishes will get a best wash. Heavily soiled dishes will get a heavy wash. Adjust the sensor approximation quality.

IMPORTANT: The very first wash cycle after the sensor adjustment home will be adjusted to include the sensor adjustment. The sensor adjustment must not be interrupted for the sensor adjustment cycle is canceled comes on at the end of the cycle. This sensor adjustment.

Drying


During drying, you can see the upper left corner of the display. The light turns off when your dishes are dry.

Sani Rinse cycle is finished. If your dishwasher did not properly sanitize your dishes, the light flashes at the end of the cycle. This can happen if the cycle is interrupted, or the water could not be

Lock

Use the lock to avoid unintended use of the dishwasher. You can also use the lock feature to avoid unintended cycle or option changes during a cycle.

This dishwasher is equipped with an optical sensor wash that detects water temperature and the amount of soil and detergent. Wash cycles are adjusted based on what is sensed. The dishwasher

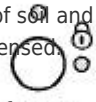

"senses" wash water quality during a series of pauses in the wash cycle. The sensor monitors water temperature and the amount of soil and detergent appearing in the wash water. It automatically adjusts the wash cycle for the best wash. Lightly soiled dishes will get less water and less detergent. Heavily soiled dishes will get more water and increased temperature and wash time. This dishwasher will automatically adjust the sensor approximately once a year to your water quality.

NOTES:

- The dishwasher door can be opened while the controls are locked.
- You can turn on the lock while the dishwasher is running. If you open the door, unlock the controls and press START/RESUME to restart. You can lock controls again, if desired.

To turn on the lock

Press and hold HEATED DRY for 4 seconds. The lock glows.

If you press any pad while your dishwasher is locked, the light flashes 3 times and the selection is ignored.

To turn off the lock

Press and hold HEATED DRY for 4 seconds. The light turns off.


Delay start

Select this option to run your dishwasher at a later time or during off-peak hours. You can add items to the load anytime during the delay countdown. After adding items, the delay countdown will not continue if the door is not latched. Press START/RESUME. If the door is unlatched, the Start/Resume indicator flashes. The delay countdown stops until

IMPORTANT: The vapor is hot. Do not touch the vent during drying.

Cycle Sta

Follow the progress of your d indicators.

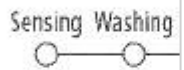

NOTE: Your model may have above.

Sensing (on some mode

Sensing glows during the Ser dishwasher senses soil level water temperature during wa Washing continues while Sen

Clean

Clean glows when a cycle is f open and close the door or p

Sanitized

If you select the Sani Rinse o Sani Rinse cycle is finished. I sanitize your dishes, the light can happen if the cycle is inte heated to the required tempe open and close the door or p

This dishwasher is equipped detects water temperature or

[Previous Page](#)
[Next Page](#)

1
...
12
13
14
15
16
17
18
19

Quick Links:

[Table of Contents](#)
[Parts and Features](#)
[Control Panels](#)
[Cleaning](#)
[Dishwasher Care](#)
[Troubleshooting](#)

Related Manuals for Whirlpool DU1100XTPS9

[Dishwasher Whirlpool DU1100XTPB9 Parts List](#)

Undercounter dishwasher (15 pages)

[Dishwasher Whirlpool GU2548XTPQ6 Use & Care Manual](#)

(49 pages)

[Dishwasher Whirlpool GU2500XTPS1 Use & Care Manual](#)

(49 pages)

[Dishwasher Whirlpool GU2500XTPQ6 Use & Care Manual](#)

(49 pages)

[Dishwasher Whirlpool DU1048XTPS0 Use & Care Manual](#)

(48 pages)

[Dishwasher Whirlpool U1050 Use And Care Manual](#)

Whirlpool canada lp dishwasher useandcareguide (48 pages)

[Dishwasher Whirlpool Gold DU1050 Use & Care Manual](#)

(48 pages)

[Dishwasher Whirlpool DU1050 Use And Care Manual](#)

Whirlpool dishwasher use & care guide (48 pages)

[Dishwasher Whirlpool DU1100 Use & Care Manual](#)

Whirlpool dishwasher use & care guide (48 pages)

[Dishwasher Whirlpool DU1055XTSB0 Use & Care Manual](#)

(44 pages)

[Dishwasher Whirlpool DU1015 Use And Care Manual](#)

Whirlpool dishwasher use & care guide (44 pages)

[Dishwasher Whirlpool DU1000 Use And Care Manual](#)

Whirlpool dishwasher use & care guide (44 pages)

[Dishwasher Whirlpool DU1101XTPQ9 Use & Care Manual](#)

(44 pages)

[Dishwasher Whirlpool DU1055XTSB1 Parts Manual](#)

Undercounter dishwasher (15 pages)

[Dishwasher Whirlpool GU2300XTS Parts List](#)

Undercounter dishwasher (14 pages)

[Dishwasher Whirlpool DU1055XTSB2 Parts Manual](#)

Undercounter dishwasher (14 pages)

Related Content for Whirlpool DU1100XTPS9

[ESTATE TUD8700RQ1 Cycle Status Indicators](#)

Whirlpool ESTATE TUD8700RQ1

[DU600 SERIES Cycle Status Indicators](#)

Whirlpool DU600 SERIES

[DU948 Cycle Status Indicators](#)

Whirlpool DU948

[DU915 series Cycle Status Indicators](#)

Whirlpool DU915 series

[Series 925 Cycle Status Indicators](#)

WHIRLPOOL Series 925

[DU960PWKB1 Cycle Status Indicators](#)

Whirlpool DU960PWKB1

[GU1500XTLT0 Cycle Status Indicators](#)

Whirlpool GU1500XTLT0

[DU1101XTPQ9 Cycle Status Indicators](#)

Whirlpool DU1101XTPQ9

This manual is also suitable for:

[Du1145xtpq9Du1055xtsq1Du1101xtpqaDu1055xtsb2Gu2300xtss0Du1148xtpq9](#) ... [Show all](#)