



Toshiba D-V610KU Owner's Manual

 
Dvd video recorder / video cassette recorder

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118

119
120
121
122
123
124
125
126



•

•

Bookmarks


Quick Links

[1 Features](#)

[2 Main Menu](#)

[3 On Recording](#)

[Download this manual](#)

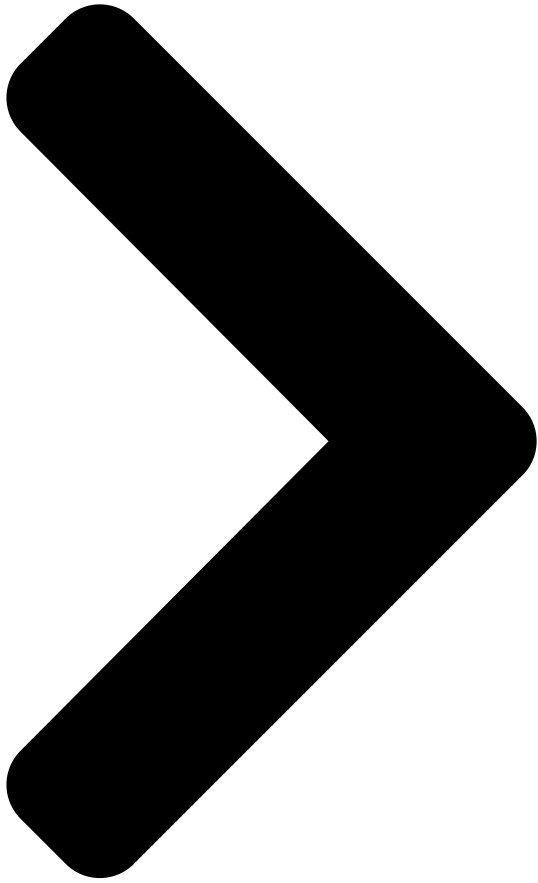

TOSHIBA

0
0
0
v,0Eo
.w
. %
0,0_LA,0,0_

DVDVIDEORECORDER/VIDEO C ASSETTE RECORDER

-V

OWNER'S MANUAL

Digital Out
COMPATIBLE
H;;:31"n|



Printed in China

rOSI-I|BA

1WMN24593 / E9KGAUD*-k--kk
© 2008Toshiba Corporation

TOSHIBA DVD VIDEO RECORDER / VIDEO CASSETTE RECORDER D-VR610KU

TOSHIBA



DVD VIDEO RECORDER / VIDEO CASSETTE RECORDER

D-VR610KU

OWNER'S MANUAL



ManualsLib.com

Owner's
Recorder
The model number and serial
number of your
recorder are
printed on the
bottom of the
recorder.
Record:
Model number
Serial number:
Put this DVD
into the recorder.
DVD-Audio
DVD-Video
Cover page
1-2
2007/12/29
22-40-41



TOSHIBA

Table of Contents

Next Page

1
2
3
4
5

Related Manuals for Toshiba D-V610KU

[DVD VCR Combo Toshiba D-VR610KU Owner's Manual](#)

Dvd video recorder / video cassette recorder (126 pages)

[DVD Recorder Toshiba D-VR610KU Owner's Manual](#)

Dvd video recorder / video cassette recorder (117 pages)

[DVD VCR Combo Toshiba DVR610 - DVDr/ VCR Combo Service Manual](#)

Dvd video recorder / video cassette recorder (87 pages)

[DVD VCR Combo Toshiba DVR620KU Owner's Manual](#)

Dvd video recorder / video cassette recorder (113 pages)

[DVD VCR Combo Toshiba DVR670KU Owner's Manual](#)

Dvd video recorder / video cassette recorder (124 pages)

[DVD VCR Combo Toshiba D-VR3SU Owner's Manual](#)

Dvd recorder-vcr (60 pages)

[DVD VCR Combo Toshiba D-VR4XSU Owner's Manual](#)

Hi-fi vcr & dvd video recorder (92 pages)

[DVD VCR Combo Toshiba D-VR4 Owner's Manual](#)

Hi-fi vcr & dvd video recorder (88 pages)

[DVD VCR Combo Toshiba D-VR5SU Owner's Manual](#)

Hi-fi vcr & dvd video recorder (92 pages)

[DVD VCR Combo Toshiba D-VR3SB Owner's Manual](#)

Dvd recorder-vcr (110 pages)

[DVD VCR Combo Toshiba D-VR17KB Owner's Manual](#)

Dvd video recorder/video cassette recorder (83 pages)

[DVD VCR Combo Toshiba DVR620KU Owner's Manual](#)

Dvd video recorder / video cassette recorder (124 pages)

[DVD VCR Combo Toshiba DVR670KU Owner's Manual](#)

Dvd video recorder/video cassette recorder (126 pages)

[DVD VCR Combo TOSHIBA DVR80KF Owner's Manual](#)

Dvd / video cassette recorder (80 pages)

[DVD VCR Combo Toshiba DVR620KC Owner's Manual](#)

Dvd video recorder / video cassette recorder (106 pages)

[DVD VCR Combo Toshiba DVR19DTKB Owner's Manual](#)

Dvd/video cassette recorder (80 pages)

Summary of Contents for Toshiba D-V610KU

[Page 1](#) TOSHIBA v, oEo 0, 0. _LA.0, 0 _ BVD+ReWriTable DVD+R DVDVIDEORECORDER/VIDEO C ASSETTE R ECORDER OWNER'S MANUAL H;;;:31"n| HIGHDEFI.ITIO. MULTIMEDIA INTER_ ACE Digital Out COMPA"riBLR Owner's Reçor_ The model number and seri of your below. rÖSI-l|BA communica _t this DVD Recorder. Model numb Printed in China...

[Page 2](#) WARNING: TO REDUCE THE RISK OF FIREOR ELECTRIC SHOCK, DO NOT EXPOSETHIS APPLIANCE TO RAIN OR MOISTURE. The lightning flash with arrowhead symbol, within an equilateraltriangle, is intended to alert the userto the presence of uninsulated"dangerousvoltage"within the product'senclosurethat maybe of sufficientmagnitude to constitute a risk of electric shockto persons.

[Page 3](#) PRECAUTIONS IMPORTANT SAFETY INSTRUCTIONS This unit has been designed and manufactured to assure personal safety. Improper use can result in electric shock or fire hazard. The safeguards incorporated in this unit will protect you if you observe the following procedures for installation, use and...

[Page 4: Precautions](#)

480 progressive scan output, is recommended that the user switch the connection the "standard definition" output. If there are questions regarding your TV set compatibility with this 480p DVD recorder, please contact Toshiba Customer Service. E9KGAUD D-VR610KU EN.indd , , _ + _ / _ D 2007/12/18 17:09:31...

[Page 5](#) PRECAUTIONS If the remote control does not work properly, you can test if the remote control sends out the infrared signal with AM • Please refer to relevant topics on "TROUBLESHOOTING" radio or a digital camera (including built-in camera of cellular on pages 102-105 before returning the product.

[Page 6](#) PRECAUTIONS INFORMATION ON DVD RECORDING FEATURES Recording Mode Symbols Used in this Owner's Manual Restrictions on Recording FUNCTIONAL OVERVIEW SETTINGS FOR A RECORDING Installing the Batteries in the Remote Control .. Make Recording Compatible

[Page 7](#) © SPECIAL PLAYBACK Resume Playback LIST OF THE DEFAULT SETTINGS Fast Forward / Fast Reverse Playback GENERAL SETTING Skipping TV Commercials During Playback .. Playback Rapid Playback Display Step by Step Playback Video

[Page 8: Features](#)

This unit not only plays back DVD, CD and cassette tape but also offers features for you to record on DVD/cassette tape and edit them after that. The following features are offered with this unit. Setting or clearing chapter marks: You can set or clear chapter marks on titles.

[Page 9](#) FEATURES R4.7 © Can be formatted in VR or video Automatically Automatically formatted formatted mode video mode +VR mode +VR mode Video Mode VR Mode 480 min (12cm) 480 min (12cm) 480 min (12cm) 480 min (12cm) 480 min (12cm) 144 min (8cm) 144 min (8cm)

[Page 10](#) • CD-ROM • Compact Disc-Interactive (CD-I) Toshiba is not liable for any damage or loss caused directly • Video Single Disc (VSD) • DVD-ROM or indirectly by the malfunction of this recorder, including,...

[Page 11: Main Menu](#)

© () The unit can also be turned on by pressing these buttons or by inserting a cassette tape. 14. TRACKING buttons (VCR) 1. I/O ON/STANDBY button (DVD/VCR) Press to turn on and off the unit. Press to adjust the tracking during playback or in slow 2.

[Page 12](#) FUNCTIONAL OVERVIEW Keep in mind the following when using the remote control: Install the batteries (AAx2) matching the polarity • Make sure that there are no obstacles between the remote indicated inside battery compartment of the remote control and the infrared sensor window on the unit.

[Page 13](#) FUNCTIONAL OVERVIEW 1. INPUT SELECT 4B button 18. TRACKING/% / V buttons (VCR) • Press to select the appropriate input. • Press to adjust the tracking during playback or in 2. OPEN/CLOSE _ button slow motion of the cassette tape. DVD mode: •...

[Page 14](#) Because this product is a combination of a VCR and a DVD recorder, you must select first which component you wish to operate with [VCR/DVD]. Press [DVD] on the remote control. Press [VCR] on the remote control. (Verify that the DVD indicator is lit.) (Verify that the VCR indicator is lit.)

[Page 15](#) This unit uses the following on-screen displays and menus to guide you to the easy operations. The on-screen displays give you the information on the loaded disc, the disc/file in playback, or the HDMI status, etc. The menus allow you to change the various kinds of settings

for playing back, recording, or editing to suit your preference.

Page 16 Title name information File name information *1. Indicates the resolution of the HDMI output image. *2. Indicates the HDMI video format. *3. Indicates the HDMI audio format. • First, track name will be displayed. 4. Indicates current disc status. * "- -" will be displayed, when it does not have any information.

Page 17 6UI©E WOOH-SCREEH DISPLAYS AH© MEHUS Press [SETUP] to display the main menu. Then use 1.General Setting: [A/V] to select a menu and press [ENTER] to display the To go to general setting menu. menu. These menus provide entries to all main functions 2.Timer Programming: ©...

Page 18 VORI,, ..0"0- t|" ||DB !!i !!iiiiiiiiii; Appears when this unit is in DVD : Appears when this unit is in DVD output mode. DVD output mode and a disc : Appears in the afternoon with is in the unit. : Appears when the timer the clock display.

Page 19: Settings For The Video Input

This section describes how to connect this unit to an external tuner such as cable/satellite box.
• When you change the connections, all devices should be turned off. • Refer to the operation manual accompanying external devices for more information. Disconnect the power cords of the devices from the AC outlet•...

Page 20 Use [i / V] to select the input jack type to connect, then press [ENTER]. If you want to use VIDEO IN jack, select "Video In". If you want to use S-VIDEO IN jack, select "S-Video In". TOSHIBA Press [SETUP] to exit. SE-R0295 E9KGAUD D-VR610KU EN.indd ,F_+_,/i_...

Page 21 AUDIO OUT (DVD/VCR) VIDEO OUT analog audio good picture better picture +|vl © RCA audio cable S-video cable component video cable V_EOOUT (re_l} ¥ (Blue) S-VIDEO OUT COMPONENT AUDIO OUT (DVD) VIDEO OUTPUT To set progressive scan mode, refer to page 94 •...

Page 22 A simple 1-cable connection with a device having an HDMI (high-definition multimedia interface) connector allows digital transfer of both digital video signals and multi-channel audio signals. HDMI cable HDMIOUT When connecting with an HDMI cable, the audio signal will be output as the digital audio signal simultaneously, you do not need the analog audio connection...

Page 23 COIN TIOI TO A TV WITH AN HDMI '== COMPA'I'IBLE PORT Actual output Audio recording format of the disc Dolby Digital setting of this unit 2channel PCM Dolby Digital Stream Dolby Digital DVD-video LPCM 2channel Stream 2channel Dolby Digital Stream Dolby Digital DjvX ©...

Page 24 • When you change the connections, all devices should be turned off. • Refer to the owner's manual accompanying external devices for more information. stereo system Dolby Digital decoder digital audio coaxial input AUDIO jack analog audio input jacks RCA audio cable digital audio coaxial cable AUDIO...

Page 25: Clock Setting

£ Use [A / T] to select your desired language, then press [ENTER] to set language. Press [ENTER] to activate "Clock Setting". © & Proceed to step 3 in "Clock Setting" *, < on page 26. TOSHIBA SE-R0295 © £ E9KGAUD D-VR610KU EN.indd ,/,+_,/b 2007/12/18 17:09:50...

Page 26 Use [_1 / I_] to select an item to set, and use [A / V] to select the contents to suit your preference, then press [ENTER]. TOSHIBA SF-R0295 Your setting will be activated. The clock start counting when you press [ENTER].

Page 27 Use [A / V] to select "Format Mode", then press [ENTER]. Use [A / V] to select "Video mode" or "VR mode", then press [ENTER]. Press [SETUP] to exit. TOSHIBA SE-R0295 Insert a brand-new disc. © Formatting will start. Formatting is completed.

Page 28 Selection menu will appear and prompt you to confirm. • For DVD+RW, use [A/V] to select "Yes", then TOSHIBA press [ENTER]. SE-R0295 Use [A / V] to select "Yes", then press

[ENTER]• Formatting will start. If you want to cancel formatting, select "No".

[Page 29](#) Use [i / V] to select "Yes", then press [ENTER]. © & A disc will be protected. TOSHIBA SE-R0295 © E9KGAUD D-VR610KU EN.indd ,',_+_,/!_ 2007/12/18 17:09:58...

[Page 30](#) [ENTER]. Use [li / V] to select "Disc Full" or "End of Timer Rec", then press [ENTER]. Use [i / V] to select "ON", then press [ENTER]. TOSHIBA SF-R9295 Your setting will be activated. Press [SETUP] to exit. E9KGAUD D-VR610KU EN.indd...

[Page 31](#) SETUP [?/!;:g © & DISC MENU TOP MENU Finalizing will start. <, y STOP i?Bi: i_Oi2 Finalizing is completed. /: _ i HA) T(i;:: ? il TOSHIBA SE-R0295 © £ < £ S" © E9KGAUD D-VR610KU EN.indd ,',_+_,/!_D 2007/12/18 17:10:01...

[Page 32](#) PLAYING THE DISCS IN OTHER ©V© PLAYERS To cancel finalizing... (DVD-RW only) Press [STOP I] during the finalizing is in progress. Use [A/V] to select "Yes", then press [ENTER]. Finalizing canceled and the unit switches to stop mode. If"_" appears when [STOP I] is pressed, you cannot cancel finalizing because the finalizing...

[Page 33](#) You can select a recording mode among 5 options, You cannot record copy-protected program using this the recording time will depend on the recording mode unit. Copy-protected video signal is included in DVD- you select as follows. videos, some satellite broadcasts, some pay-per-view ©...

[Page 34](#) Use this feature to make the discs recorded on other unit You can set a specified time for chapter marks. recordable on this unit. When you make an additional 1) Press [SETUP] and use [A /V] to select "General recording on this unit with "Make Recording Compatible"...

[Page 35](#) "F'IIIII, NGS FOR A RECORDING You can enjoy high quality sound recording. This function © works only when the recording mode is set at XP. You can set aspect ratio for video mode recording. 1) Press [SETUP] and use [A /V] to select "General 1) Follow step 1 to 2 on "Recording Audio Select(XP)".

[Page 36](#) Press [REC MODE] to select a recording mode. Refer to "Recording Mode" on page 33 for DVD or "Recording" on page 99 for VCR. TOSHIBA SE-R0295 Press [INPUT SELECT -_] to select the appropriate external input position (L1/L2) to which your external tuner is connected•...

[Page 37](#) Press [STOP I] to stop recording• The recorded title will be included in the title list. "O" will be displayed for 5 seconds. Press [REC 0] to start recording• Refer to "Guide to a Title List" on page 70.) © Press [PAUSE I I] to pause recording.

[Page 38](#) Guide to Timer Programming Display You can program the unit to record up to 12 programs within a month in advance. Daily or weekly program recordings are also available. Before recording, make sure • Connect the external tuner to either L1 or L2 and set it to output audio/video signals when it comes to the time...

[Page 39](#) 'IIIII M ER RECORD N6 Use [A / V] to enter the date, then mode• press [1_]. Use [A / V] to select a recording © Refer to "Recording Mode" on page 33 for DVD or "Recording" on page 99 for VCR. •...

[Page 40](#) 'IIIII M ER RECORDING 1) Press [TIMER SET]. 2) Press [TIMER PROG.]. 3) Check the information on the list you want to edit. lEach error number means: E1-22 Recording error other i E40 Some portion has E37-39 than below not been recordedi because of program E23-24 [Unrecordable disc...

[Page 41](#) °[)MER C©RD)HG • If there is a power failure or this unit has been [IIO ONISTANDBY] first, then select the recorded title and unplugged for more than 30 seconds, the clock setting press [PLAY I _], or [OPENICLOSE _] to remove the disc. and all timer programming will be lost.

[Page 42](#) ("DVD" or "VCR"), then press [-_]. mode• Use [A / V] to select the recording Refer to "Recording Mode" on page 33 for DVD or "Recording" on page 99 for VCR. TOSHIBA SE-R0295 E9KGAUD D-VR610KU EN.indd ,F_+_,/,hx 2007/12/18 17:10:16...

[Page 43](#) SXI'ILLITI LINK Press [ENTER]. "To Standby Mode" is highlighted. © Press [ENTER] again. Standby Mode In a second, the unit will be turned off automatically as it goes into the satellite link standby mode. To cancel the satellite link function while in the satellite link standby...

[Page 44](#) Connect the external device properly to the unit by using input jacks either L2 (Front) or L1 (Rear). When connecting an external device of monaural output to this unit, use AUDIO L jack of L2 (Front). Use S-video or the RCA audio/video cables for this connection.

[Page 45](#) ÷<,, [1/O ON/STANDBY], and be sure to Turn on the TV and press Before recording from an external device, refer to the select the input of the TV to which instructions for the connection on page 44. © the unit is connected. [] [] [] '_1'_ When you want to record to the disc: OPEN/...

[Page 46](#) This function helps you to easily dub the contents of the DVC (digital video camcorder) to this unit. You can control basic operations of the DVC from the remote control of this unit such as playback, fast forward reverse and stop all operations if the DVC is in video mode.

[Page 47](#) Then, press [STOP II] when you come RECMODE to the desired start point • £1ii? £12 Use [& / V] to select "Start Rec", then ;'s' press [ENTER] • TOSHIBA The dubbing will start. SE-R0295 To stop dubbing; Use [_ / V] to select "Control", then Press [DVD] first.

[Page 48](#) DVC to resume the playback • The dubbing will start. To pause the recording: Press [PAUSE I I] once. "REC" w ill flash. TOSHIBA resume recording: SE-R0295 0] or press Press [REC [PAUSE I I] again. "REC" w ill reappear.

[Page 49](#) Selection menu will appear. Note for recording to a disc: • Make sure that the disc is recordable. Refer to page 9. DUBBING © TOSHIBA SE-R0295 %_,_ Instructions continue on the next page. E9KGAUD D-VR610KU EN.indd...

[Page 50](#) ©V©/VCR ©UBB_NG Use [A / V] to select "DVD ,t_VCR", Use [A / V] to select "VCR • DVD", then press [ENTER] • then press [ENTER] • Press [SETUP] to exit • Press [SETUP] to exit • Press [VCR]. Press [DVD]. Press [PLAY I_]. Then press Press [PLAY I_].

[Page 51](#) The contents of DVD are generally divided into titles, and the titles are subdivided into chapters. Audio CDs are divided into tracks. Data disc contains MP3/WMA/JPEG/DivX ® are divided into folders, and the folders are subdivided into files. © DVD video Title: Divided contents...

[Page 52](#) If you are playing back a DVD-video, a menu may appear. Refer to "Using the Title/Disc Menu" on page 57. Press [STOP II] once to stop playback temporarily • • Refer to "Resume Playback" on page 58. TOSHIBA SE-R0295 EgKGAUD D-VR610KU EN.indd ,'_+_/_/h_ 2007/12/18 17:10:28...

[Page 53](#) VR mode DVD-RW original ? k_,_ i:_ _3_K SEANCH ZOO_ iiiiiiiiii iii_ Ciilli TOSHIBA SE-R0295 Use [_ / •] to select "Play From Start", then press [ENTER] • © Turn on the TV and be sure to select the input to Press [1/O ON/STANDBY] •...

[Page 54](#) Use of CD-RW for MP3 files is not recommended. You must obtain any required permission from copyright owners to download or use copyrighted content. Toshiba cannot and does not grant such permission. EgKGAUD D-VR610KU EN.indd ,F_,f. 2007/12/18 17:10:32...

[Page 55](#) [ENTER]. • Press [PLAY I_], [ENTER] or IID-) to move to any lower hierarchy. • Press [<1] or [RETURN] to move back to the previous hierarchy. TOSHIBA SE-R0295 DivX ® subtitle The subtitle created by the user can be displayed during DivX ®...

[Page 56](#) BASIC PLAYBACK • Some DivX ® VOD files are It is recommended that files to be played back in this restricted with the limited unit are recorded under the following specifications: playable times (you cannot Official DivX ® Certified product play them back beyond the •...

[Page 57](#) BASIC PLAYBACK Press [DVD] first. 1) During playback, press [PAUSE I I]. DVD may

contain a title list, which describes the contents Playback will be paused and sound will be muted. © of the disc, or a disc menu, which guides you through available functions in the disc.

[Page 58](#) You can play back from where you stopped playing back the disc last. Press [DVD] first. You can skip TV commercials to enjoy the recorded 1) During playback, press [STOP II]. programs without interrupting. The resume message will appear. Press [DVD] first. During playback, press [INSTANT...]

[Page 59](#) SPECIAL PLAYBACK Rapid playback function is available only during © playback. Press [DVD] first • This function is available only on discs recorded in the 1) During playback, press [PAUSE I I]. Then press Dolby Digital format, and plays back in a slightly faster/ [FWD I_] or [REV _1_1].

[Page 60](#) SPECIAL PLAYBACK Press [DVD] first • This feature allows you to assign a specific point on a disc to be called back later. 1) During playback, press [DISPLAY] or [ZOOM]. Press [DVD] first • • If you press [ZOOM], skip to step 3. • For audio CD, skip to step 2. 2) Use [_1/I_] to select @__, then press [ENTER] within 1) During...

[Page 61](#) SPECIAL PLAYBACK You can play back the already recorded part of the Using [TIME SLIP] ... © currently recording program without waiting for the With [TIME SLIP], even if you leave your couch while recording to the end. This function works from you are watching TV through...

[Page 62](#) 3) Press [STOP n] once to stop playback. You can also play back a recorded title during current recording or the timer recording on the same disc. The resume message will appear. Screen for the current recording: 1) During recording, press [DISPLAY].

[Page 63](#) Using [SKIP I<1<I] / [SKIP _ Using [SKIP P<<] / [SKIP _ © Press [DVD] first. Press [DVD] first. 1) During playback, press [SKIP I_] to skip the 1) During playback, press [SKIP _] to skip the current track/file and move to the next.

[Page 64](#) Press [DVD] first • • For audio CD, skip to step 2. 1) During playback, press [DISPLAY]. 2) Use [_1 / I_] to select [_], then press [ENTER]. e.g.) DVD-video e.g.) audio CD The number next to _ will be highlighted. To move to the number next to _, press [1_].

[Page 65](#) Title: The current title will be played back repeatedly. Chapter: Available repeat function may vary depending the discs. The current chapter will be played back repeatedly. Press [DVD] first • All: • For audio CD, MP3, or WMA, skip to step 2, or press ©...

[Page 66](#) REPEAT!RANDOM!PROGRAM PLAYBACK!SL ©E SHOW You can program the disc to play back in your desired You can select the display time between 5 seconds and order. 10 seconds. Press [DVD] first. Press [DVD] first. 1) Press [SETUP] in stop mode. 1) Follow steps 1 and 2 in "Program Playback"...

[Page 67](#) You can select the format of audio and video as you prefer depending on the contents of the disc you are playing back. © DVD-video may have subtitles in one or more languages. When playing back a DVD-video recorded with 2 or more Available subtitle languages...

[Page 68](#) CHANGING THE FORMAT OF AUDIO AND VIDEO Some DVD-video have scenes shot from two or more angles. Angle information should be on the disc case if You can enjoy stereophonic virtual space through your the disc contains multi-angle scenes. existing 2 channel stereo system.

[Page 69](#) SELECTING THE FORMAT OF AUDIO AND VIDEO You can adjust the black level to control the brightness of the picture in order to get a better picture, 1) During playback, press [DISPLAY]. 2) Use [_1 / I_] to select _ . Press [ENTER] within second, or wait for 1 second to display the selection...

[Page 70](#) Title list allows you to check the titles recorded on the disc easily. You can choose a title to play back from this list and easily edit the titles as you prefer. You will find editing discs is easy. This unit offers convenient edit functions which are possible only with...

[Page 71](#) After the disc is fully recorded: When a title is deleted from • When the last title is

deleted from • When a title is deleted from © DVD=RW in VR mode, the DVD=RW in video mode or DVD+RW, DVD=R and DVD+R, the recordable disc space will recordable...

[Page 72](#) Use [A / V] to select "Title Delete", then press [ENTER]• Use [A / V] to select "Yes", then press [ENTER]• TOSHIBA SE-R0295 After that, "Are you sure?" will appear, select "Yes" and then press [ENTER]. Title will be deleted.

[Page 73](#) Use [A / V] to select "Yes", then press [ENTER]. © & The title is added to playlist. Press [RETURN] or [STOP II] to exit. Data will be written onto the disc momentarily. TOSHIBA SE-R0295 © £ %_ _ EgKGAUD D-VR610KU EN,indd...

[Page 74](#) Use [4, / V] to select "Yes", then press [ENTER]. "Are you sure?" will appear. Use [A / V] to select "Yes" and then press [ENTER]. TOSHIBA SE-R0295 Playlist is deleted. Data will be written onto the disc momentarily. E9KGAUD D-VR610KU EN.indd...

[Page 75](#) © DISC MENU TOP MENU To enter a title name, follow the steps of "Guide to Edit Title Name" on page 76. © TOSHIBA & SE-R0295 area for entering title names When you finish entering a title name, press [ENTER].

[Page 76](#) • To delete letters, press [[:LEAR] repeatedly. Press and hold [[:LEAR] to delete all letters. TOSHIBA • Use [_1 / I_] to move the cursor to the left and right. SE-R0295 • You can enter up to 30 letters.

[Page 77](#) If you select "Add" at step 4, a new chapter mark will be added, and if you select "Delete" at step 4, the chapter mark will be deleted. e.g.) Add TOSHIBA SE-R0295 © £ A new chapter mark will be added. Press [RETURN].

[Page 78](#) Use [SKIP t<1<] or [SKIP IHIH] to decide the chapter to be hidden. 3I},_G :E_': z13/i Use [A / V] to select "Hidden", then press [ENTER]. TOSHIBA In stop mode, press [TOP MENU]. Press[DVD]. Title list will appear. press [RETURN] thrice to exit.

[Page 79](#) "Edit" menu. then press [ENTER]. Use [A / V] to select "Scene Delete", e.g.) VR mode DVD-RW playlist. £ © TOSHIBA SF-R9295 © £ < Instructions continue on the next page. E9KGAUD D-VR610KU EN.indd...

[Page 80](#) E© NG © SCS Use [A / V] to select "Delete" then Use [SKIP t<1< / IHIH], press [ENTER]• [REV <t<1], [FWD I_1_], [PLAY I_] and [PAUSE I I] to find the start point, then press [ENTER]• Use [A / V] to select "Yes" then press [ENTER]•...

[Page 81](#) Rt_D e.g.) VR mode DVD-RW playlist SKIP STOP SKIP pAusE {?! } TOSHIBA The title will be divided into two new titles. SE-R0295 Both title names are identical. For DVD+RW: Data will be written onto the disc momentarily. In stop mode, press [TOP MENU]•...

[Page 82](#) [ENTER]. Selection menu will appear. Use [A / V] to select "Yes", then press [ENTER]. TOSHIBA SE-R0295 The two titles will combine into a single title. Data will be written onto the disc momentarily.

[Page 83: Setting A Disc To Protect](#)

Press [RETURN] and then [RETURN] or [STOP II] to exit. Data will be written onto the disc momentarily. TOSHIBA SE-R0295 © To protect a whole disc (VR mode DVD-RW, DVD+RW/+R £...

[Page 84: Mode](#)

If you select "OFF" at step 3, all the chapter marks are erased. SFst, Press [RETURN] and then [RETURN] or C]]]] Z]]]]]]]?i]]] [STOP II] to exit. TOSHIBA Data will be written onto the disc momentarily. 8E-R0295 E9KGAUD D-VR610KU EN.indd...

[Page 85](#) The following table is the contents which you can set and the default settings. Refer to the following table for useful operation. "1"i1111111' Parental Lock Playback Set the parental level for DVD playback. -_ page 88 © Compressing the range of sound volume.

[Page 86](#) L_S'IIIIIF 0 F "IIIII _H E D EFAU LT SET'IIIII_ N G\$ "I'III)IIIlt Display V-Chip Canadian

English Rating Set the viewing limitation according to Canadian --> page 92 English Rating.
Change Password Change the password. --> page 93 Video Progressive Set to the progressive scan mode (set to "ON") or...

[Page 87](#) [ENTER]. £ Parental Lock © Submenu will appear. Refer [] to [] on pages 88 to 90 and set the selected item. TOSHIBA SE-R0295 When you finish with the setting, press [SETUP] to exit. E9KGAUD D-VR610KU EN.indd ;',/_+_,'/_x 2007/12/18...

[Page 88](#) GENERAL SET 'IIIII NG A password has not been set yet. Some DVD-video feature a parental lock level. Playback Use [/] to select "Yes", then press [ENTER]. Use will stop if the ratings exceed the levels you set, it will [the Number buttons] to enter a new password...

[Page 89](#) GENERAL rIIIIIF NG Settings for Dolby Digital (Default : Stream) Choose the appropriate audio setting for your external device. Use [4, / V] to select a setting, then press [ENTER]. © It will only affect a disc playback. Use [A/V] to select a desired item, then press [ENTER].

[Page 90](#) Set the language for disc menu. Use [A / V] to select a language, then press [ENTER]. Set to "ON" to show the angle icon during the playback. Your setting will be activated. Use [A / V] to select a setting, then press [ENTER].

[Page 91](#) Your setting will be activated. _D; ; '!:23 ' 7!,!) Set the front panel display brightness. TOSHIBA Use [i, / V] to select a setting, then press [ENTER]. SE-R02g5 I Press [STOP II] if you are playing back a disc. select "General Setting", then press...

[Page 92](#) GENERAL SET 'IIIII NG MPA Rating With the v-chip system in this unit, you can set the TV Rating viewing limitation for the analog TV programs received from the external tuner or recorded on DVDs to prevent Canadian French Rating your children from watching inappropriate...

[Page 93](#) GENERAL rIIIII, NG Canadian English Rating] Change Password Rating Category Change the current password. © Adult audience only higher Use [the Number Buttons] to enter new access Unsuitable for ages under password. Parental guidance suggested General audience For children over 8 For all children Exempt program...

[Page 94](#) GENERAL SET 'IIIII NG This unit is compatible with the progressive scan system. The feature provides you with the higher definition images than the traditional output system does. To utilize this feature, you must set progressive scan mode to "ON". 1) Use [A / V] to select "ON", then press [ENTER].

[Page 95](#) ;/>p IAJ!% : _?o Nc q,=::::) ,&g /;r :i;27 : i? TOSHIBA 8E-R0295 Press [SETUP] in stop mode and use [A / V] to select "General Setting", Set the Divx® subtitle. then press [ENTER]. Use [i / V] to select a setting, then press [ENTER].

[Page 96](#) _ :_EV #% F >A{8: press [SETUP] to exit. When you finish with the setting, TOSHIBA You can select the color space for HDMI output. SE-R0295 Set the appropriate color space for your display device. Use [A / V] to select a setting, then press [ENTER].

[Page 97](#) GENERAL rIIIIIF NG If you do not want to output the audio through HDMI © (when you digitally output the audio through COAXIAL DIGITAL AUDIO OUT jack to your audio system, etc.), you can set the HDMI audio output off. Use [A / V] to select a setting, then press [ENTER].

[Page 98](#) Use [A / V] to select "Reset All", then _ress [ENTER]. Select "Yes" using [A / V], then press [ENTER]. "Are you sure?" will appear. Select "Yes" using [A/V] and then press [ENTER]. Your setting will be initialized. TOSHIBA SE-R02g5 Iiii E9KGAUD D-VR610KU EN,indd ;',/_+_,'/_x 2007/12/18 17:11:32...

[Page 99](#) © 1) Press [I/O ON/STANDBY] on the remote control or Press [VCR] first • © the front panel of the unit. Before recording, make sure: When you are playing back a cassette tape, turn on the • The appropriate external input position (L1/L2) to which TV and be sure to select the input to which the unit is your external tuner is connected...

press [ENTER]. "Are you sure?" will appear. Select "Yes" using [A/V] and then press [ENTER]. Your setting will be initialized. TOSHIBA SE-R02g5 E9KGAUD D-VR610KU EN, indd ,',/_+_,',/_'x 2007/12/18 17:11:32...

[Page 114: Timer Recording](#)

© 1) Press [I/O ON/STANDBY] on the remote control or Press [VCR] first • © the front panel of the unit. Before recording, make sure: When you are playing back a cassette tape, turn on the • The appropriate external input position (L1/L2) to which TV and be sure to select the input to which the unit is your external tuner is connected...

[Page 115: Display](#)

VCR FUNC'[I]©NS This feature allows you to set the recording length simply An index mark will be assigned at the beginning of each by pressing [REC O] on the remote control. recording you make. You may skip to a specific marked point by following the steps below.

[Page 116](#) VCR FUNC'IIIFION5 Press [VCR] first • This feature allows you to go to a specific point on a © cassette tape by entering the exact amount of time you Fast forward: wish to skip in order to reach the point. When the unit is in stop mode, press [FWD I_] to fast forward the cassette tape.

[Page 117](#) Before requesting service for this unit, check the table below for a possible cause of the problem you are experiencing. Some simple checks or a minor adjustment on your part may eliminate the problem and restore proper operation. The power does not turn on. •...

[Page 118](#) "IIIII'I OUBL MOOTINQ DV signal cannot be input. • Before connection, turn on the power supplies for both this unit and the DVC, and make sure that these units are in stop mode. • Only a "DVC-SD" signal can be input from the DVC to this unit. Other types of signals are not supported.

[Page 119](#) "IIIII'I OUBL HOOTINQ The subtitle language cannot • Multilingual subtitle are not recorded on the DVD-video. changed or turned off. The angles cannot be changed. • Multi-angles are not recorded on the DVD-video being played back. • The angle-change operation is whenever possible as long as the disc contains a multi-angle...

[Page 120](#) "IIIII'I OUBL MOOTINQ Disc Error • Unplayable disc is inserted in the unit. • Insert the standardized disc which have -- Please eject the disc. -- • The disc is upside down. the marks on pages 9-10. Playback feature may not be available on this disc. •...

[Page 121](#) Abkhazian 4748 Hungarian 5467 Russian 6467 Afar 4747 Icelandic 5565 Samoan 6559 Afrikaans 4752 Indonesian 5560 Sangho 6553 Albanian 6563 Interlingua 5547 Sanskrit 6547 Amharic 4759 Interlingue 5551 Scots Gaelic 5350 Arabic 4764 Inupiak 5557 Serbian 6564 Armenian 5471 Irish 5347 Serbo-Croatian 6554...

[Page 122: On Playback](#)

Analog Audio PCM (pulse code modulation) An electrical signal that directly represents sound. The most common system of encoding digital audio, Compare this to digital audio which can be an electrical found on CD and DAT. Excellent quality, but requires a signal, but is an indirect representation of sound.

[Page 123](#) • This model complies with the below specifications. • Designs and specifications are subject to change without notice. • This model may not be compatible with features and/or specifications that may be added in the future. |qqliq|I System DVD-RW/-R, DVD+RW/+R, DVD-video, CD-DA, CD-RW/-R, VHS cassette tape...

[Page 124](#) Limited United States Warranty Digital Audio Video ("DAV") Product - Exchange Warranty Toshiba America Consumer Products, L.L.C. ("TACP") makes the following limited warranties to original consumers in the United States. THESE LIMITED WARRANTIES EXTEND TO THE ORIGINAL CONSUMER PURCHASER OR ANY...

[Page 125](#) TCL d. Service on Toshiba-branded accessory items (such warrants the DAV Product and its parts against material defects accessory items may be covered by their own warranty);...

[Page 126](#) (iii) any oral or written representations, statements, brochures, press releases, advertising, announcement, For additional information, visit TCL's website at www.toshiba.ca point of sale display, or promotional material relating to the DAV Product; (iv) the relationships that result from this warranty, (the...

This manual is also suitable for:

[D-vr610ku](#)