



# Toshiba 40BV701B User Manual



1

2

3

4

5

Table Of Contents

6

7

8

9

10

11

12

13

14

15

16

17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48

--

•

[Table of Contents](#)

•

## Bookmarks

## Quick Links

[1 Installation and Important Information](#)

[2 Using the Controls and Connections on the Tv](#)

[Download this manual](#)





"Register your TV online at: [www.toshiba.co.uk/registration](http://www.toshiba.co.uk/registration)"

40BV701B\_MB65\_[GB]\_(IB\_INTERNET)\_DVB-T\_(3910UK)\_10073323.indd 1

40BV701B\_MB65\_[GB]\_(IB\_INTERNET)\_DVB-T\_(3910UK)\_10073323.indd 1

# User Manual

## DIGITAL Series



- 1 -

03.10.2011 19:01:46

03.10.2011 19:01:46

**TOSHIBA**  
Leading Innovation >>>

## Table of Contents

[Next Page](#)

1  
2  
3  
4  
5

## Related Manuals for Toshiba 40BV701B

### [Speakers Toshiba e-STUDIO5540C Software Installation Manual](#)

Multifunctional digital systems (238 pages)

### [All in One Printer Toshiba e-STUDIO6540C Management Manual](#)

Multifunctional digital color systems / multifunctional digital systems (192 pages)

### [LCD TV Toshiba DIGITAL Series User Manual](#)

(57 pages)

### [Flat Panel TV Toshiba 40BL702B Owner's Manual](#)

Digital series (50 pages)

### [TV Toshiba 32BV501B User Manual](#)

Digital series (49 pages)

### [TV Toshiba 22BL704B Owner's Manual](#)

Digital series (48 pages)

### [TV Toshiba 32BV801B User Manual](#)

Digital series (45 pages)

### [LED TV Toshiba Digital 19EL93 Series Owner's Manual](#)

(41 pages)

### [Monitor Toshiba LED TV Series Owner's Manual](#)

(22 pages)

### [Air Conditioner Toshiba RAS-10~16 SKV\(R\) Series Owner's Manual](#)

Split type (4 pages)

### [Storage Toshiba MK1031 Installation Notes](#)

(4 pages)

### [LCD TV Toshiba 40BV705B Owner's Manual](#)

Digital series (50 pages)

### [LCD TV Toshiba 40BV700F Owner's Manual](#)

(41 pages)

### [LCD TV Toshiba 40BV700 Service Manual](#)

Lcd color television (66 pages)

### [LCD TV Toshiba 32C120U User Manual](#)

Integrated high definition lcd television (130 pages)

### [LCD TV Toshiba 32AV800AZ Owner's Manual](#)

Integrated digital lcd tv (50 pages)

## Summary of Contents for Toshiba 40BV701B

[Page 1](#) User Manual DIGITAL Series "Register your TV online at: [www.toshiba.co.uk/registration](http://www.toshiba.co.uk/registration)" - 1 - 40BV701B\_MB65\_[GB]\_(IB\_INTERNET)\_DVB-T\_(3910UK)\_10073323.indd 1 40BV701B\_MB65\_[GB]\_(IB\_INTERNET)\_DVB-T\_(3910UK)\_10073323.indd 1 03.10.2011 19:01:46 03.10.2011 19:01:46...

### [Page 2: Digital Switchover](#)

Digital Switchover switchover, and you won't need to re-tune. Keep this Television in the UK is going digital, bringing us all important information about how to re-tune your TV more choice and new services. Starting in late 2007 during the digitalTV switchover and ending in 2012,

television services in the UK will go completely digital, TV region by TV region.

### [Page 3: Re-Tuning: Toshiba Freeview Products](#)

\* This process may affect any saved information stored on your product. Please consult your instruction manual or contact the manufacturer using the details above. TOSHIBA Customer Helpline: 0844 856 0730 TOSHIBA Online Support: [www.toshiba.co.uk/tv-dvd-support](http://www.toshiba.co.uk/tv-dvd-support) - 3 - 40BV701B\_MB65\_[GB]\_(IB\_INTERNET)\_DVB-T\_(3910UK)\_10073323.indd 3  
40BV701B\_MB65\_[GB]\_(IB\_INTERNET)\_DVB-T\_(3910UK)\_10073323.indd 3...

### [Page 4: Manual Re-Tuning](#)

Manual Re-tuning If your Freeview TV or box picks up a different regional service to your preferred service (e.g. BBC England instead of BBC Scotland, or ITV Central instead of ITV Anglia), you can use this manual re-tune. If you are missing some services you may fi...

[Page 5](#) 4 ) Write down the "RF Channel" numbers for your transmitter using the Group boxes here: 5 ) Press MENU and use ◀ or ▶ to select Install and Retune. 6 ) Select Manual Channel Scan from the Installation menu and press OK. 7 ) Select Search Type as Digital by using ◀...

### [Page 6: Table Of Contents](#)

Contents Digital Switchover ..... 2 Locking a Channel .....23 Viewing Info Banner, Electronic Programme Re-tuning: TOSHIBA Freeview Products ....3 Guide .....24 Manual Re-tuning ..... 4 Viewing Info Banner ..... 24 Safety Precautions .....8 Electronic Programme Guide.....24 Air Circulation .....

[Page 7](#) Mode.....43 Appendix D: PIN Information ..... 43 Specifications and Accessories .....44 License Information .....45 Questions and Answers .....46 Toshiba One (1) Year Limited Warranty For TV's (the "Products")..... 48 - 7 - 40BV701B\_MB65\_[GB]\_(IB\_INTERNET)\_DVB-T\_(3910UK)\_10073323.indd 7  
40BV701B\_MB65\_[GB]\_(IB\_INTERNET)\_DVB-T\_(3910UK)\_10073323.indd 7 03.10.2011 19:01:51...

### [Page 8: Safety Precautions](#)

Safety Precautions This equipment has been designed and manufactured to meet international safety standards but, like any electrical equipment, care must be taken to obtain the best results and for safety to be assured. Please read the points below for your own safety.

### [Page 9: Installation And Important Information](#)

Furthermore, under no circumstances shall Toshiba be liable for any consequential loss and/or damage including but not limited to the following, loss of profit, interruption of business, the loss of recorded data whether caused during normal operation or misuse of the product.

### [Page 10: Important Safety Information](#)

Important safety information USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL. Headphone Warning Loud music can damage your hearing irreversibly. Do not set the volume to a high level when listening through headphones, particularly for extended listening periods.

[Page 11](#) Important safety information (continued) • This set should only be connected to an 220-240V AC 50Hz • The unit becomes warm when in operation. Do not place mains power supply. Do not attempt to connect it to any other any covers or blankets on the unit in order to prevent type of supply.

### [Page 12: To Display Your Lcd Tv Using A Wall Bracket](#)

(2) Remove the two screws on the stand. This will allow removal of the pedestal stand. (3) Once you have removed two screws holding the pedestal stand in place, remove the pedestal stand from the TV by sliding the pedestal stand away from the TV. For 40BV701B model - 12 - 40BV701B\_MB65\_[GB]\_(IB\_INTERNET)\_DVB-T\_(3910UK)\_10073323.indd 12  
40BV701B\_MB65\_[GB]\_(IB\_INTERNET)\_DVB-T\_(3910UK)\_10073323.indd 12...

## [Page 13: The Remote Control](#)

The Remote Control Simple at-a-glance reference of your remote control. Inserting Batteries and Effective Range of the Remote Control Remove the back cover to reveal the battery compartment and make sure the batteries are inserted the right way round. Suitable battery types for this remote are AAA, IEC R03 1.5V. Do not combine a used, old battery with a new one or mix battery types.

## [Page 14: Connecting External Equipment](#)

Connecting External Equipment Before connecting any external equipment, remove the mains plug from the wall socket. equipment, it is possible that some equipment may not Aerial cable:.....operate correctly. Connect the aerial to the ANT. socket on the rear of the You can use Subwoofer Out for connecting an external, active television.

## [Page 15: Connecting An Hdmi® Or Dvi Device To The Hdmi Input](#)

Connecting an HDMI® or DVI Device to the HDMI Input To Connect a DVI Device The HDMI input on your television receives digital audio and uncompressed digital video from an HDMI source device Connect an HDMI-to-DVI adaptor cable (HDMI type A con- or uncompressed digital video from a DVI (Digital Visual nector) to the HDMI terminal and audio cables to the AUDIO Interface) source device.

## [Page 16: Connecting A Computer](#)

Connecting a USB Disk, Connecting a Computer USB stick, USB device, USB MEMORY... To Connect a Computer To Connect a USB Disk • You can connect a USB disk to your TV by using With either an RGB/PC or an HDMI connection, you can watch your computer's display on the television and hear the sound the USB input of the TV.

## [Page 17: Power Save Mode](#)

Power Save Mode Environmental Information • This television is designed to consume less energy to save environment. • You not only help to save the environment but also you can save money by reducing electricity bills thanks to the energy efficiency feature of this TV. To reduce energy consumption, you should take the following steps: •...

## [Page 18: Controlling The Tv](#)

Reducing the brightness of the screen will reduce energy use. Energy efficiency cuts energy consumption and thus saves NOTE: The USB socket has limited functionality, and Toshiba money by reducing electricity bills. can take no responsibility for damage to other connected equipment.

## [Page 19: Initial Installation](#)

Initial Installation Before switching on the television put your decoder and media recorder to Standby if they are connected and ensure the aerial is connected to your television. To set up the television use the buttons on the remote control as detailed on page 13. IMPORTANT: Ensure that the aerial or cable is connected and a Common Interface module is not inserted before switching on the TV for the fi...

## [Page 20: Auto Tuning](#)

Auto Tuning Auto Tuning As new services are broadcast, it will be necessary to retune the television in order to view them. • Auto Tuning will completely retune the television and can be used to update the channel list. It is recommended that Auto Tuning is run periodically to ensure that all new services are added.

## [Page 21: Manual Tuning, Analogue Fine Tuning](#)

Manual Tuning, Analogue Fine Tuning The television can be tuned-in manually using Manual Search feature. Digital Manual Search Analogue Manual Search The feature is available for service engineers or The television can be tuned-in manually. For example: can be used for direct channel entry if the multiplex if the television cannot be connected to a media channel is known.

## [Page 22: General Operation](#)

General Operation Stereo and Bilingual Transmissions Viewing Main Menu If stereo or dual language broadcasts are transmitted, the • Press “ ”/ “ ” buttons on the TV at the same word

Stereo or Dual will appear on the screen each time you press the Home button to view main menu.

### [Page 23: Channel List, Sorting Programmes, Programme Locking](#)

Channel List, Sorting Programmes, Programme Locking You can view stored channels and sort them by using the Channel List feature. Viewing Channel List Deleting a Channel You can press GREEN button to tag/untag all The channel order may be changed to suit your personal preference.

### [Page 24: Viewing Info Banner, Electronic Programme Guide](#)

Viewing Info Banner, Electronic Programme Guide Viewing Info Banner • Press GREEN button to list the schedule. • Press BLUE button to display filtering options. • Press INFO button the information screen will appear giving details of the channel and programme Note: There are alternative views of EPG screen.

### [Page 25: Language Selection](#)

Language Selection Language Settings Using this menu you can adjust the preferred language settings. • Select Language from Setup menu and press OK to view this menu. Press the BACK button on the remote control to exit. Preferred These settings will be used if available. Otherwise the current settings will be used.

### [Page 26: Digital Settings - Parental Control, Menu Lock, Set Pin](#)

Digital Settings - Parental Control, Menu Lock, Set PIN You can view or set parental preferences of your TV. Viewing Parental Control Menu Maturity Lock (\*) Press MENU button and select the Settings by using Press MENU button and select settings by using Left or Right button.

### [Page 27: Configuring Picture Settings](#)

Configuring Picture Settings You can configure picture settings of your TV by using Picture Settings menu. Configuring Picture Settings Brightness You can use different picture settings in detail. You can Press MENU button and select picture by using Left or customize current picture mode settings as desired.

### [Page 28: Advanced Settings](#)

Configuring Picture Settings - continued Advanced Settings Select Advanced Settings and press OK button to view or edit advanced picture settings: Colour Temp Colour Temperature increases the 'warmth' or 'coolness' of the picture by increasing the red or blue tint. •...

### [Page 29: Changing Picture Format](#)

Changing Picture Format Depending on the type of broadcast being transmitted, programmes can be viewed in a number of formats. Press SCREEN button and select Picture Zoom. Press OK repeatedly to select between Auto, 16:9, Subtitle, 14:9, 14:9 Zoom, 4:3, Panoramic or Cinema. When Auto is selected the format being displayed is determined by the picture being broadcast.

### [Page 30: Configuring PC Picture Settings](#)

Configuring PC Picture Settings You can set PC Mode picture settings when using the TV as a PC monitor. PC Picture Settings (\*) H Position (\*) While in VGA/PC mode, some items in Picture H (Horizontal) Position shifts the image horizontally to menu will be unavailable.

### [Page 31: Configuring Sound Settings](#)

Configuring Sound Settings You can configure sound settings of your TV by using Sound Settings menu. Configuring Sound Settings In equalizer menu, the preset can be changed to Music, Movie, Speech, Flat, Classic and User. Sound settings can be configured according to your Press the MENU button to return to the previous personal preferences.

### [Page 32: Settings Menu Operation, Conditional Access](#)

Settings Menu Operation, Conditional Access Configuring Your TV's Settings Timers Detailed settings can be configured to suit your Sets timers for selected programmes. Press MENU personal preferences. button and select Settings by using Left or Right button. Press OK button to continue. Use Up or Down button to select Timers and then press OK Viewing Settings Menu button to continue.



## [Page 33: Setting Timers, Setting Date/Time](#)

Setting Timers, Setting Date/Time • The CAM should be correctly inserted, it is Timer/Record Type: This feature is unavailable to impossible to insert fully if reversed. The CAM or be set. the TV terminal may be damaged if the CAM is Date: Enter a date using the numeric buttons.

## [Page 34: Source Settings, Other Controls](#)

Source Settings, Other Controls Configuring Source Settings Configuring Other Settings - General You can enable or disable selected source options. You can configure the settings of your TV. Select The TV will not switch to the disabled source options Configuring...

## [Page 35: Other Controls](#)

Other Controls Blue Background Audio Description Press MENU button and select settings by using Left Press MENU button and select settings by using Left or Right button. Press OK to continue. Use Up or or Right button. Press OK to continue. Use Up or Down to select others settings and then press OK.

## [Page 36: Hdmi True Black](#)

Other Controls - continued HDMI True Black While watching from HDMI source, this feature will be visible in the Picture Settings menu. Press MENU button and select settings by using Left or Right button. Press OK to continue. Use Up or Down to select others settings and then press OK.

## [Page 37: Usb Media Browser](#)

OK button to continue. Media Browser menu • You must obtain any required permission from contents (depending on the contents of your USB copyright owners to use copyright content. Toshiba drive) will be displayed. cannot and does not grant such permission. Auto Start •...

## [Page 38: Viewing Jpg Files](#)

USB Media Browser - continued This TV allows you to enjoy photo, video or music files stored on a USB device. Viewing JPG Files Slideshow Feature To view photo files from a USB disk, you can use this You can use this feature to display photos on your menu screen.

## [Page 39: Video Playback](#)

USB Media Browser - continued This TV allows you to enjoy photo, video or music files stored on a USB device. Video Playback the playback. Selected subtitles may not be displayed correctly in some cases. When you select Videos from Media Browser, In order to display movie subtitles correctly, you should available video fi...

## [Page 40: Analogue Text Services](#)

• For further information on your particular text system(s), see the broadcast text index page or, consult your local Toshiba dealer. Below is a guide to the functions of the remote control text buttons. Accessing Sub-Pages If a text page has sub-pages, press and enter the sub- page numbers 01,02,03 etc.

## [Page 41: Appendix A: Pc Input Typical Display Modes](#)

Appendix A: PC Input Typical Display Modes The display has a maximum resolution of 1920 x 1200. The following table is an illustration of some of the typical video display modes. Your TV may not support different resolutions. Supported resolution modes are listed below. If you switch your PC to an unsupported mode, a warning OSD will appear on the screen.

## [Page 42: Appendix B: Av And Hdmi Signal Compatibility \(Input Signal Types\)](#)

Appendix B: AV and HDMI Signal Compatibility (Input Signal Types) Source Supported Signals Available PAL 50/60 NTSC 60 (SCART RGB 50 SOCKETS) RGB 60 PAL 50/60 SIDE AV NTSC 60 480i 60Hz 480p 60Hz 576i 50Hz 576p 50Hz 720p 50Hz YPbPr 720p 60Hz...

## [Page 43: Appendix C: Supported File Formats For Usb Mode](#)

Appendix C: Supported File Formats for USB Mode file extension containers Video Decoder Audio codec .mpg MPEG MPEG 1 .mpeg MPEG2 .mpe MPEG MPEG 1 .avi MPEG2 XviD Remarks File Format Media Extension Video Audio (Maximum resolution/Bit rate etc.) MPEG 1/2 Sample

Rate: 8k ~ 48kHz, Music...

### [Page 44: Specifications And Accessories](#)

Temperature 5°C - 35°C (41°F - 94°F) Humidity 20 - 80% (non-condensing) Supplied Accessories Remote Control 2 batteries (AAA,IEC R03 1.5V) P Clip 40BV701B Visible Screen Size (approx.) 102cm / 40" Display 16:9 Sound Output (at 10% distortion) 2 x 8 Annual Power Consumption (approx.)

### [Page 45: License Information](#)

License Information • HDMI, the HDMI logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing, LLC. • DVB is a registered trademark of the DVB Project. • [1] EIA/CEA-861-D compliance covers the transmission of uncompressed digital video with high-bandwidth digital content protection, which is being standardized for reception of high-defi...

### [Page 46: Questions And Answers](#)

Questions and Answers Questions Answers Below are the answers to some of the most common queries. For more information, go to [www.toshiba.co.uk](http://www.toshiba.co.uk) Why is there no sound or picture? Why don't the controls of the television work? Check the television is not in standby mode.

[Page 47](#) Questions Answers Below are the answers to some of the most common queries. For more information go to [www.toshiba.co.uk](http://www.toshiba.co.uk) Why when digital subtitles have been selected Why doesn't the Media Browser feature operate? are they not showing on screen? Make sure that USB is connected correctly.

### [Page 48: Toshiba One \(1\) Year Limited Warranty For Tv's \(The "Products"\)](#)

(1) year from the date of original purchase when brand new ("Warranty Period"). 3. If a failure or defect covered by the warranty arises and a valid claim is received by Toshiba within the Warranty Period, Toshiba shall at its option and to the extent permitted by law, repair or replace the machine or any components free of charge or refund the purchase price of the Product.

This manual is also suitable for:

[Digital series](#)