

Adjusting The Airflow Direction - Sanyo KS0911 Instruction Manual

Split system air conditioner

1	
2	
3	
4	
5	
6	
7	
8	
9	
10	
11	
12	
13	
14	
15	
Table Of Contents	
16	



-

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks






NOTE:

Power failure during timer operation

If power failure occurs, the time counted up to the power failure is not counted. After the power is applied, the timer newly starts.

Adjusting the Airflow

Indoor Unit

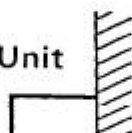

A. Horizontal

The horizontal airflow can be adjusted by moving the horizontal louvers left or right.

Table of Contents

[Previous Page](#)
[Next Page](#)

1
...
10
11
12
13
14
15
16

Quick Links:

[Contents](#)

[Electrical Requirements](#)

[Installation Location](#)

[Names of Parts](#)

[Remote Control Unit](#)

[Care and Cleaning](#)

[Casing and Grille](#)

[Troubleshooting](#)

Related Manuals for Sanyo KS0911

[Air Conditioner Sanyo KS0911 Instruction Manual](#)

Split system air conditioner (15 pages)

[Air Conditioner Sanyo KS0911 Instruction Manual](#)

Split system air conditioner (15 pages)

[Air Conditioner Sanyo KS0911 Instruction Manual](#)

Split system air conditioner (15 pages)

[Air Conditioner Sanyo KS0911 Instruction Manual](#)

Split system air conditioner (15 pages)

[Air Conditioner Sanyo KS0911 Instruction Manual](#)

Split system air conditioner (15 pages)

[Air Conditioner Sanyo KS2422 Service Manual](#)

Split system air conditioner (51 pages)

[Air Conditioner Sanyo KS1822 Service Manual](#)

Split system air conditioner (41 pages)

[Air Conditioner Sanyo 09KS51 Submittal Sheet](#)

Indoor/outdoor wall mount air conditioner (3 pages)

[Air Conditioner Sanyo KS1251 Instruction Manual](#)

Split system air conditioner (24 pages)

[Air Conditioner Sanyo C1271 Technical & Service Manual](#)

Dc inverter split system air conditioner (108 pages)

[Air Conditioner Sanyo KS0971 Technical & Service Manual](#)

Dc inverter split system air conditioner (81 pages)

[Air Conditioner Sanyo 09KLS71 Submittal Data](#)

Split system indoor/outdoor wall mounted low ambient air conditioner (2 pages)

[Air Conditioner Sanyo 09KS71 Submittal Data](#)

Split system indoor/outdoor wall mounted air conditioner (2 pages)

[Air Conditioner Sanyo 12KS71 Dimensional Data](#)

Sanyo air conditioner data sheet (1 page)

[Air Conditioner Sanyo 18KHS72 Specifications](#)

Wall mounted air conditioners & heat pumps 9,000-24,000 btu/h 16-20 seer (2 pages)

[Air Conditioner Sanyo KS1271 Instruction Manual](#)

Inverter-controlled split system air conditioner (50 pages)

Related Content for Sanyo KS0911

[SAP-FDRV96EH Adjusting The Airflow Direction](#)

Sanyo SAP-FDRV96EH

[SAP-K77GHAX Adjusting The Airflow Direction](#)

Sanyo SAP-K77GHAX

[SAP-K71GJA Adjusting The Airflow Direction](#)

Sanyo SAP-K71GJA

[SAP-K161GJA Adjusting The Airflow Direction](#)

Sanyo SAP-K161GJA

[KS2432 Adjusting The Airflow Direction](#)

Sanyo KS2432

[SAP-KMV91G-S Adjusting The Airflow Direction](#)

Sanyo SAP-KMV91G-S

[SAP-K91A Adjusting The Airflow Direction](#)

Sanyo SAP-K91A

[SAP-URV246EH Adjusting The Airflow Direction](#)

Sanyo SAP-URV246EH

This manual is also suitable for:

[Ks1822Ks1211wKs3622Ks2422Ks3012w](#)