

Runtime Error Logging Support; Network Stack - Asus Z9PE-D16-10G Series Manual

Z9pe-d16-10g series manual

 
1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202




•

[Table of Contents](#)

•

Bookmarks

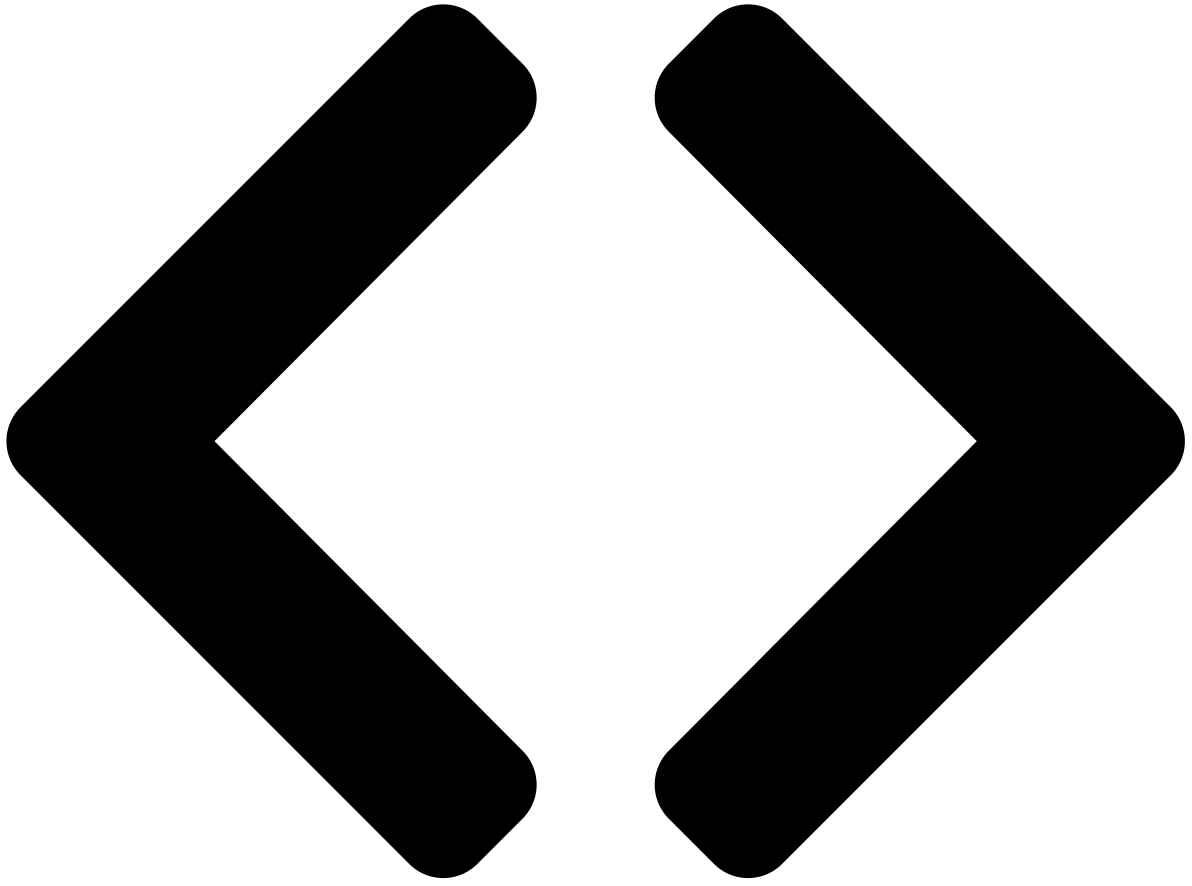

4.4.17

Runtime Error Logging Support

Runtime Error Logging Support [Disabled]

This item allows you to enable or disable Runtime Error Logging Support.


Configuration options: [Disabled] [Enabled]

The following item appears only when you set Runtime Error Logging Support to [Enabled].

PCI Error Logging Support [Disabled]

Allows you to enable or disable PCI Error Logging.

Configuration options: [Disabled] [Enabled].

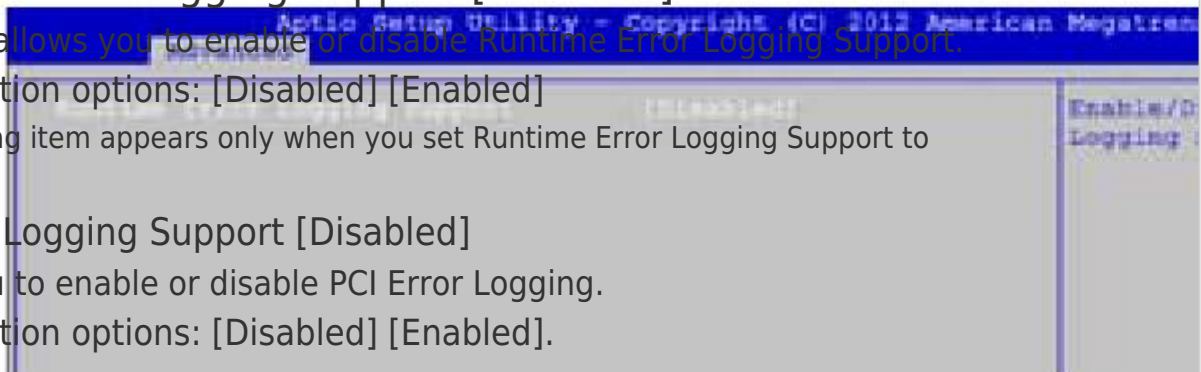

4.4.18

Network Stack

Network stack [Disable]

Enables or disables the network stack feature. Configuration options: [Disable] [Enable]

The following item appears only when Network stack is set to [Enabled].

Ipv4 PXE Support [Enabled]

Enables or disables the Ipv4 PXE Boot Support. If disabled, Ipv4 PXE boot option will not be

created. Configuration options: [Disabled] [Enabled].

Ipv6 PXE Support [Enabled]

Enables or disables the Ipv6 PXE Boot Support. If disabled, Ipv6 PXE boot option will not be

created. Configuration options: [Disabled] [Enabled].

IPSEC Certificate:

Support to Enables/Disables the IPSEC certificate for Ikev. Configuration options: [Disabled]

[Enabled].

IPv6 Delay Time:

Set seconds of delay before IPv6 PXE Boot. Default 0 seconds.

Z9PE-D16-10G Series

4-35

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1

...

102

103

104

105

Related Manuals for Asus Z9PE-D16-10G Series

[Software Asus Z9PE-D16-10G DUAL User Manual](#)

System web-based management (94 pages)

[Motherboard Asus Z9PH-D16 FDR User Manual](#)

Z9ph-d16 series (192 pages)

[Motherboard Asus Z9PE-D16 User Manual](#)

Z9pe-d16 series (194 pages)

[Motherboard Asus Z9PA-U8 User Manual](#)

Atx motherboard (188 pages)

[Motherboard Asus Z9PE-D8 WS Manual](#)

Dual intel socket 2011 (226 pages)

[Motherboard ASUS XC Cube box User Manual](#)

(226 pages)

[Motherboard Asus z9pe-d8 WS Quick Start Manual](#)

(14 pages)

[Motherboard Asus Z9PA-D8 User Manual](#)

Z9pa-d8 series 2 x lga 2011 socket (194 pages)

[Motherboard Asus Z9PR-D12 SERIES User Manual](#)

User guide (190 pages)

[Motherboard ASUS Z9PR-D16 Manual](#)

(194 pages)

[Motherboard ASUS Z97M-PLUS User Manual](#)

Uatx motherboard (144 pages)

[Motherboard Asus Z97-C Manual](#)

(48 pages)

[Motherboard Asus Z97-P Manual](#)

(22 pages)

[Motherboard Asus Z87-A User Manual](#)

Asus z87-a motherboard user guide (114 pages)

[Motherboard Asus Z97-PRO GAMER User Manual](#)

(102 pages)

[Motherboard Asus z97 Series Manual](#)

(28 pages)

Related Content for Asus Z9PE-D16-10G Series

[Z10PR-D16 Runtime Error Logging Support](#)

ASUS Z10PR-D16

[Z10PH-D16 Runtime Error Logging Support](#)

ASUS Z10PH-D16

[Z10PE-D8 WS Runtime Error Logging Support](#)

ASUS Z10PE-D8 WS

[P9D-V Runtime Error Logging Support](#)

Asus P9D-V

[Z10PA-D8 Series Runtime Error Logging Support](#)

Asus Z10PA-D8 Series

[P9D-M Series Runtime Error Logging Support](#)

ASUS P9D-M Series

[P9D-E/4L Runtime Error Logging Support](#)

ASUS P9D-E/4L

[P9D-I Runtime Error Logging Support](#)

Asus P9D-I

This manual is also suitable for:

[Z9pe-d16-10g/dualZ9pe-d16-10g/single](#)