



# Adding Or Viewing A Raid Configuration - Asus Z9PE-D16-10G Series Manual

Z9pe-d16-10g series manual



 
1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117

118  
119  
120  
121  
122  
123  
124  
125  
126  
127  
128  
129  
130  
131  
132  
133  
134  
135  
136  
137  
138  
139  
140  
141  
142  
143  
144  
145  
146  
147  
148  
149  
150  
151  
152  
153  
154  
155  
156  
157  
158  
159  
160  
161  
162  
163  
164  
165  
166  
167

168  
169  
170  
171  
172  
173  
174  
175  
176  
177  
178  
179  
180  
181  
182  
183  
184  
185  
186  
187  
188  
189  
190  
191  
192  
193  
194  
195  
196  
197  
198  
199  
200  
201  
202





•

[Table of Contents](#)

•

## Bookmarks





## 5.2.2

### Adding or viewing a RAID configuration

You can add a new RAID configuration or view an existing configuration using the View/Add

Configuration command.

#### Adding a new RAID configuration

To add a new RAID configuration:

From the Management Menu, select Configure > View/Add Configuration, and then

1.

press <Enter>.

## Configure

Use Cursor Keys To Navigate Between Items And Press Enter To Select An Option

The ARRAY SELECTION MENU displays the available drives connected to the SATA 2.

ports. Select the drive(s) you want to include in the RAID set, then press <Space>. When selected, the drive indicator changes from READY to ONLIN A[X]-[Y], where X is the array number, and Y is the drive number.

## Configure

SPACE-Sel,ENTER-EndArray,F10-Configure,F2-Drive Info,F3-Virtual Drives,F4-HSP

The information of the selected hard disk drive displays at the bottom of the screen.

Follow step 3 to 12 of section 6.2.1 Creating a RAID set: Using Easy Configuration

3.

to add a new RAID set.

5-12

Configuration Utility Ver C.05 Sep 17,2010

## Configuration Menu

View/Add Configuration

ManualsLib.com

View/Add Configuration - ARRAY SELECTION MENU

0  
1  
2  
3

PORT #



## Chapter 5: RAID configuration

[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)

1

...

129

130

131

132



## Related Manuals for Asus Z9PE-D16-10G Series

[Software Asus Z9PE-D16-10G DUAL User Manual](#)

System web-based management (94 pages)

[Motherboard Asus Z9PH-D16 FDR User Manual](#)

Z9ph-d16 series (192 pages)

[Motherboard Asus Z9PE-D16 User Manual](#)

Z9pe-d16 series (194 pages)

[Motherboard Asus Z9PA-U8 User Manual](#)

Atx motherboard (188 pages)

[Motherboard Asus Z9PE-D8 WS Manual](#)

Dual intel socket 2011 (226 pages)

[Motherboard ASUS XC Cube box User Manual](#)

(226 pages)

[Motherboard Asus z9pe-d8 WS Quick Start Manual](#)

(14 pages)

[Motherboard Asus Z9PA-D8 User Manual](#)

Z9pa-d8 series 2 x lga 2011 socket (194 pages)

[Motherboard Asus Z9PR-D12 SERIES User Manual](#)

User guide (190 pages)

[Motherboard ASUS Z9PR-D16 Manual](#)

(194 pages)

[Motherboard ASUS Z97M-PLUS User Manual](#)

Uatx motherboard (144 pages)

[Motherboard Asus Z97-C Manual](#)

(48 pages)

[Motherboard Asus Z97-P Manual](#)

(22 pages)

[Motherboard Asus Z87-A User Manual](#)

Asus z87-a motherboard user guide (114 pages)

[Motherboard Asus Z97-PRO GAMER User Manual](#)

(102 pages)

[Motherboard Asus z97 Series Manual](#)

(28 pages)

## Related Content for Asus Z9PE-D16-10G Series

[XC Cube box Adding Or Viewing A Raid Configuration](#)

ASUS XC Cube box

[P5BV-M Adding Or Viewing A Raid Configuration](#)

ASUS P5BV-M

[Z9PR-D16 Adding Or Viewing A Raid Configuration](#)

ASUS Z9PR-D16

[DSAN-DX Adding Or Viewing A Raid Configuration](#)

ASUS DSAN-DX

[P9D-I Adding Or Viewing A Raid Configuration](#)

Asus P9D-I

[P5M2-M C Adding Or Viewing A Raid Configuration](#)

Asus P5M2-M C

[P5BP-E/4L - Motherboard - ATX Adding Or Viewing A Raid Configuration](#)

Asus P5BP-E/4L - Motherboard - ATX

[Z8NR-D12 - Motherboard - SSI EEB 3.61 Adding Or Viewing A Raid Configuration](#)

Asus Z8NR-D12 - Motherboard - SSI EEB 3.61

This manual is also suitable for:

[Z9pe-d16-10g/dualZ9pe-d16-10g/single](#)